

## CUSTOMIZE PARAMETERS

### NOTICE:

- When the customer requests a change in a function, first make sure that the function can be customized.
- Make a note of the current settings before customizing.
- When troubleshooting a function, first make sure that the function is set to the default setting.

#### 1. Combination meter

Display (Item)	Default	Function	Setting
SEAT BELT WARN	D/P ON	Seat belt warning buzzer ON / OFF setting	D/P ON: Driver and passenger buzzer ON D ON: Driver buzzer ON P ON: Passenger buzzer ON D/P OFF: Driver and passenger buzzer OFF

#### 2. Air conditioning system

Display (Item)	Default	Contents	Setting
SET TEMP SHIFT (Set Temperature Shift)	NORMAL	To control with shifted temperature against display temperature	+2 C / +1 C / NORMAL / -1 C / -2 C
AIR INLET MODE (Air Inlet Mode)	AUTO	In case of turning A/C ON when you desire to make compartment cool down quickly, this is function to change mode automatically to RECIRCULATION mode	MANUAL / AUTO
COMPRESSOR MODE (Compressor Mode)	AUTO	Function to turn A/C ON automatically by pressing AUTO button when blower is ON and A/C is OFF	MANUAL / AUTO
COMPRS / DEF OPER (Compressor / Air Inlet DEF Operation)	LINK	Function to turn A/C ON automatically linked with FRONT DEF button when A/C is OFF	NORMAL / LINK
EVAP CTRL (Evaporator Control)	AUTO	Function to set evaporator control to AUTOMATIC position (AUTO) to save power, or to coldest position (MANUAL) to dehumidify air and to prevent windows from fogging up	MANUAL / AUTO
FOOT / DEF MODE (Foot / DEF auto mode)	ON	Function to turn airflow from FOOT / DEF ON automatically when AUTO MODE is ON	OFF / ON
AUTO BLOW UP (Foot / DEF automatic blower up function)	ON	Function to change blower level automatically when defroster is ON	OFF / ON

#### 3. Power Door Lock Control System

Display (Item)	Default	Function	Setting
UNLK/KEY TWICE	ON	Unlocks only driver side door when driver side door key cylinder turned to unlock once, and unlocks all doors when turned to unlock twice. For OFF setting, turning it once unlocks all doors.	ON / OFF

#### 4. Wireless Door Lock Control System

Display (Item)	Default	Contents	Setting
HAZARD ANS BACK	ON	When LOCK switch on transmitter pressed, all hazard warning lights illuminate once. When UNLOCK switch pressed, all hazard warning lights illuminate twice	ON / OFF

Display (Item)	Default	Contents	Setting
WIRLS BUZZ OPER	ON	Function that makes wireless buzzer sound for answer-back when transmitter LOCK / UNLOCK switch pressed	ON / OFF
OPEN DOOR WARN	ON	If door is not completely closed and transmitter LOCK switch is pressed, this function sounds a buzzer for 10 seconds	ON / OFF
WIRELESS OPER	ON	ON / OFF of wireless door lock function	ON / OFF
ALARM FUNCTION	ON	Operates security alarm when PANIC switch on transmitter continuously pressed for 1 second	ON / OFF
UNLOCK / 2 OPER	ON	Function that unlocks driver side door when unlock switch on transmitter is pressed once, and unlocks all doors when pressed twice. If setting is OFF, pressing unlock switch once makes all doors unlock.	ON / OFF
AUTO LOCK DELAY	30s	This function controls amount of time from unlocking doors to automatic re-locking function	30s / 60s

## 5. Lighting System

Display (Item)	Default	Contents	Setting
LIGHTING TIME (Lighting Time)	15 seconds	Changes illumination duration after door closure. (It will quickly fade out in case of turning ignition switch ON.)	7.5/15/30 (seconds)
I/L ON /ACC OFF (Room light illuminates when ignition switch turned OFF)	ON	Illuminates light when ignition switch turned to ACC. (Room light illuminated when interior light switch in DOOR position)	ON / OFF
I/L ON / UNLOCK (Room light illuminates when door key unlocked.)	ON	Function to light up room light when unlocking with door key cylinder. (Room light illuminated when interior light switch in DOOR position)	ON / OFF
LIGHT CONTROL	ON	Function to light up foot light when ignition switch is ON and shift position is not P.	ON / OFF