



Wire and Wire , Ground Points in Engine Compartment <RHD 2AZ-FE, 1AZ-FE>

