


Position of Parts in Engine Compartment <LHD 2AD-FTV Before Dec. 2008 Production>

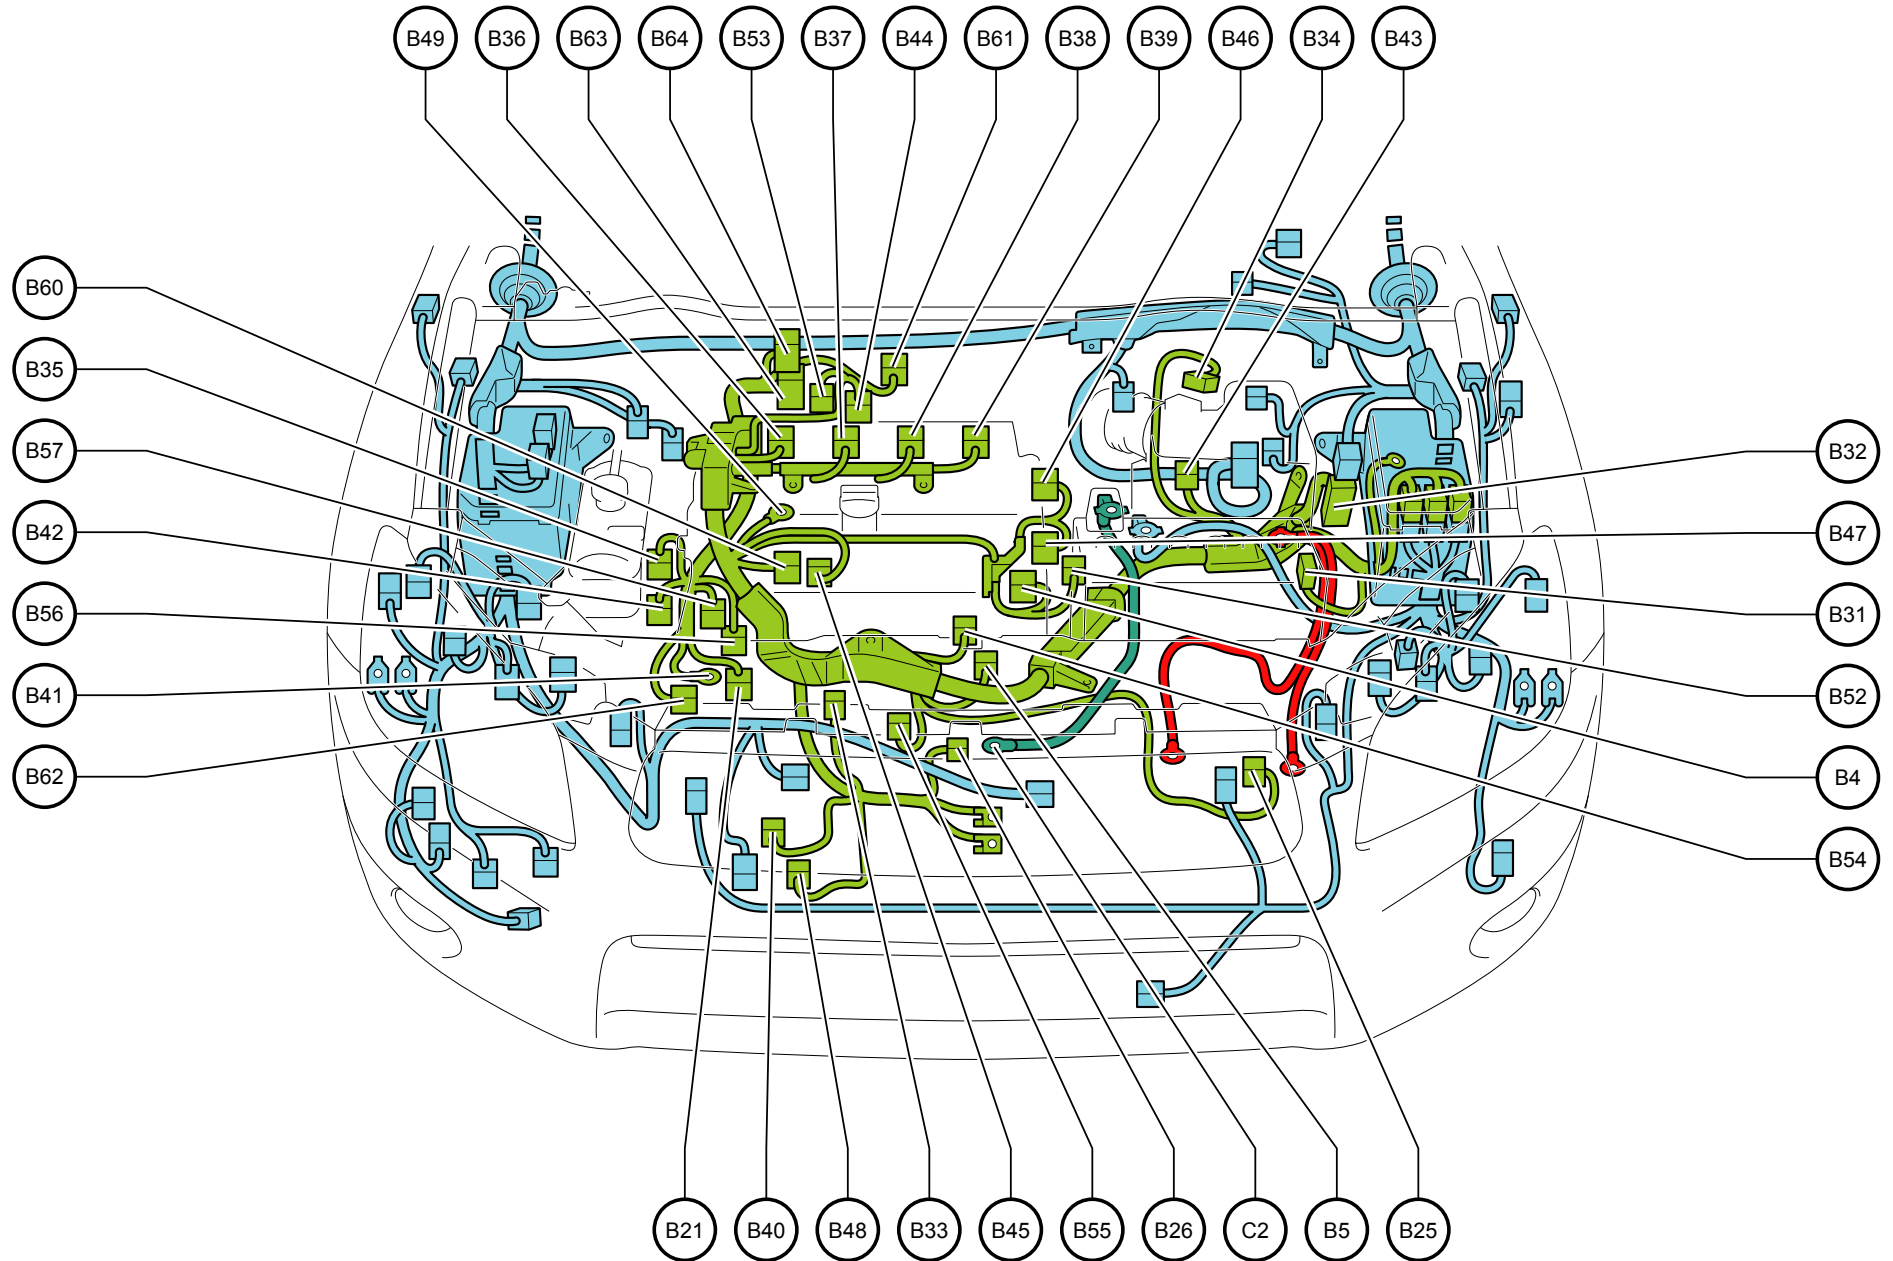

- B 4 Water Temp. Sensor
- B 5 Engine Oil Pressure SW
- B 21 Alternator
- B 25 Back-Up Light SW
- B 26 Starter
- B 31 Battery Current Sensor
- B 32 Engine ECU
- B 33 Throttle Body Assembly
- B 34 Air Flow Meter
- B 35 Camshaft Position Sensor
- B 36 Fuel Injector (No.1)
- B 37 Fuel Injector (No.2)
- B 38 Fuel Injector (No.3)
- B 39 Fuel Injector (No.4)
- B 40 A/C Compressor
- B 41 Alternator
- B 42 Crankshaft Position Sensor
- B 43 Glow Plug Relay
- B 44 VRV (EGR)
- B 45 Turbo Pressure Sensor
- B 46 Suction Control Valve
- B 47 Fuel Temp. Sensor
- B 48 Engine Oil Level Sensor
- B 49 Glow Plug
- B 52 Exhaust Fuel Addition Injector Assembly
- B 53 VSV (EGR)
- B 54 EGR Valve Position Sensor
- B 55 Throttle Body Assembly
- B 56 Exhaust Gas Temperature Sensor (Front)
- B 57 Exhaust Gas Temperature Sensor (Rear)
- B 60 Fuel Pressure Sensor
- B 61 Differential Pressure Sensor
- B 62 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- B 63 Injector Driver (EDU)
- B 64 Injector Driver (EDU)

- C 2 Starter

Position of Parts in Engine Compartment <LHD 2AD-FTV Before Dec. 2008 Production>

