



- B 1 Air Flow Meter
  - B 4 Water Temp. Sensor
  - B 5 Engine Oil Pressure SW
  - B 21 Alternator
  - B 25 Back-Up Light SW
  - B 26 Starter
  - B 28 Park/Neutral Position SW
  - B 31 Battery Current Sensor
  - B 32 Engine ECU
  - B 35 Camshaft Position Sensor
  - B 40 A/C Compressor
  - B 42 Crankshaft Position Sensor
  - B 43 Glow Plug Relay
  - B 44 VRV (EGR)
  - B 45 Turbo Pressure Sensor
  - B 46 Suction Control Valve
  - B 47 Fuel Temp. Sensor
  - B 48 Engine Oil Level Sensor
  - B 49 Glow Plug
  - B 52 Exhaust Fuel Addition Injector Assembly
  - B 53 VSV (EGR)
  - B 56 Exhaust Gas Temperature Sensor (Front)
  - B 57 Exhaust Gas Temperature Sensor (Rear)
  - B 60 Fuel Pressure Sensor
  - B 61 Differential Pressure Sensor
  - B 62 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
  - B 97 Fuel Injector (No.1)
  - B 98 Fuel Injector (No.2)
  - B 99 Fuel Injector (No.3)
  - B 100 Fuel Injector (No.4)
  - B 101 Alternator
  - B 102 Injector Driver (EDU)
  - B 103 Injector Driver (EDU)
  - B 104 Injector Driver (EDU)
  - B 105 Injector Driver (EDU)
  - B 107 Throttle Body Assembly
  - B 108 Pressure Discharge Valve
  - B 128 Transmission Control ECU Assembly
- 
- C 2 Starter
- 
- z 1 EGR Valve Position Sensor



Position of Parts in Engine Compartment <LHD 2AD-FHV, 2AD-FTV From Dec. 2008 Production>

