


Position of Parts in Engine Compartment <RHD 2AD-FHV, 2AD-FTV From Dec. 2008 Production>

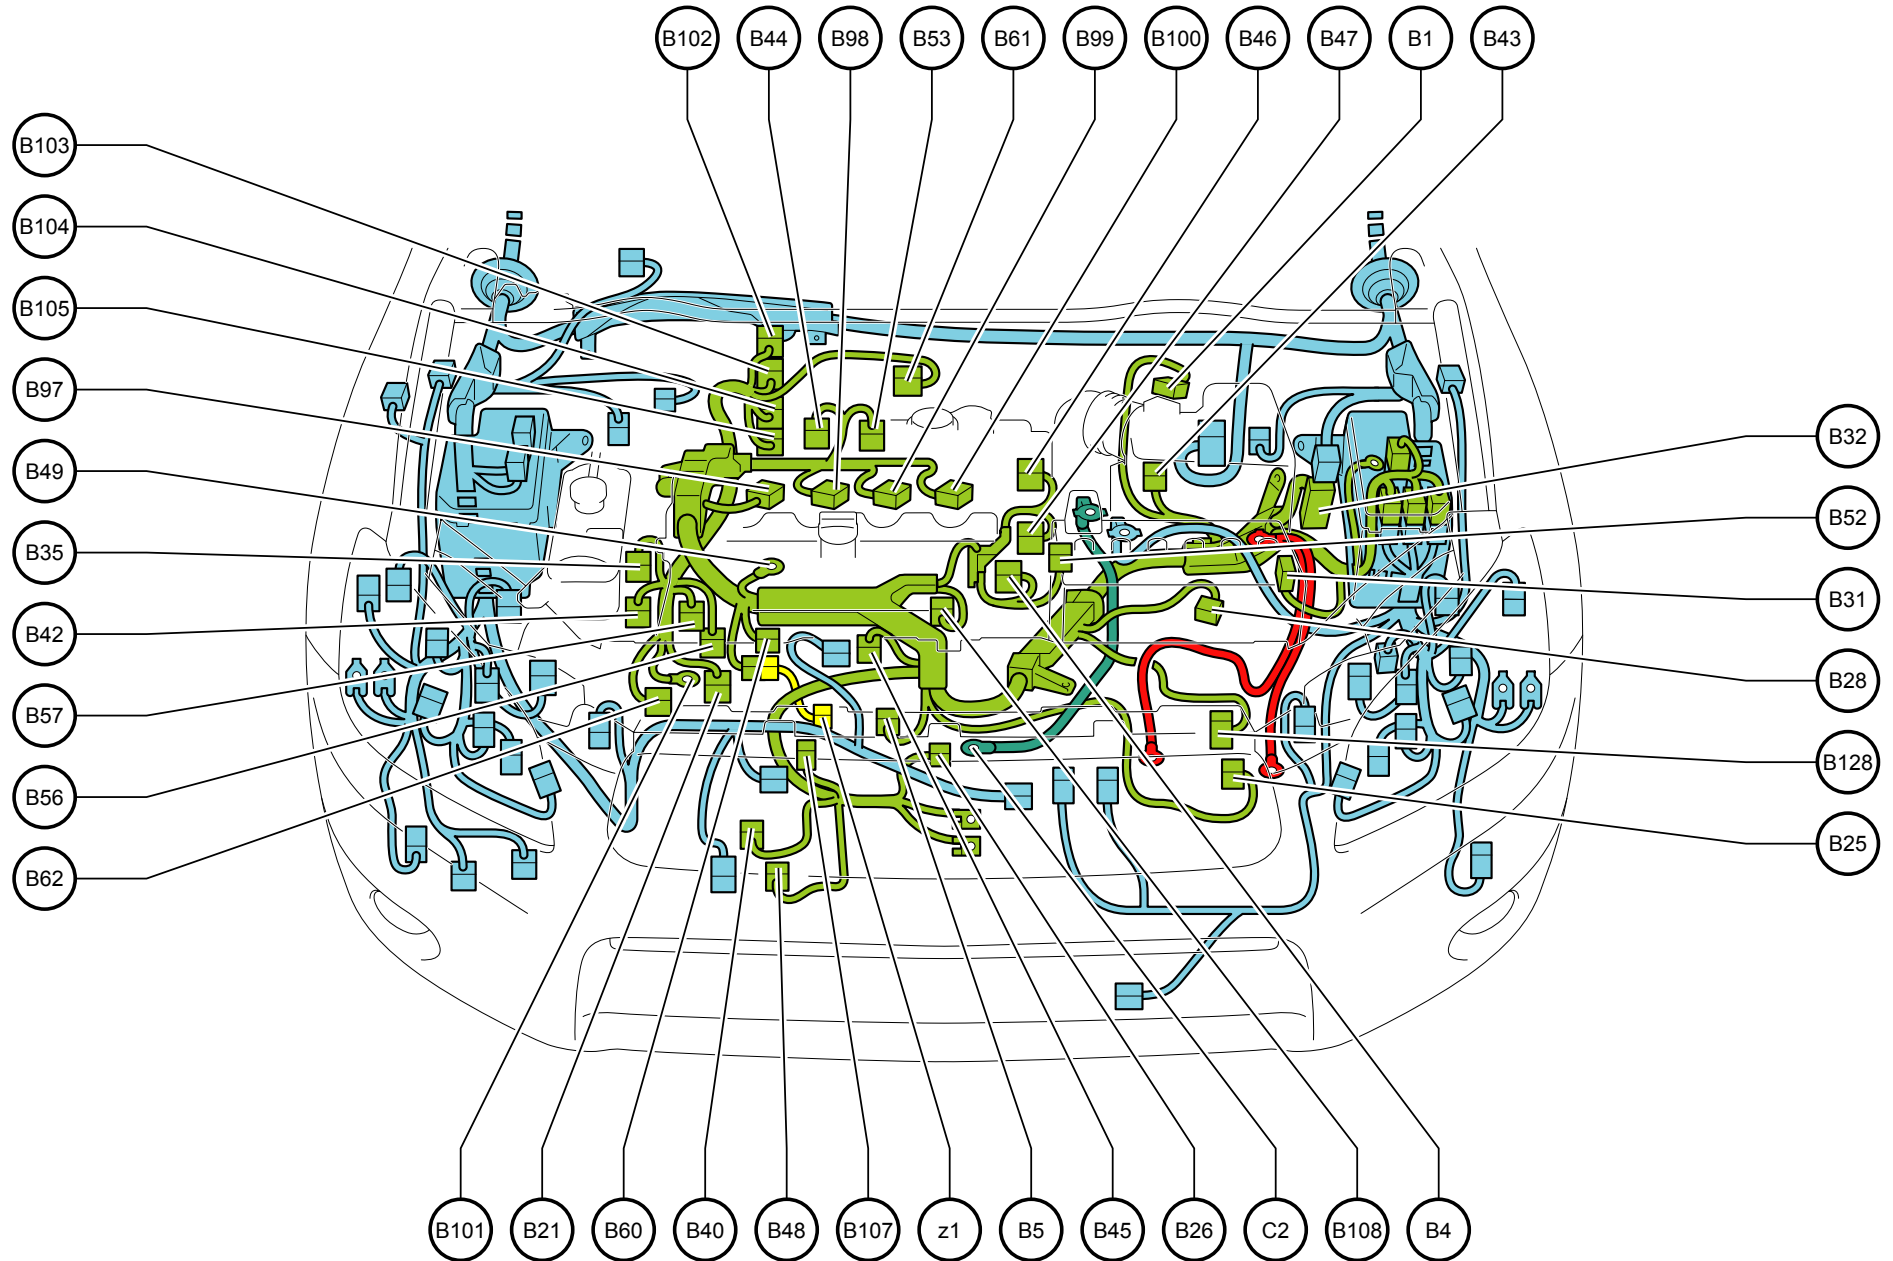

- B 1 Air Flow Meter
 - B 4 Water Temp. Sensor
 - B 5 Engine Oil Pressure SW
 - B 21 Alternator
 - B 25 Back-Up Light SW
 - B 26 Starter
 - B 28 Park/Neutral Position SW
 - B 31 Battery Current Sensor
 - B 32 Engine ECU
 - B 35 Camshaft Position Sensor
 - B 40 A/C Compressor
 - B 42 Crankshaft Position Sensor
 - B 43 Glow Plug Relay
 - B 44 VRV (EGR)
 - B 45 Turbo Pressure Sensor
 - B 46 Suction Control Valve
 - B 47 Fuel Temp. Sensor
 - B 48 Engine Oil Level Sensor
 - B 49 Glow Plug
 - B 52 Exhaust Fuel Addition Injector Assembly
 - B 53 VSV (EGR)
 - B 56 Exhaust Gas Temperature Sensor (Front)
 - B 57 Exhaust Gas Temperature Sensor (Rear)
 - B 60 Fuel Pressure Sensor
 - B 61 Differential Pressure Sensor
 - B 62 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
 - B 97 Fuel Injector (No.1)
 - B 98 Fuel Injector (No.2)
 - B 99 Fuel Injector (No.3)
 - B 100 Fuel Injector (No.4)
 - B 101 Alternator
 - B 102 Injector Driver (EDU)
 - B 103 Injector Driver (EDU)
 - B 104 Injector Driver (EDU)
 - B 105 Injector Driver (EDU)
 - B 107 Throttle Body Assembly
 - B 108 Pressure Discharge Valve
 - B 128 Transmission Control ECU Assembly
-
- C 2 Starter
-
- z 1 EGR Valve Position Sensor

Position of Parts in Engine Compartment <RHD 2AD-FHV, 2AD-FTV From Dec. 2008 Production>

