


Position of Parts in Engine Compartment <RHD 2GR-FE>

\* 1: Before Aug. 2008 Production  
 \* 2: From Aug. 2008 Production

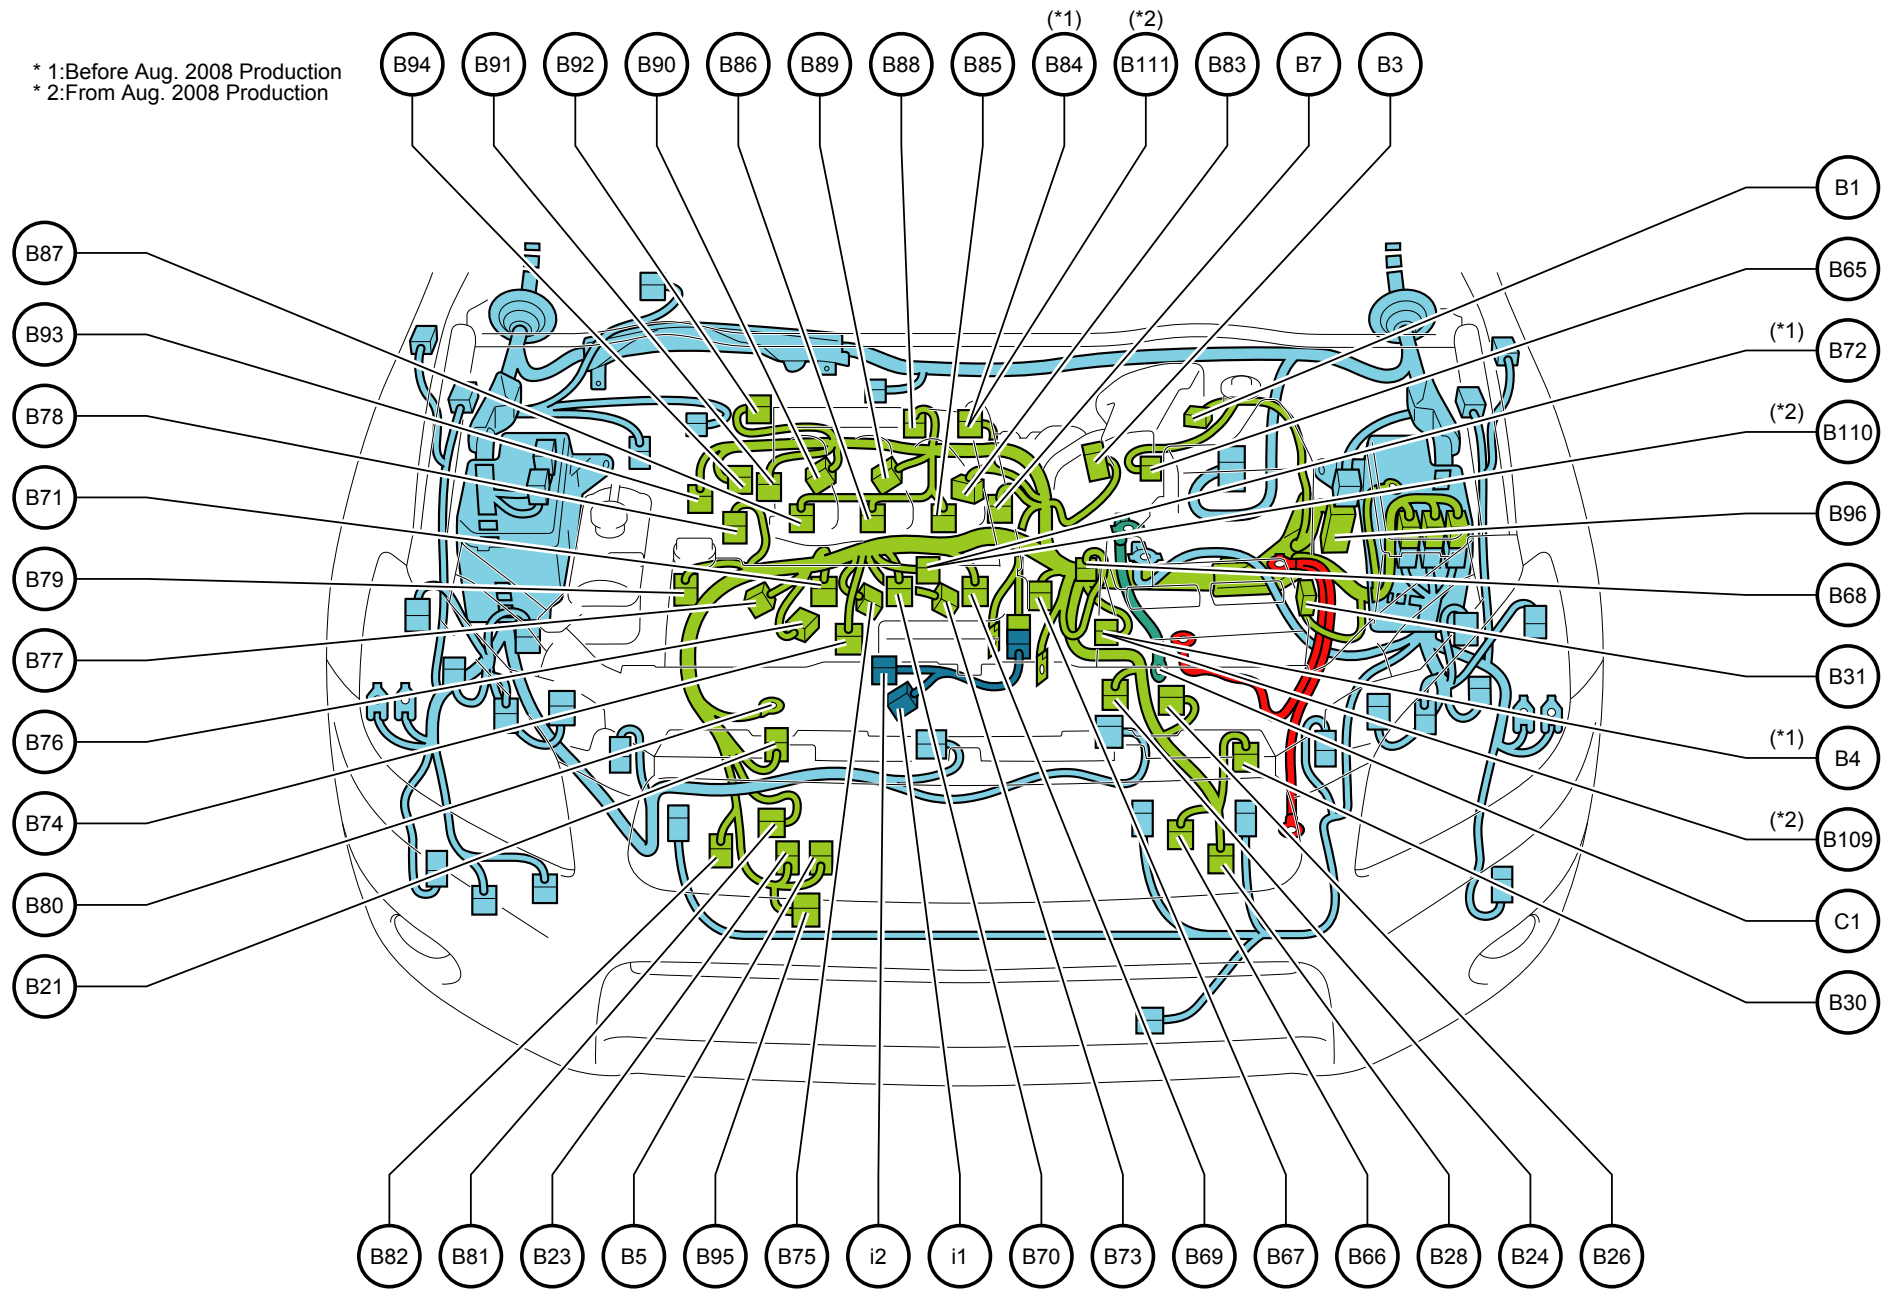


- B 1 Air Flow Meter
- B 3 Throttle Body Assembly
- B 4 Water Temp. Sensor
- B 5 Engine Oil Pressure SW
- B 7 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- B 21 Alternator
- B 23 A/C Compressor
- B 24 Transmission Revolution Sensor (Counter Gear)
- B 26 Starter
- B 28 Park/Neutral Position SW
- B 30 Transmission Revolution Sensor (Turbine)
- B 31 Battery Current Sensor
- B 65 VSV (Air Intake Control)
- B 66 ECT Solenoid
- B 67 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- B 68 VSV (Purge)
- B 69 Fuel Injector (No.6)
- B 70 Fuel Injector (No.4)
- B 71 Fuel Injector (No.2)
- B 72 Noise Filter (Ignition LH)
- B 73 Ignition Coil (No.6)
- B 74 VVT Sensor (Bank 2 Exhaust Side)
- B 75 Ignition Coil (No.4)
- B 76 Ignition Coil (No.2)
- B 77 Camshaft Timing Oil Control Valve (LH Exhaust Side)
- B 78 Camshaft Timing Oil Control Valve (LH Intake Side)
- B 79 VVT Sensor (Bank 2 Intake Side)
- B 80 Alternator
- B 81 Crankshaft Position Sensor
- B 82 A/C Compressor
- B 83 Ignition Coil (No.5)
- B 84 Noise Filter (Ignition RH)
- B 85 Fuel Injector (No.5)
- B 86 Fuel Injector (No.3)
- B 87 Fuel Injector (No.1)
- B 88 VVT Sensor (Bank 1 Exhaust Side)
- B 89 Ignition Coil (No.3)
- B 90 Ignition Coil (No.1)
- B 91 Camshaft Timing Oil Control Valve (RH Exhaust Side)
- B 92 VSV (ACIS)
- B 93 VVT Sensor (Bank 1 Intake Side)
- B 94 Camshaft Timing Oil Control Valve (RH Intake Side)
- B 95 Heated Oxygen Sensor (Bank 2 Sensor 2)
- B 96 Engine ECU
- B 109 Water Temp. Sensor
- B 110 Noise Filter (Ignition LH)
- B 111 Noise Filter (Ignition RH)

C 1 Starter

- i 1 Knock Control Sensor (Bank 2)
- i 2 Knock Control Sensor (Bank 1)

Position of Parts in Engine Compartment <RHD 2GR-FE>

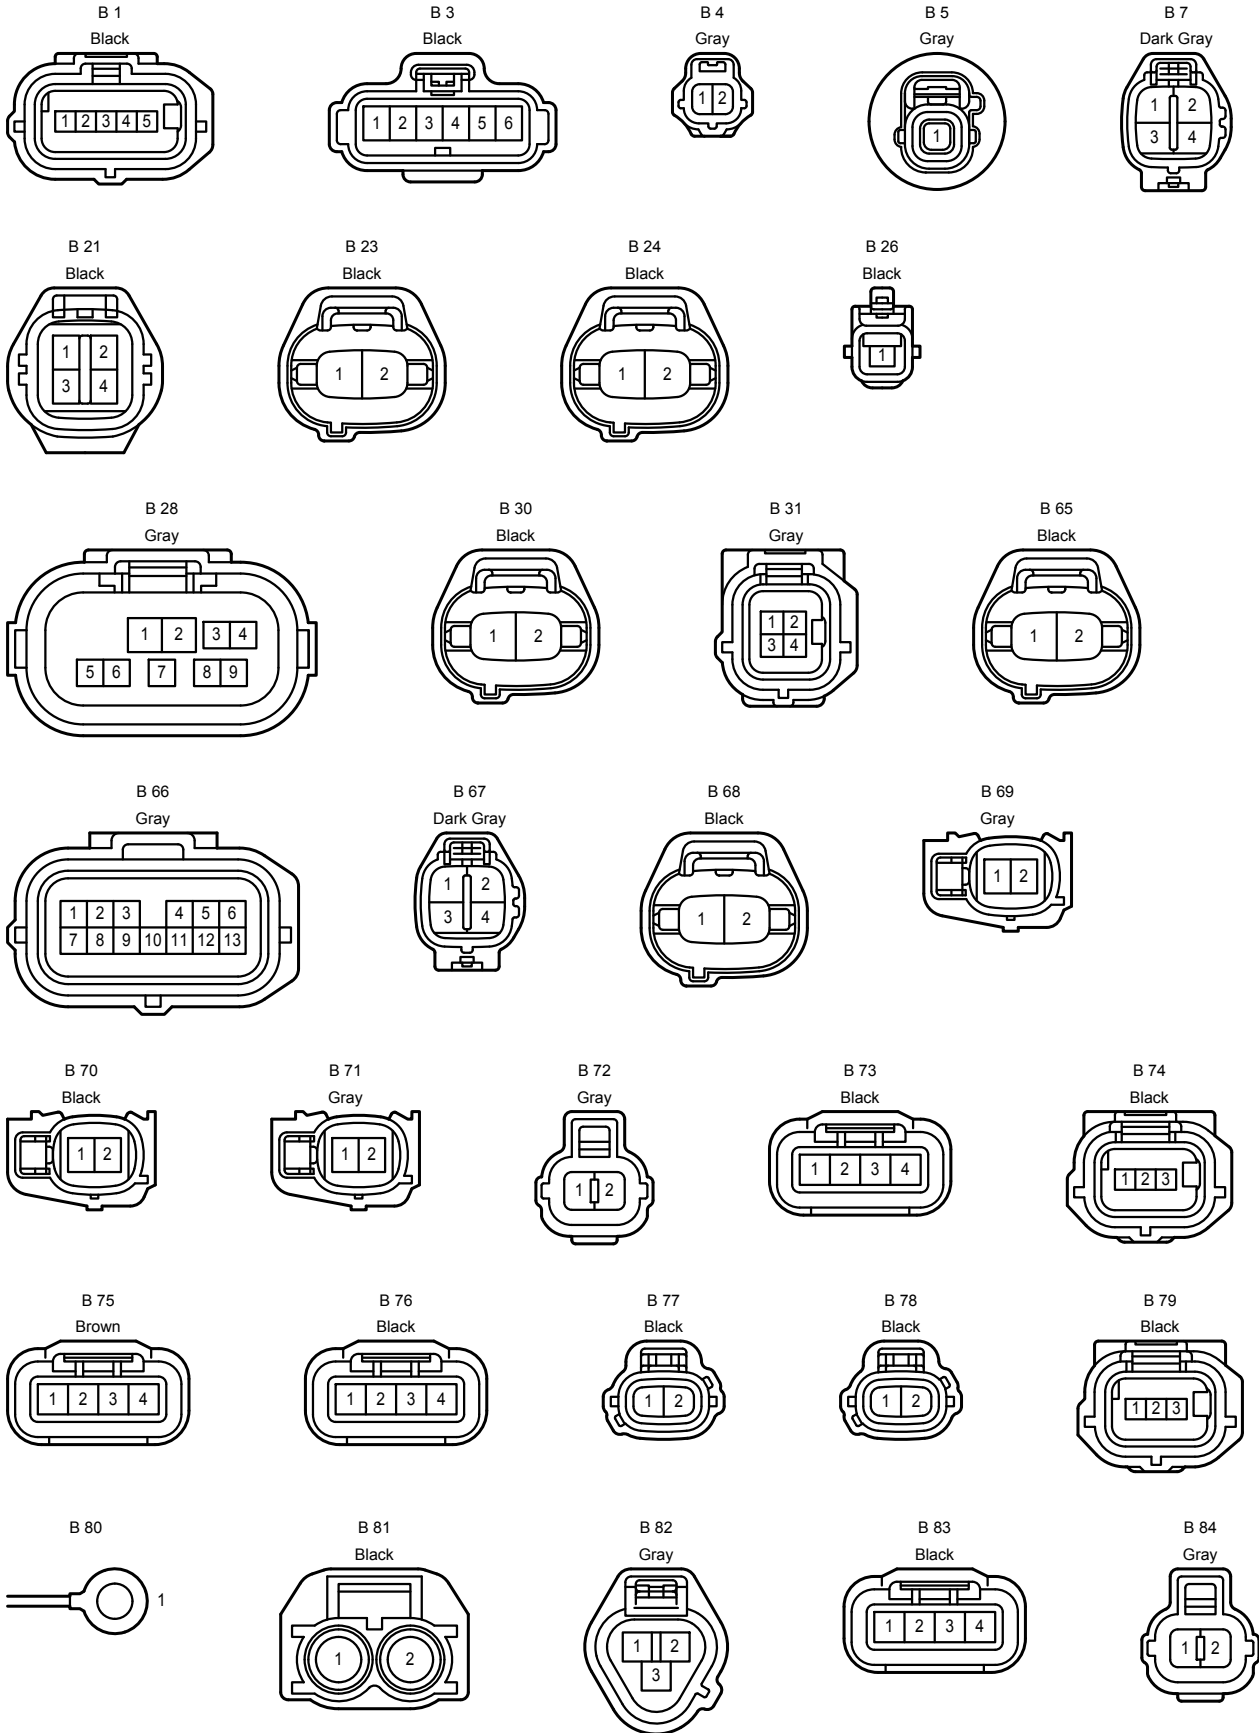

Position of Parts in Engine Compartment <RHD 2GR-FE>

