


Position of Parts in Engine Compartment <LHD 3ZR-FAE>

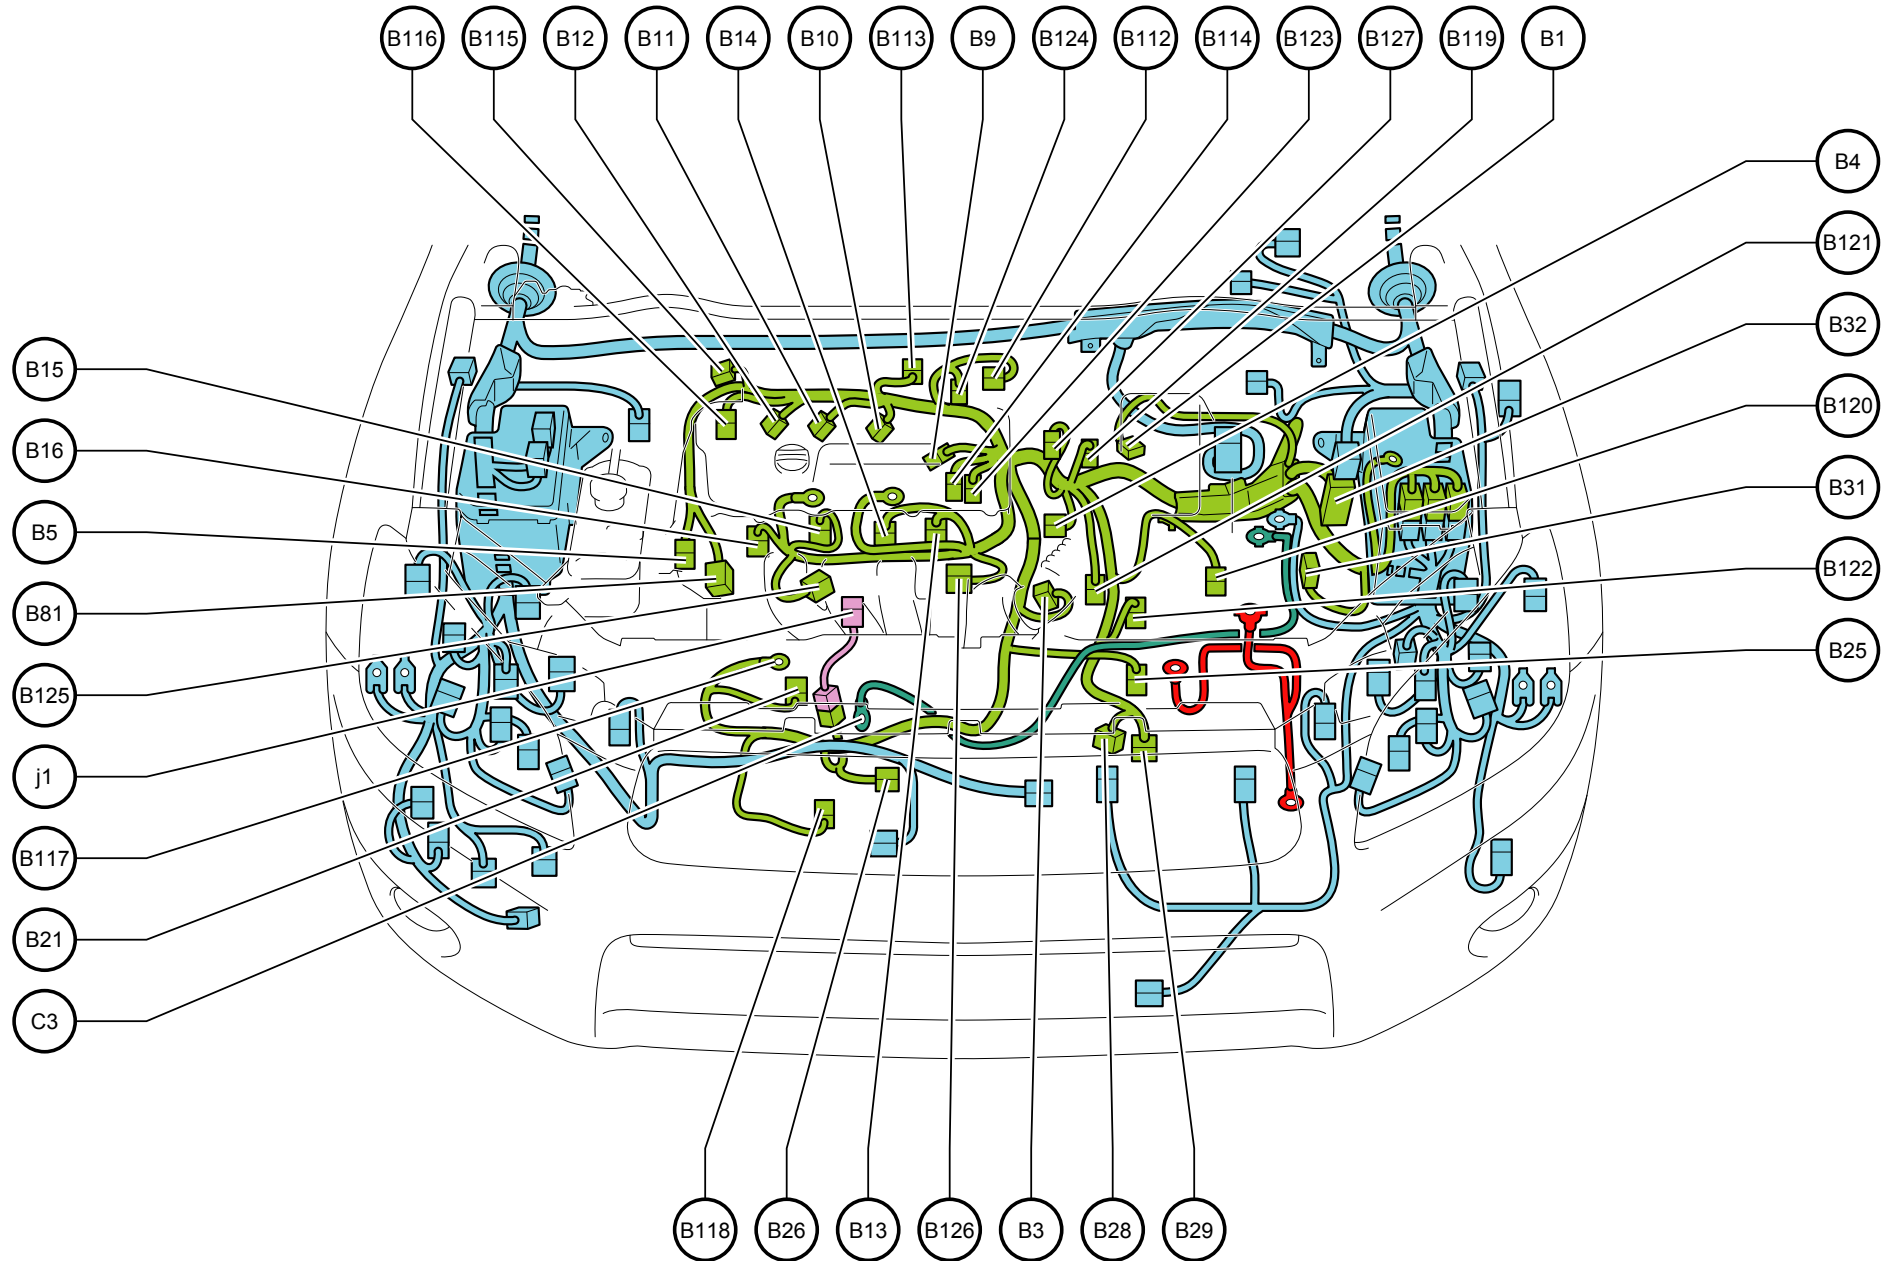

- B 1 Air Flow Meter
- B 3 Throttle Body Assembly
- B 4 Water Temp. Sensor
- B 5 Engine Oil Pressure SW
- B 9 Ignition Coil (No.4)
- B 10 Ignition Coil (No.3)
- B 11 Ignition Coil (No.2)
- B 12 Ignition Coil (No.1)
- B 13 Fuel Injector (No.4)
- B 14 Fuel Injector (No.3)
- B 15 Fuel Injector (No.2)
- B 16 Fuel Injector (No.1)
- B 21 Alternator
- B 25 Back-Up Light SW
- B 26 Starter
- B 28 Park/Neutral Position SW
- B 29 ECT Solenoid
- B 31 Battery Current Sensor
- B 32 Engine ECU
- B 81 Crankshaft Position Sensor
- B 112 VSV (Purge)
- B 113 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- B 114 Noise Filter (Ignition)
- B 115 Camshaft Timing Oil Control Valve (Exhaust Side)
- B 116 Camshaft Timing Oil Control Valve (Intake Side)
- B 117 Alternator
- B 118 A/C Compressor
- B 119 Transmission Revolution Sensor (Secondary)
- B 120 Oil Pressure Sensor
- B 121 Transmission Revolution Sensor (Turbine)
- B 122 Transmission Revolution Sensor (Primary)
- B 123 VVT Sensor (Intake Side)
- B 124 VVT Sensor (Exhaust Side)
- B 125 VSV (ACIS)
- B 126 E.F.I. Vacuum Sensor Assembly
- B 127 Valve Lift Control Driver

- C 3 Starter

- j 1 Knock Control Sensor (Bank 1)

Position of Parts in Engine Compartment <LHD 3ZR-FAE>

