


Position of Parts in Engine Compartment <RHD 3ZR-FAE>

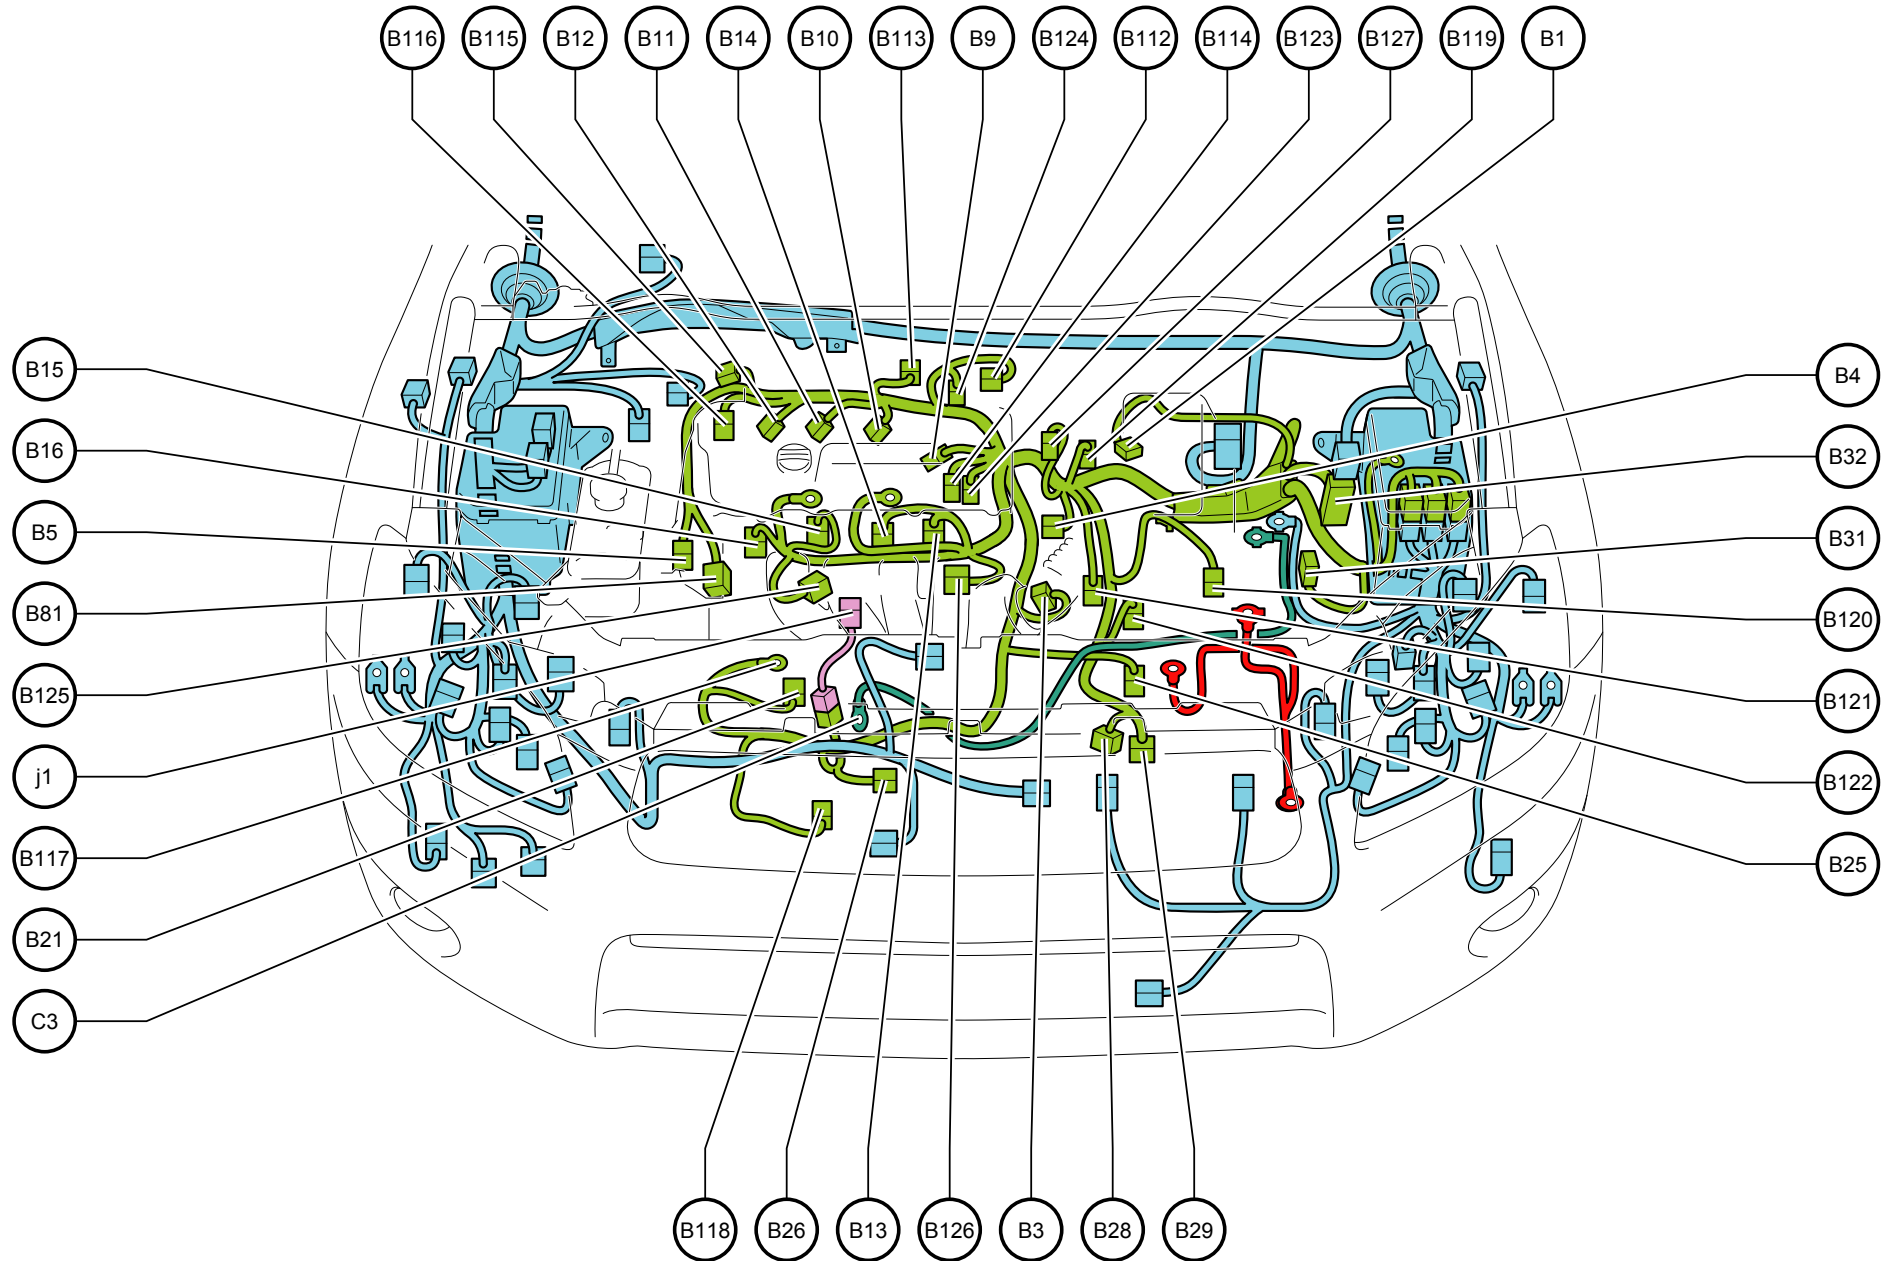

- B 1 Air Flow Meter
 - B 3 Throttle Body Assembly
 - B 4 Water Temp. Sensor
 - B 5 Engine Oil Pressure SW
 - B 9 Ignition Coil (No.4)
 - B 10 Ignition Coil (No.3)
 - B 11 Ignition Coil (No.2)
 - B 12 Ignition Coil (No.1)
 - B 13 Fuel Injector (No.4)
 - B 14 Fuel Injector (No.3)
 - B 15 Fuel Injector (No.2)
 - B 16 Fuel Injector (No.1)
 - B 21 Alternator
 - B 25 Back-Up Light SW
 - B 26 Starter
 - B 28 Park/Neutral Position SW
 - B 29 ECT Solenoid
 - B 31 Battery Current Sensor
 - B 32 Engine ECU
 - B 81 Crankshaft Position Sensor
 - B 112 VSV (Purge)
 - B 113 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
 - B 114 Noise Filter (Ignition)
 - B 115 Camshaft Timing Oil Control Valve (Exhaust Side)
 - B 116 Camshaft Timing Oil Control Valve (Intake Side)
 - B 117 Alternator
 - B 118 A/C Compressor
 - B 119 Transmission Revolution Sensor (Secondary)
 - B 120 Oil Pressure Sensor
 - B 121 Transmission Revolution Sensor (Turbine)
 - B 122 Transmission Revolution Sensor (Primary)
 - B 123 VVT Sensor (Intake Side)
 - B 124 VVT Sensor (Exhaust Side)
 - B 125 VSV (ACIS)
 - B 126 E.F.I. Vacuum Sensor Assembly
 - B 127 Valve Lift Control Driver
-
- C 3 Starter
-
- j 1 Knock Control Sensor (Bank 1)

Position of Parts in Engine Compartment <RHD 3ZR-FAE>

