

- G 1 Speaker (Front Door RH)
- G 4 Outer Rear View Mirror (RH)
- G 5 Door Lock Assembly (Front RH)
- G 7 Tweeter (Front RH)
- G 8 Power Window SW (Driver's Side)
- G 9 Power Window Regulator Motor (Front RH)
- G 10 Outer Rear View Mirror (RH)
- G 11 Electrical Key Oscillator (Front Door RH)
- G 12 Door Outside Handle (Front RH)
- H 1 Speaker (Front Door LH)
- H 3 Outer Rear View Mirror (LH)
- H 5 Door Lock Assembly (Front LH)
- H 6 Tweeter (Front LH)
- H 7 Power Window Regulator Motor (Front LH)
- H 8 Power Window SW (Front Passenger's Side)
- H 8 Power Window SW (Front Passenger's Side)
- H 11 Outer Rear View Mirror (LH)
- H 12 Electrical Key Oscillator (Front Door LH)
- H 13 Door Outside Handle (Front LH)
- I 1 Power Window SW (Rear RH)
- I 2 Speaker (Rear RH)
- I 3 Power Window Regulator Motor (Rear RH)
- I 4 Door Lock Assembly (Rear RH)
- J 1 Power Window SW (Rear LH)
- J 2 Speaker (Rear LH)
- J 3 Power Window Regulator Motor (Rear LH)
- J 4 Door Lock Assembly (Rear LH)







