


Position of Parts in Instrument Panel <LHD>

- \* 3:w/ Navigation System (Map Type)
- \* 4:w/o Navigation System (Map Type)
- \* 5:Automatic A/C
- \* 6:Manual A/C











 





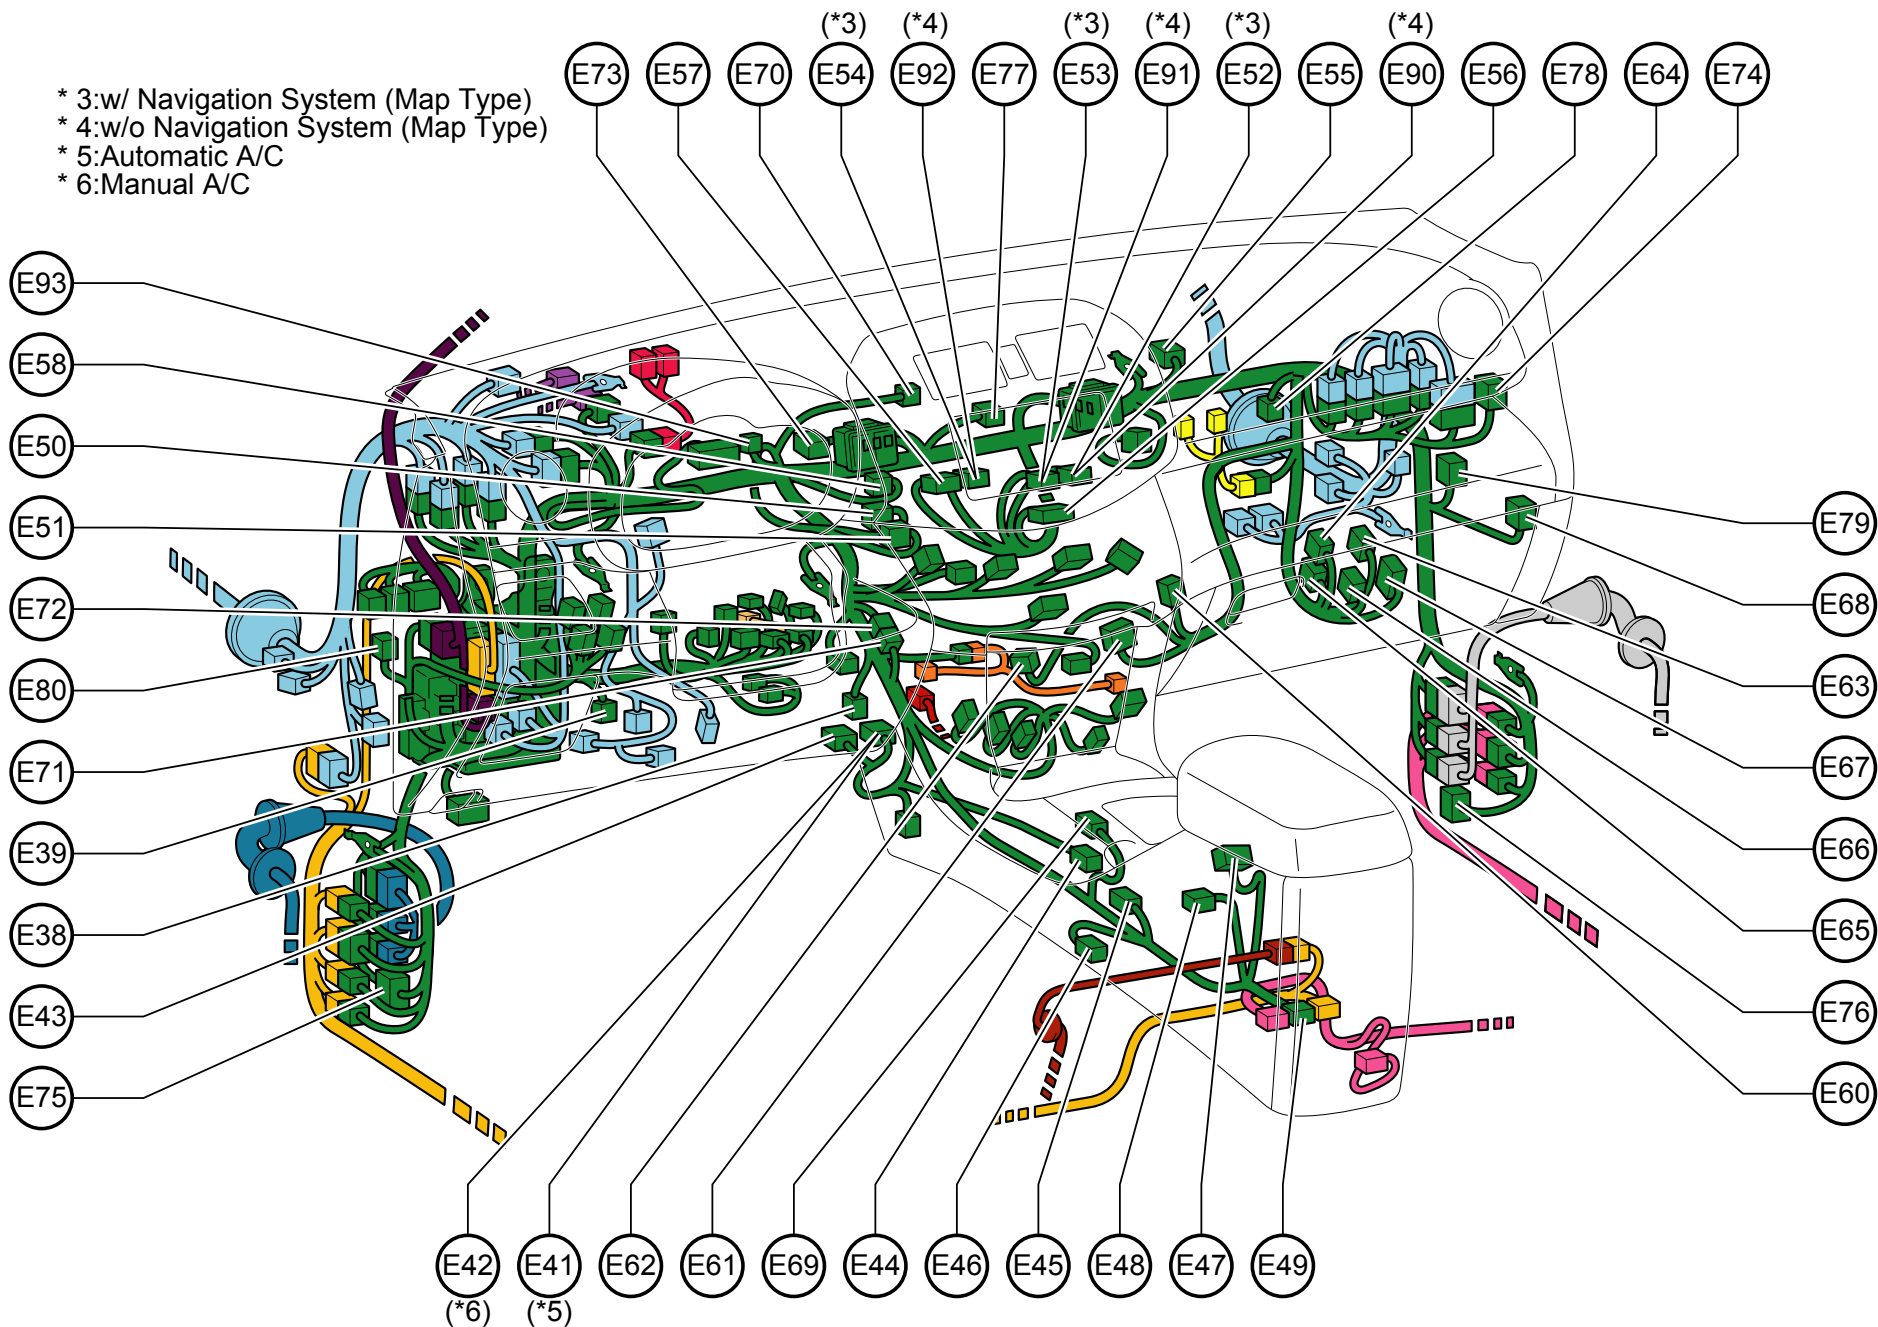


## Position of Parts in Instrument Panel <LHD>

---

- E 38 A/C Evaporator Temp. Sensor
- E 39 Knee Airbag Squib
- E 41 A/C Amplifier
- E 42 A/C Amplifier
- E 43 A/C Amplifier
- E 44 Shift Lock Control ECU
- E 45 Transmission Control SW
- E 46 Parking Brake SW
- E 47 Outer Mirror SW
- E 48 Power Outlet Socket (Front)
- E 49 Airbag Sensor Assembly Center
- E 50 Transponder Key ECU
- E 51 ID Code Box
- E 52 Navigation Receiver Assembly
- E 53 Navigation Receiver Assembly
- E 54 Navigation Receiver Assembly
- E 55 Antenna Amplifier
- E 56 Navigation Receiver Assembly
- E 57 Navigation Receiver Assembly
- E 58 4WD Control SW
- E 60 Blower Motor
- E 61 Blower Motor
- E 62 Blower Resistor
- E 63 Certification ECU
- E 64 Tire Pressure Warning ECU and Receiver
- E 65 Tire Pressure Warning ECU and Receiver
- E 66 Auto Wiper Relay
- E 67 4WD Control ECU
- E 68 Airbag Cut Off SW
- E 69 A/T Shift Lever Illumination
- E 70 Air Inlet Control Servo Motor
- E 71 Short Connector
- E 72 Short Connector
- E 73 Junction Connector
- E 74 Junction Connector
- E 75 Junction Connector
- E 76 Junction Connector
- E 77 Junction Connector
- E 78 Diode (Rear Wiper)
- E 79 Junction Connector
- E 80 Junction Connector
- E 90 Radio Receiver Assembly
- E 91 Radio Receiver Assembly
- E 92 Radio Receiver Assembly
- E 93 Diode (Heater)

Position of Parts in Instrument Panel <LHD>

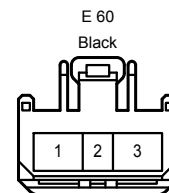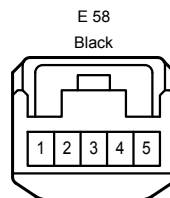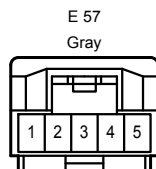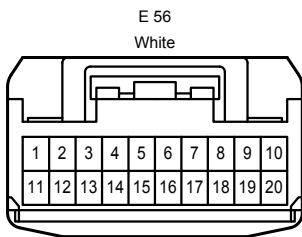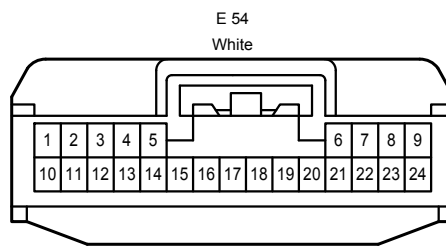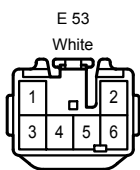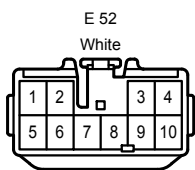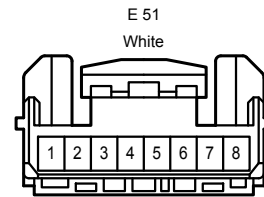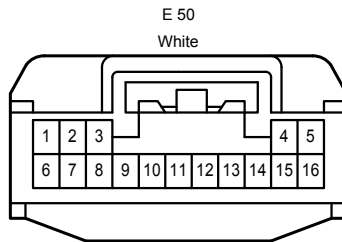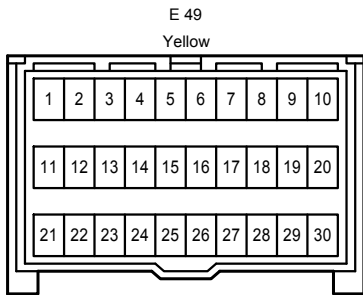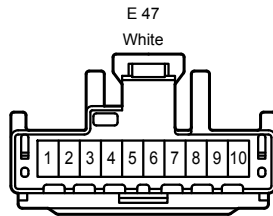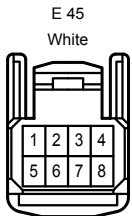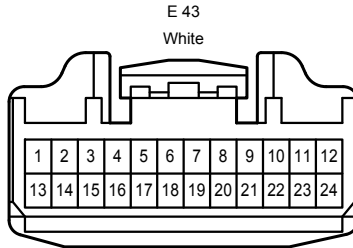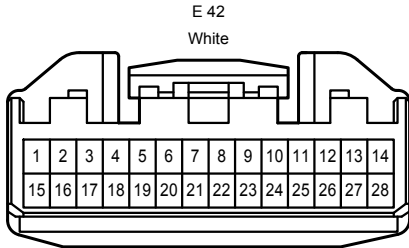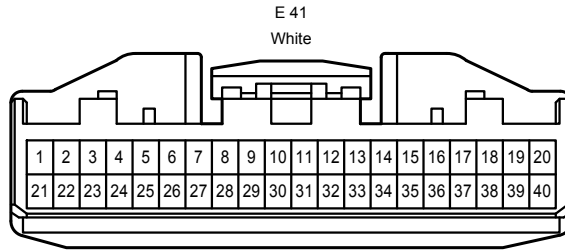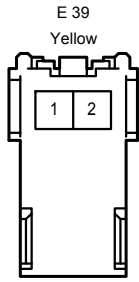

Position of Parts in Instrument Panel <LHD>

