


Position of Parts in Instrument Panel <LHD>

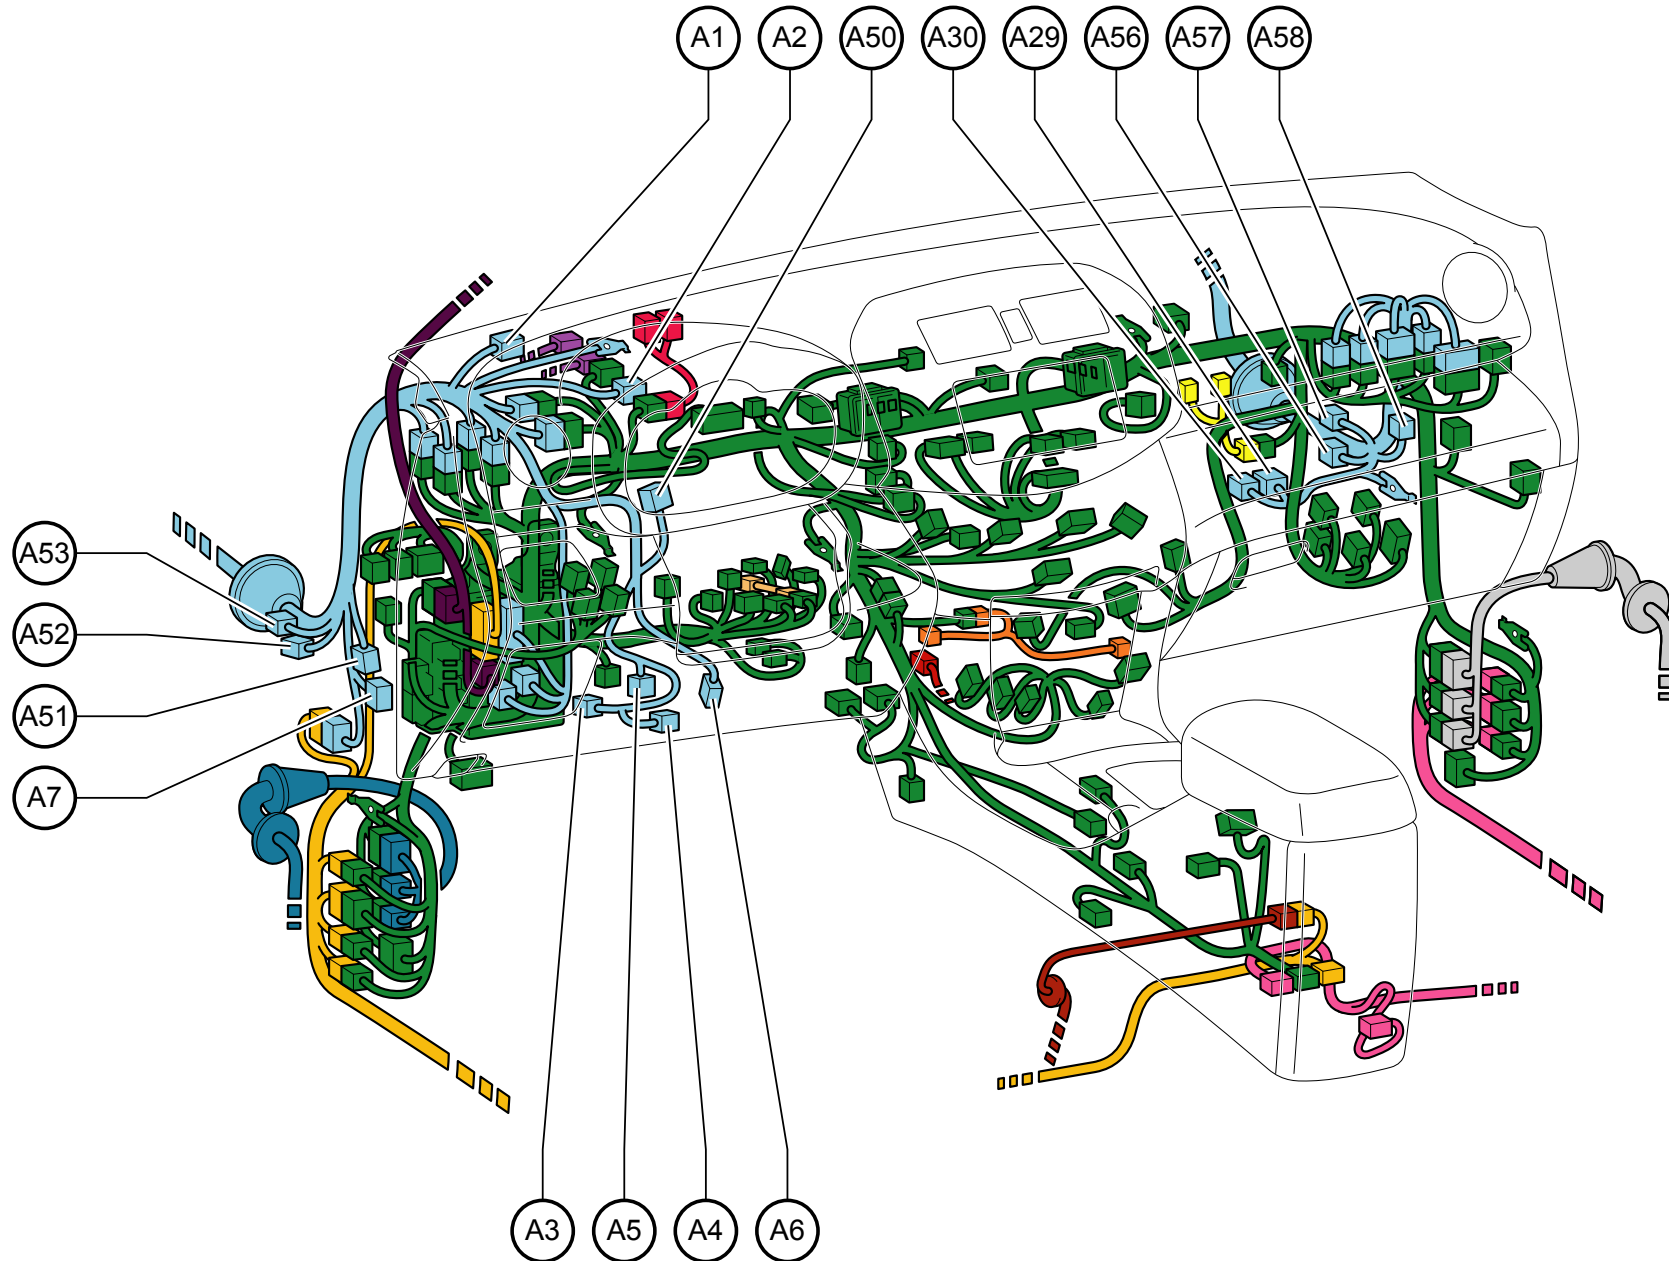

Position of Parts in Instrument Panel <LHD>

- A 1 Cruise Control Clutch SW
- A 2 Power Steering ECU
- A 3 Brake Pedal Load Sensing SW
- A 4 Clutch Start SW
- A 5 Stop Lamp SW
- A 6 Accelerator Position Sensor
- A 7 Option Connector
- A 29 PTC Heater
- A 30 PTC Heater
- A 50 Junction Connector
- A 51 Junction Connector
- A 52 Junction Connector
- A 53 Junction Connector
- A 56 Diode (Power Heater)
- A 57 Resistor
- A 58 Resistor

Position of Parts in Instrument Panel <LHD>

