


Position of Parts in Instrument Panel <LHD>





 
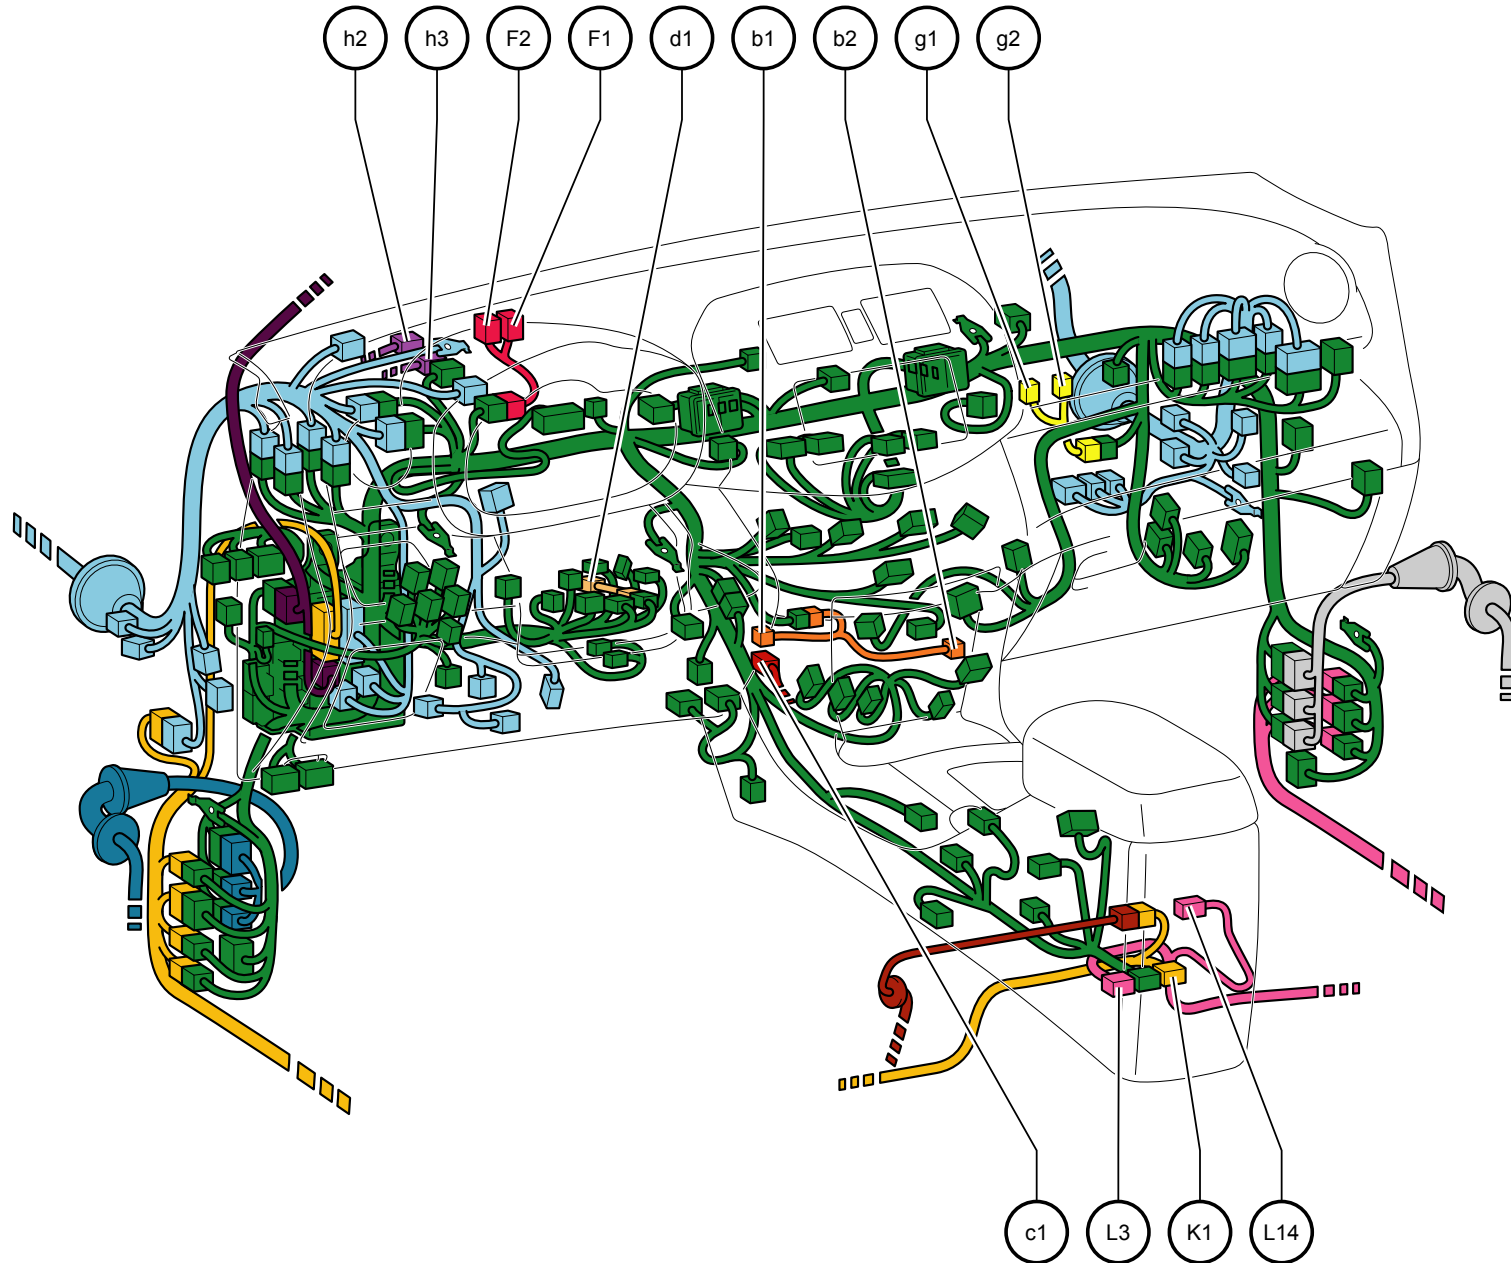


**Position of Parts in Instrument Panel <LHD>**

---

- F 1 A/C Solar Sensor
- F 2 Automatic Light Control Sensor
  
- K 1 Airbag Sensor Assembly Center
  
- L 3 Airbag Sensor Assembly Center
- L 14 Electrical Key Oscillator (Front)
- L 14 Electrical Key Oscillator (Front)
  
- b 1 Foot Lamp (Front LH)
- b 2 Foot Lamp (Front RH)
  
- c 1 A/C Amplifier , A/C Blower Assembly
  
- d 1 Key Interlock Solenoid
  
- g 1 Airbag Squib (Front Passenger's Airbag Assembly)
- g 2 Airbag Squib (Front Passenger's Airbag Assembly)
  
- h 2 Power Steering ECU , Power Steering Torque Sensor
- h 3 Power Steering ECU , Rotation Angle Sensor

Position of Parts in Instrument Panel <LHD>

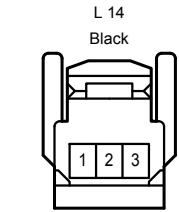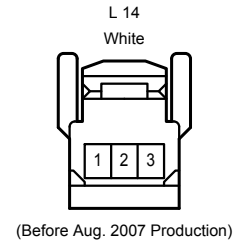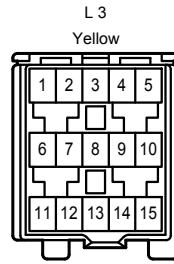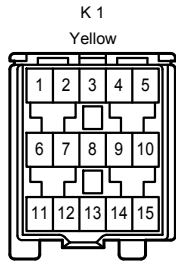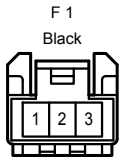

(From Aug. 2007 Production)

