


Position of Parts in Instrument Panel <RHD>

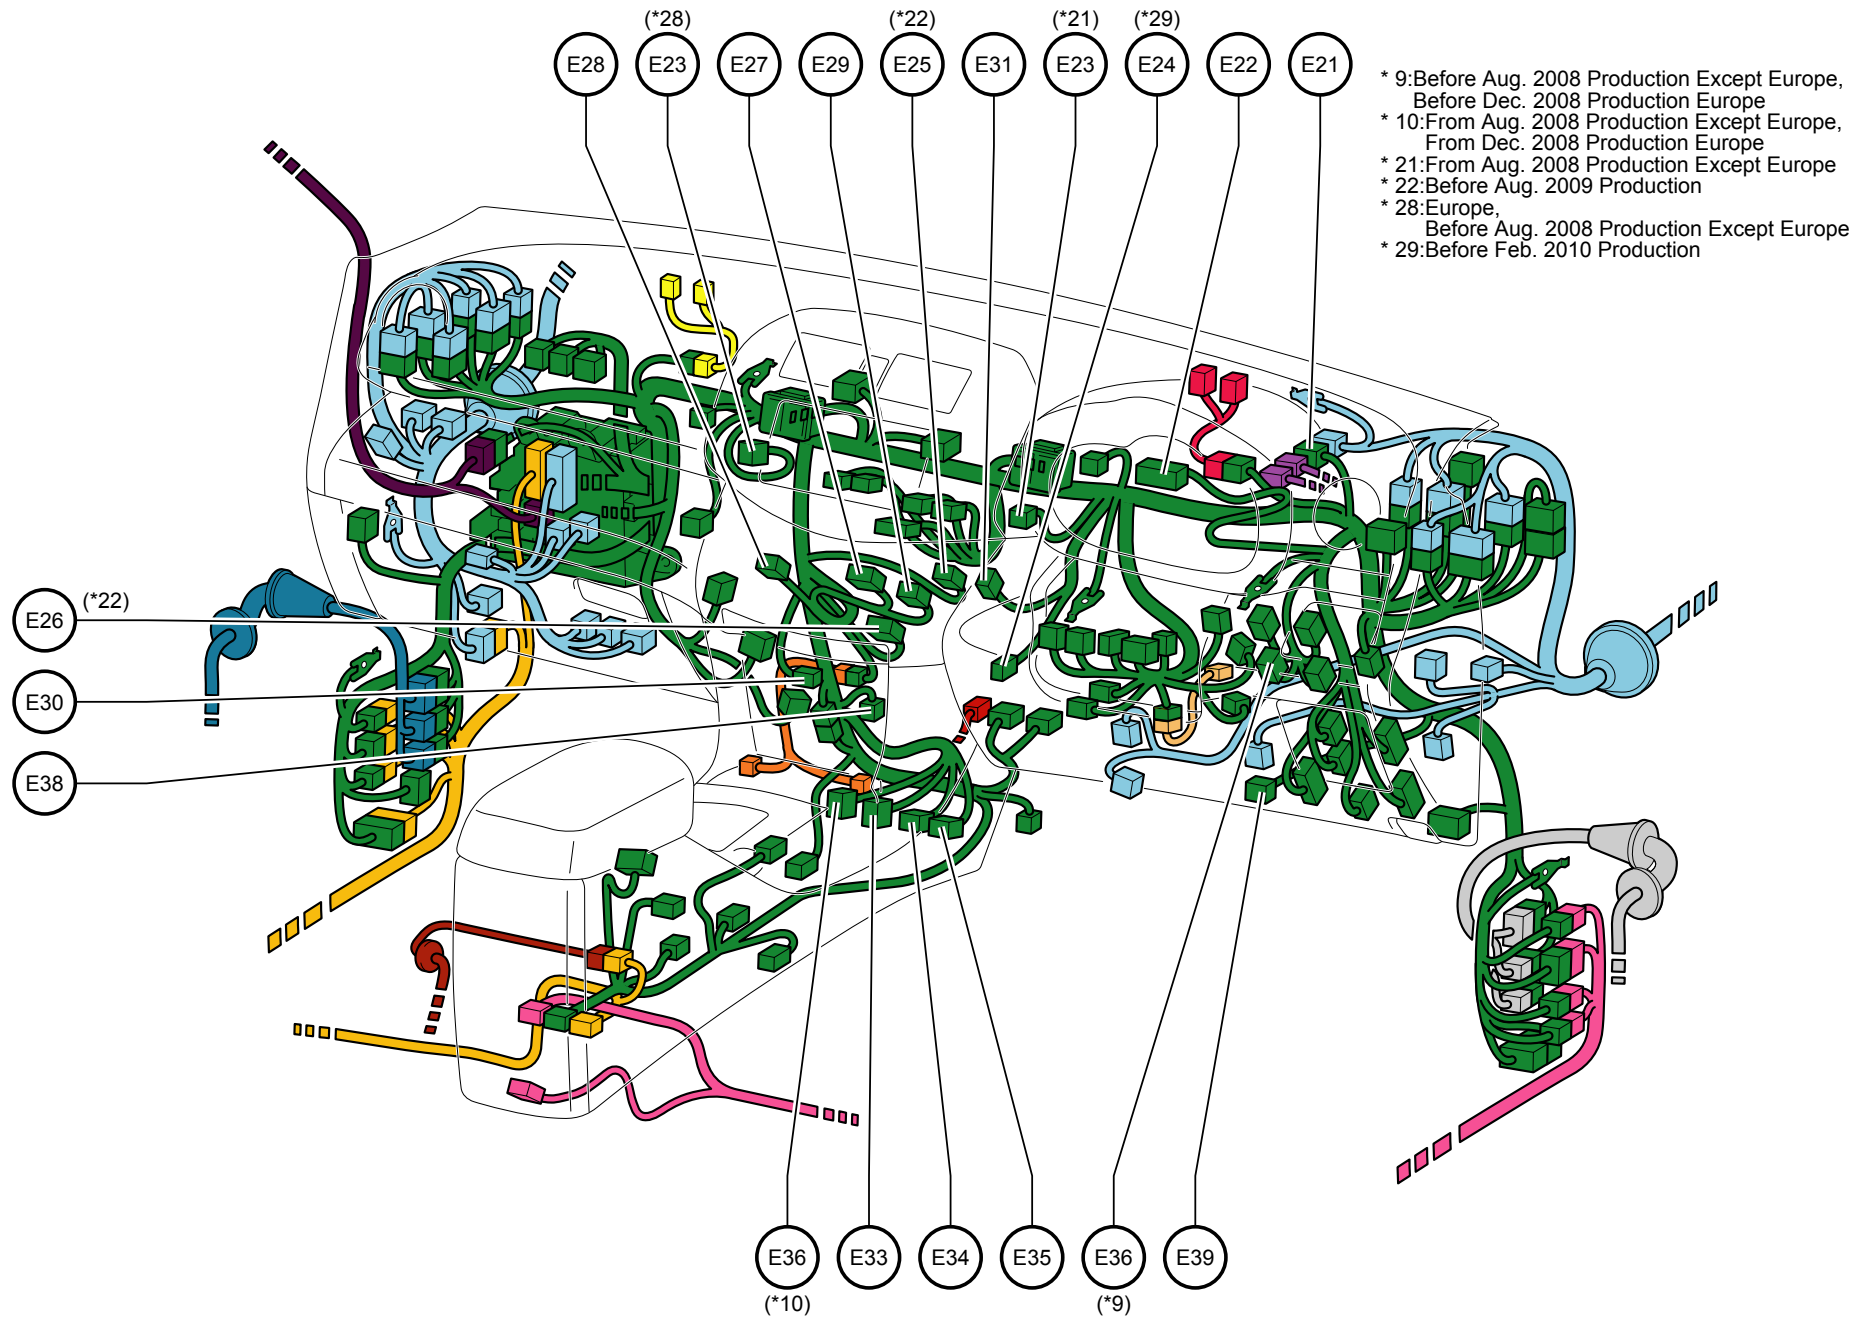

Position of Parts in Instrument Panel <RHD>

- E 21 Power Steering ECU
- E 22 Combination Meter
- E 23 Hazard Warning Signal SW
- E 24 A/C Room Temp. Sensor
- E 25 Clock
- E 26 Integration Control and Panel Assembly
- E 27 Integration Control and Panel Assembly
- E 28 Air Inlet Control SW
- E 29 A/C SW , Max Hot SW
- E 30 Front Console Illumination
- E 31 Power SW
- E 33 Seat Heater SW
- E 34 Cigarette Lighter Illumination
- E 35 Cigarette Lighter
- E 36 Downhill Assist Control SW
- E 38 A/C Evaporator Temp. Sensor
- E 39 Knee Airbag Squib

Position of Parts in Instrument Panel <RHD>

