


Position of Parts in Instrument Panel <RHD>





 












 



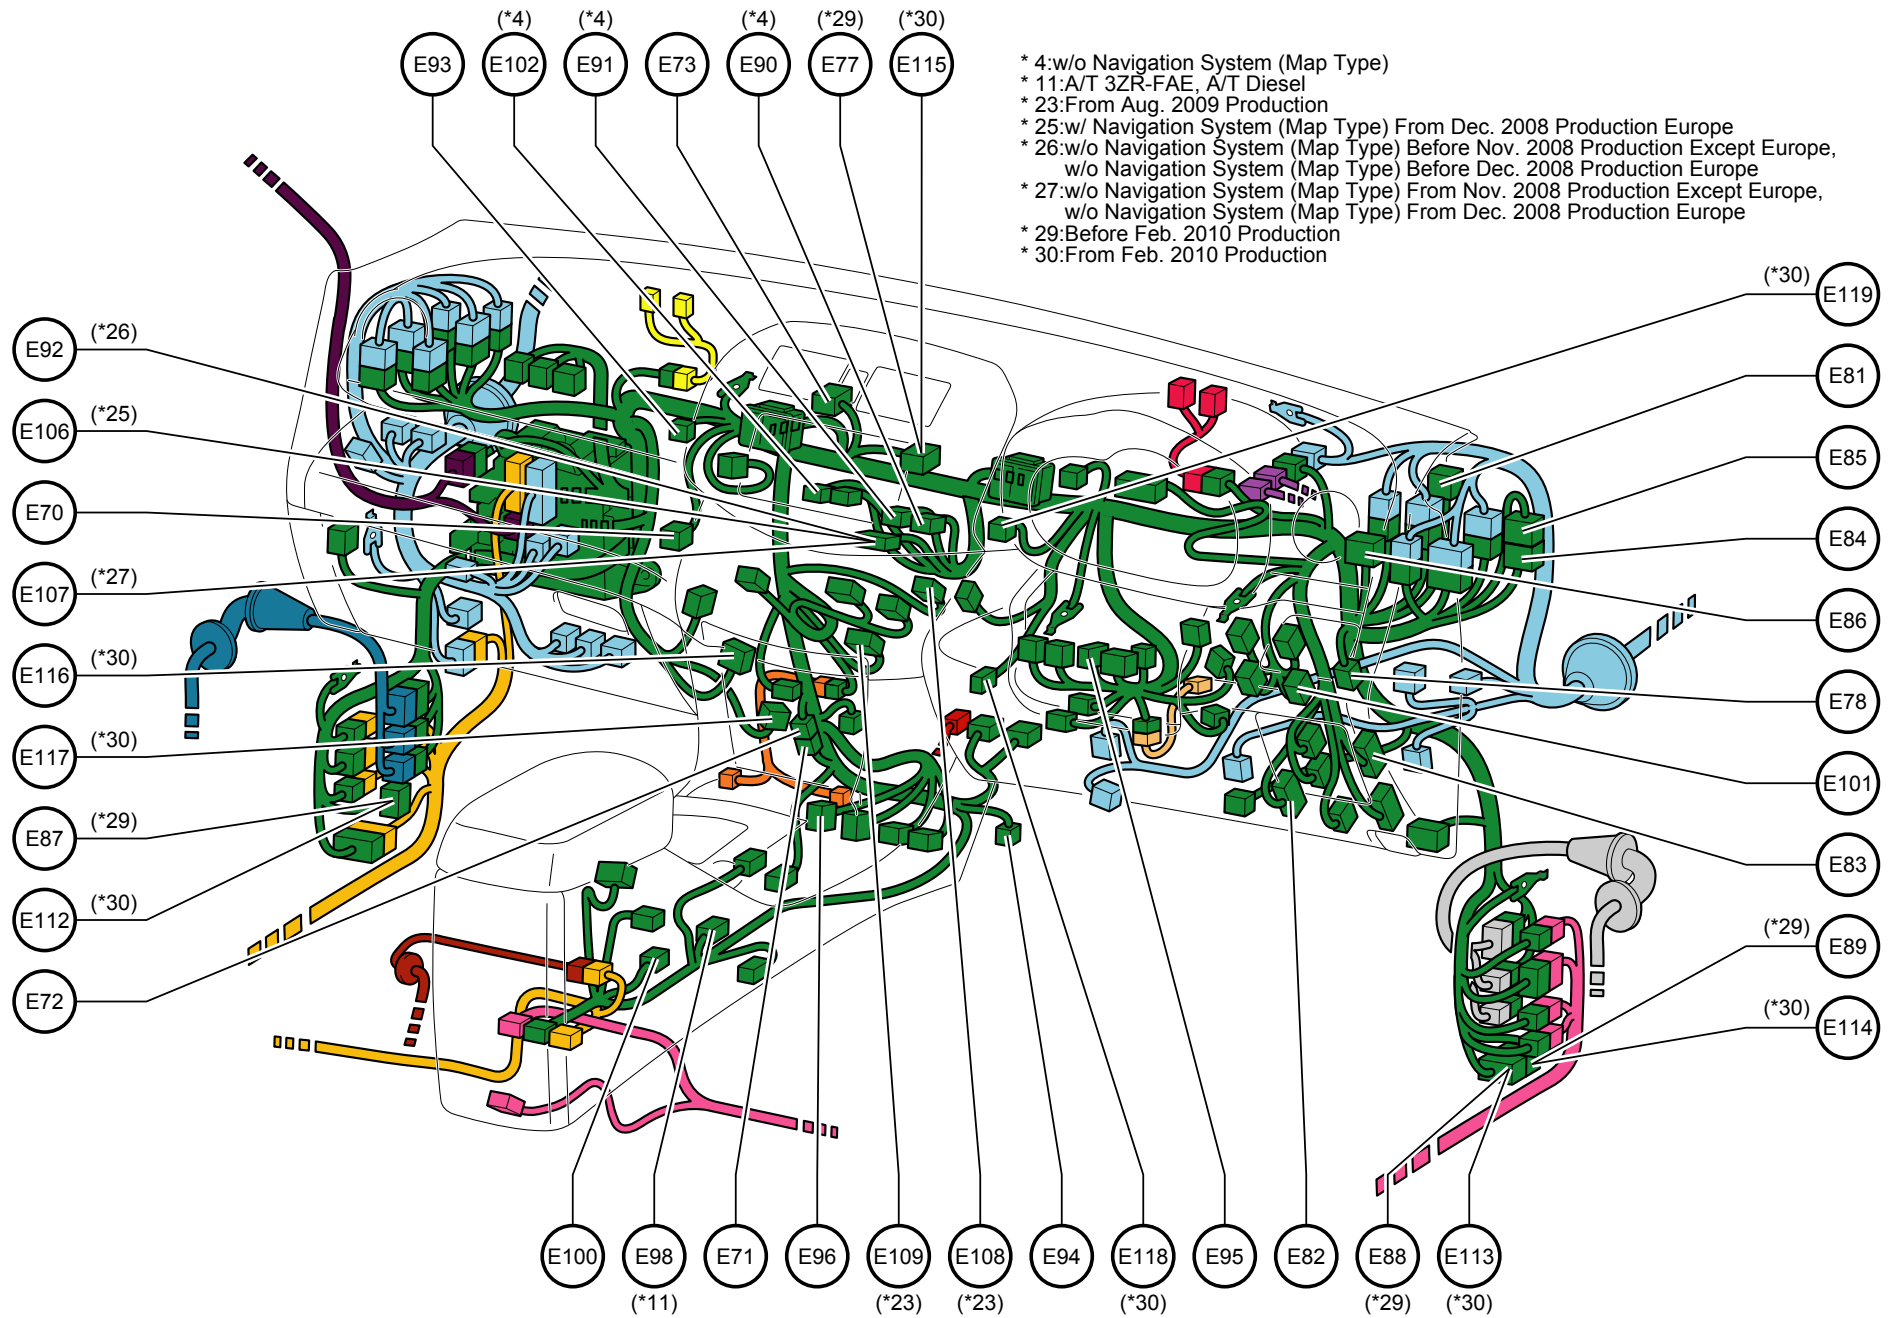


Position of Parts in Instrument Panel <RHD>

---

- E 70 Air Inlet Control Servo Motor
- E 71 Short Connector
- E 72 Short Connector
- E 73 Junction Connector
- E 77 Junction Connector
- E 78 Diode (Rear Wiper)
- E 81 Turn Signal Flasher
- E 82 Double Locking ECU
- E 83 Theft Warning ECU
- E 84 Junction Connector
- E 85 Junction Connector
- E 86 Junction Connector
- E 87 Junction Connector
- E 88 Junction Connector
- E 89 Junction Connector
- E 90 Radio Receiver Assembly
- E 91 Radio Receiver Assembly
- E 92 Radio Receiver Assembly
- E 93 Diode (Heater)
- E 94 Heated Oxygen Sensor (Bank 1 Sensor 2)
- E 95 Steering Sensor
- E 96 VSC OFF SW
- E 98 Transmission Control SW
- E 100 No.1 Stereo Jack Adapter Assembly
- E 101 No.1 Pattern Select Switch Assembly
- E 102 Radio Receiver Assembly
- E 106 Navigation Receiver Assembly
- E 107 Radio Receiver Assembly
- E 108 Clock
- E 109 Integration Control and Panel Assembly
- E 112 Junction Connector
- E 113 Junction Connector
- E 114 Junction Connector
- E 115 Junction Connector
- E 116 Blower Motor
- E 117 Blower Resistor
- E 118 A/C Room Temp. Sensor
- E 119 4WD Control SW

Position of Parts in Instrument Panel <RHD>

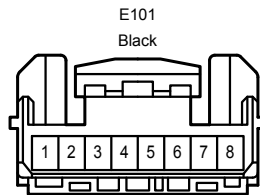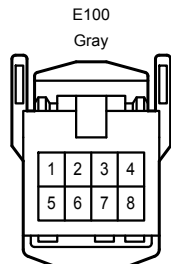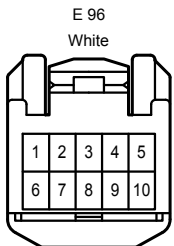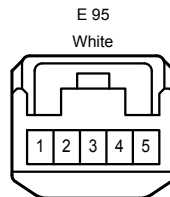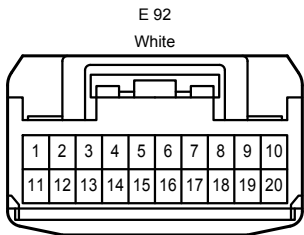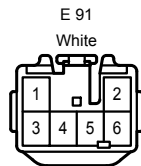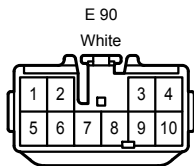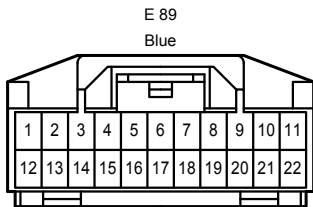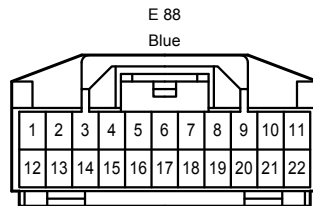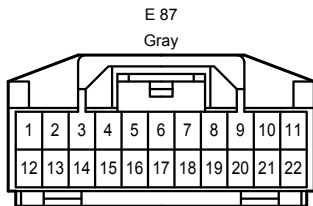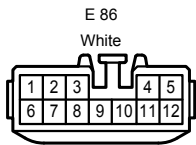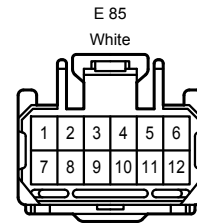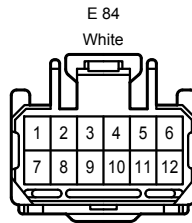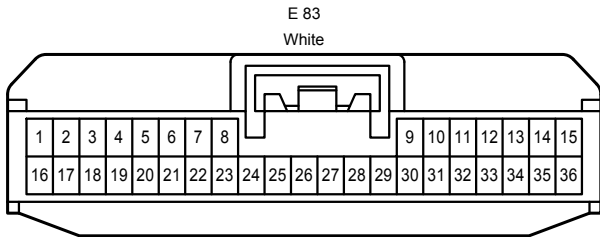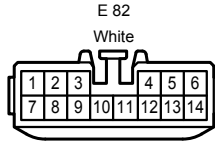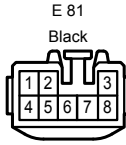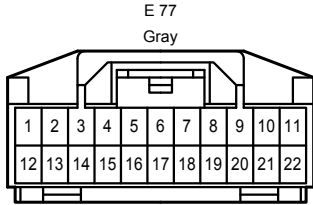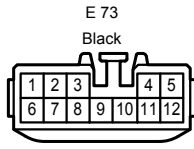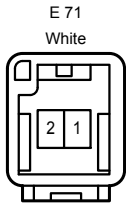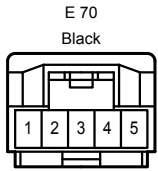

Position of Parts in Instrument Panel <RHD>

