


Position of Parts in Instrument Panel <RHD>

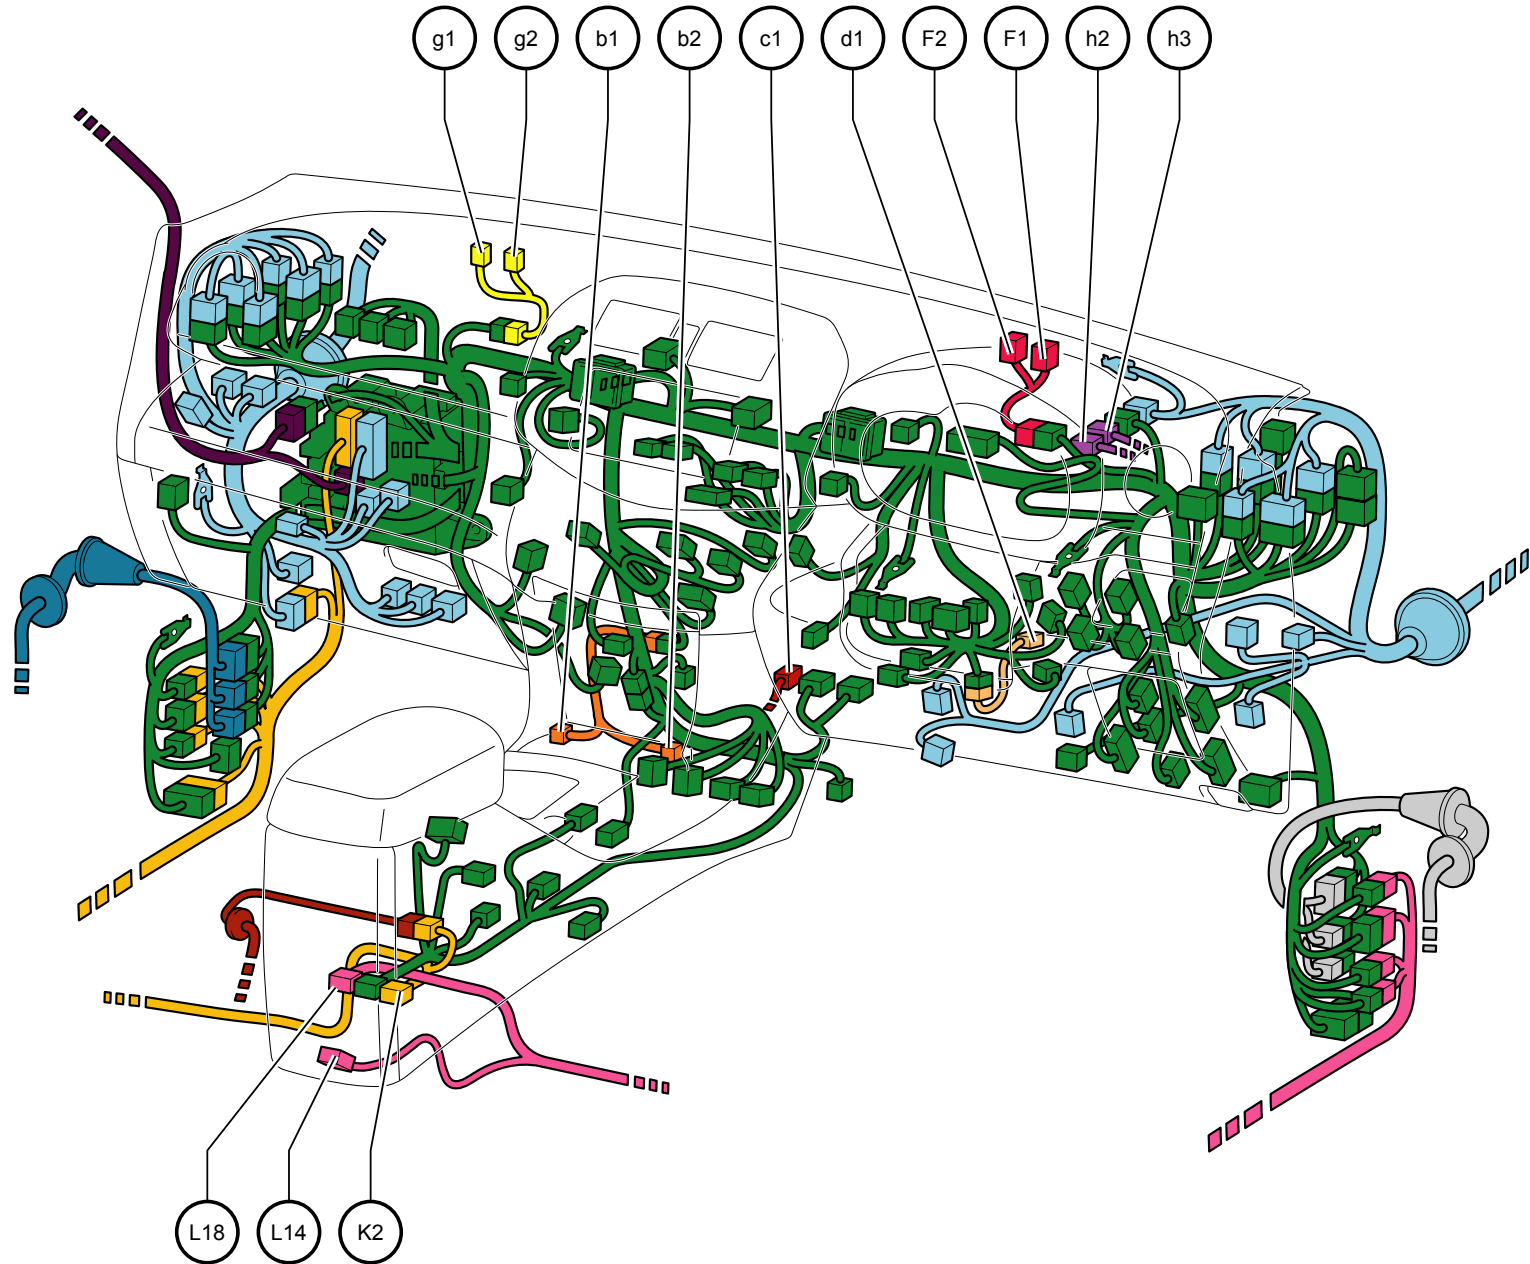

Position of Parts in Instrument Panel <RHD>

- F 1 A/C Solar Sensor
- F 2 Automatic Light Control Sensor

- K 2 Airbag Sensor Assembly Center

- L 14 Electrical Key Oscillator (Front)
- L 14 Electrical Key Oscillator (Front)
- L 18 Airbag Sensor Assembly Center

- b 1 Foot Lamp (Front LH)
- b 2 Foot Lamp (Front RH)

- c 1 A/C Amplifier , A/C Blower Assembly

- d 1 Key Interlock Solenoid

- g 1 Airbag Squib (Front Passenger's Airbag Assembly)
- g 2 Airbag Squib (Front Passenger's Airbag Assembly)

- h 2 Power Steering ECU , Power Steering Torque Sensor
- h 3 Power Steering ECU , Rotation Angle Sensor

Position of Parts in Instrument Panel <RHD>

