


Position of Parts in Seat <LHD>

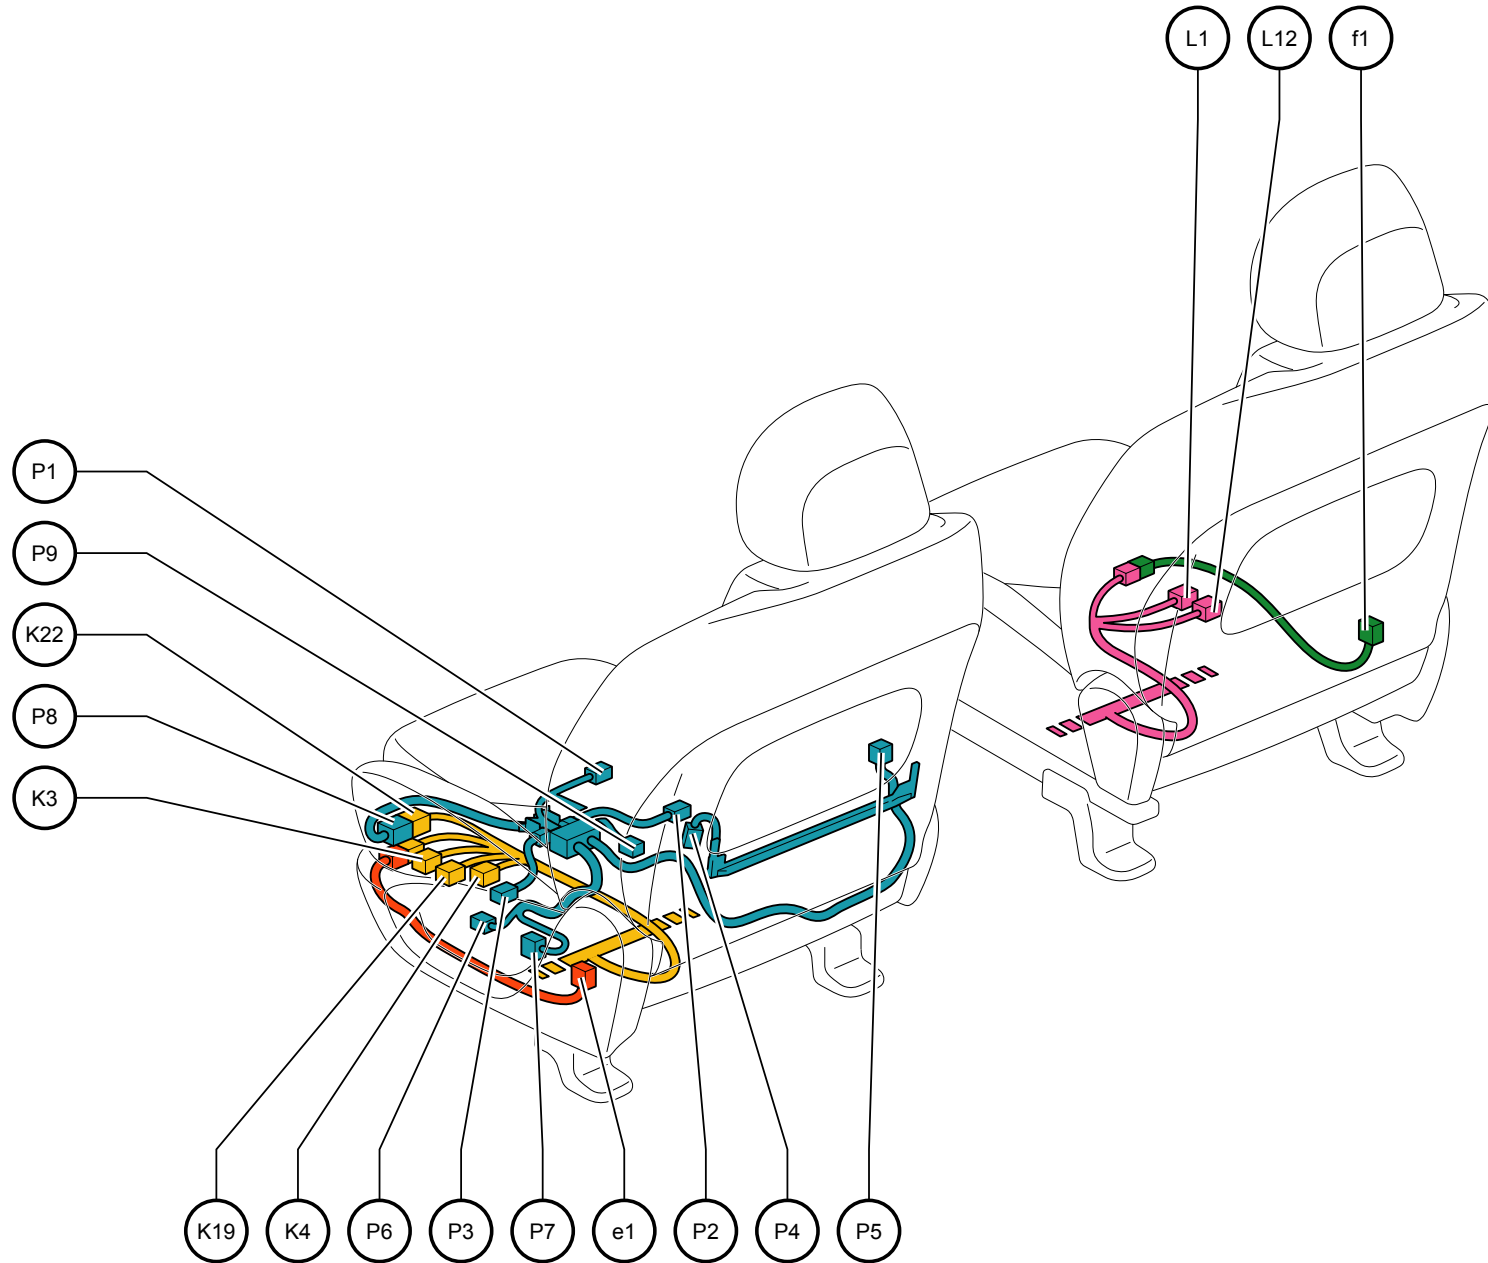

Position of Parts in Seat <LHD>

---

- K 3 Front Seat Inner Belt (Driver's Side)
- K 4 Seat Heater (LH)
- K 19 Front Seat Inner Belt (Front Passenger's Side)
- K 22 Junction Connector
  
- L 1 Seat Heater (RH)
- L 12 Front Seat Inner Belt (Front Passenger's Side)
  
- P 1 Power Seat Motor (Driver's Seat Slide Control)
- P 2 Power Seat Motor (Driver's Seat Lifter Control)
- P 3 Power Seat Motor (Driver's Seat Front Vertical Control)
- P 4 Power Seat Motor (Driver's Seat Reclining Control)
- P 5 Power Seat Motor (Driver's Seat Lumbar Support Control)
- P 6 Power Seat SW (Driver's Seat)
- P 7 Power Seat SW (Lumbar Support)
- P 8 Junction Connector
- P 9 Seat Heater (LH)
  
- e 1 Side Airbag Squib (LH)
  
- f 1 Side Airbag Squib (RH)

Position of Parts in Seat <LHD>

