


Position of Parts in Seat <RHD>

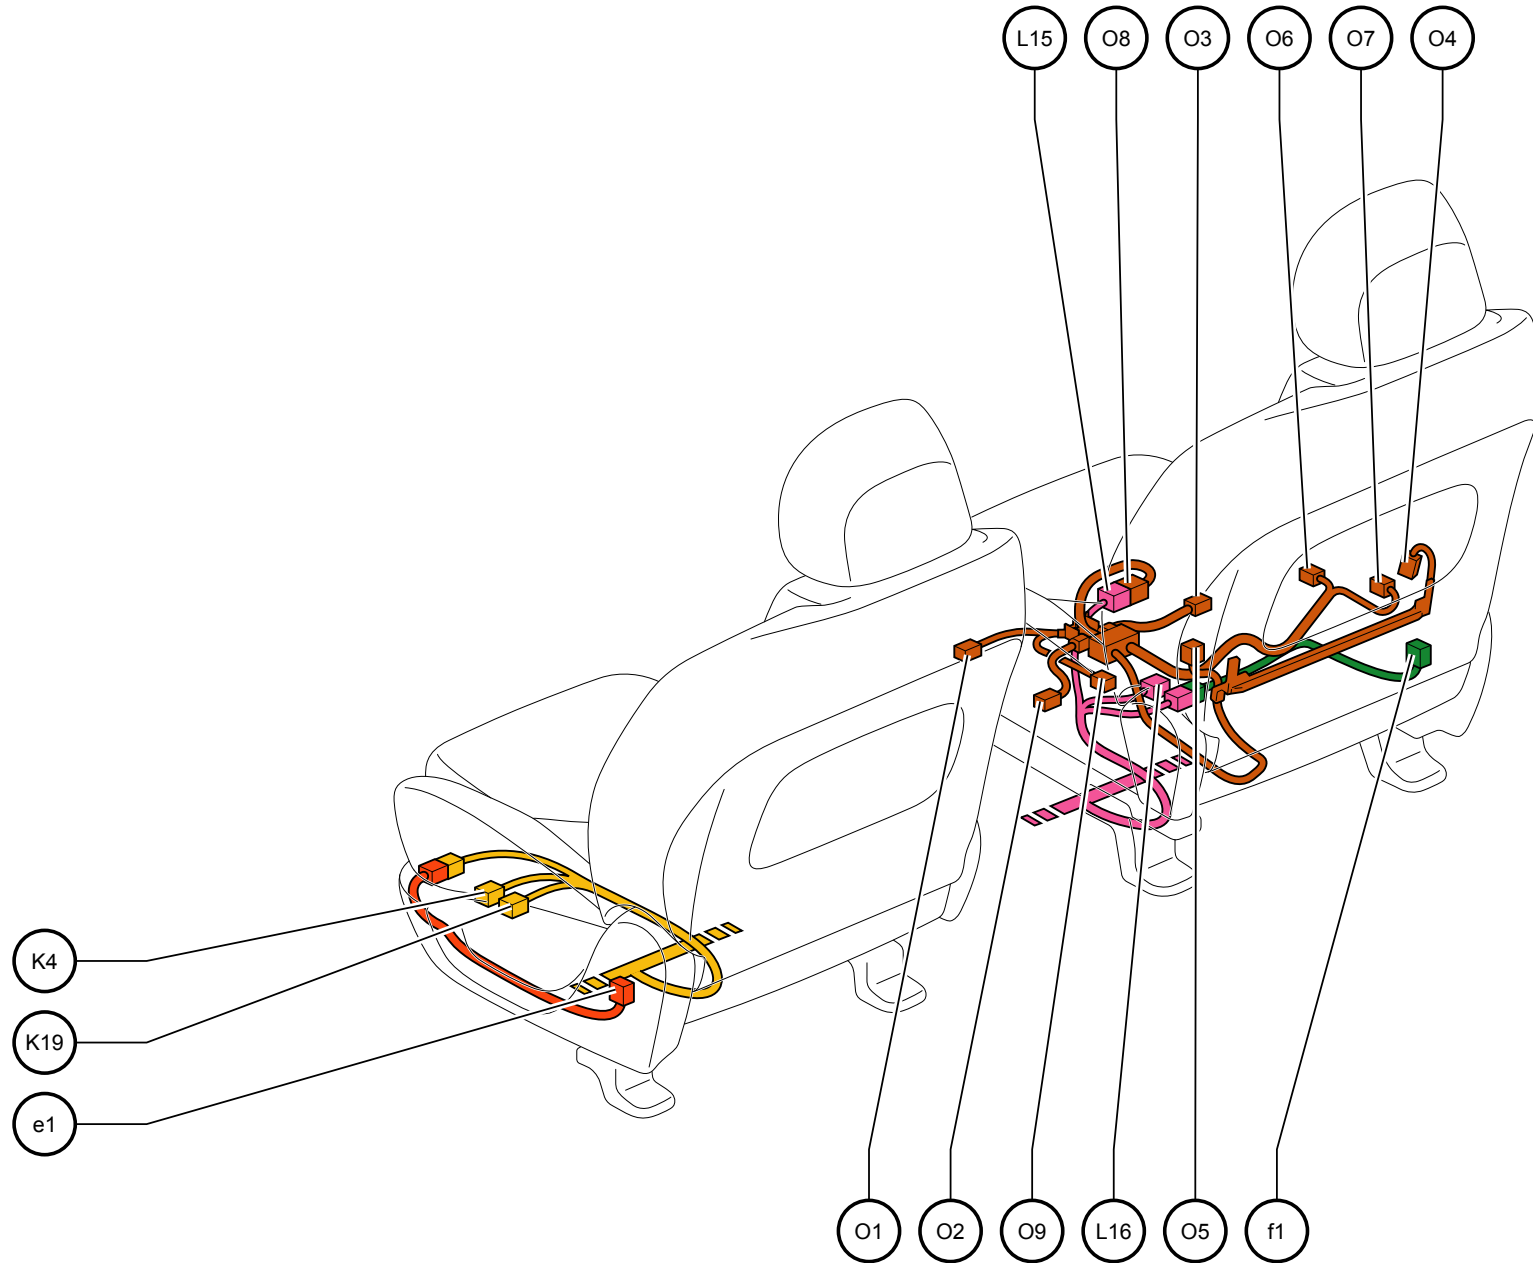

Position of Parts in Seat <RHD>

- K 4 Seat Heater (LH)
- K 19 Front Seat Inner Belt (Front Passenger's Side)

- L 15 Junction Connector
- L 16 Front Seat Inner Belt (Driver's Side)

- O 1 Power Seat Motor (Driver's Seat Slide Control)
- O 2 Power Seat Motor (Driver's Seat Lifter Control)
- O 3 Power Seat Motor (Driver's Seat Front Vertical Control)
- O 4 Power Seat Motor (Driver's Seat Reclining Control)
- O 5 Power Seat Motor (Driver's Seat Lumbar Support Control)
- O 6 Power Seat SW (Driver's Seat)
- O 7 Power Seat SW (Lumbar Support)
- O 8 Junction Connector
- O 9 Seat Heater (RH)

- e 1 Side Airbag Squib (LH)

- f 1 Side Airbag Squib (RH)

Position of Parts in Seat <RHD>

