

## System Outline

---

### **1. Wireless Lock & Unlock Function**

Pushing the lock button locks all the doors and pushing the unlock button unlocks the all the doors.

### **2. 30-Second Auto Lock Function**

If none of the doors are opened within 30 seconds after they have been unlocked with the unlock button, all the doors are locked automatically again to prevent the doors from being left open.

### **3. Answer Back Function (Hazard Light Flashing)**

The hazard light flashes once when locking, and flashes twice when unlocking if the doors are locked/unlocked via the wireless remote control.

### **4. Key Reminder Function**

When the key is inserted in the key cylinder, all the wireless remote control system operations are disabled.

### **5. Illuminating Function**

When the doors are unlocked with the wireless remote control, the interior lights will be lit for approximately 15 seconds if the interior light switch is at 'door' position.