 
 
 



Wireless Door Lock Control <w/o Entry & Start System , RHD>

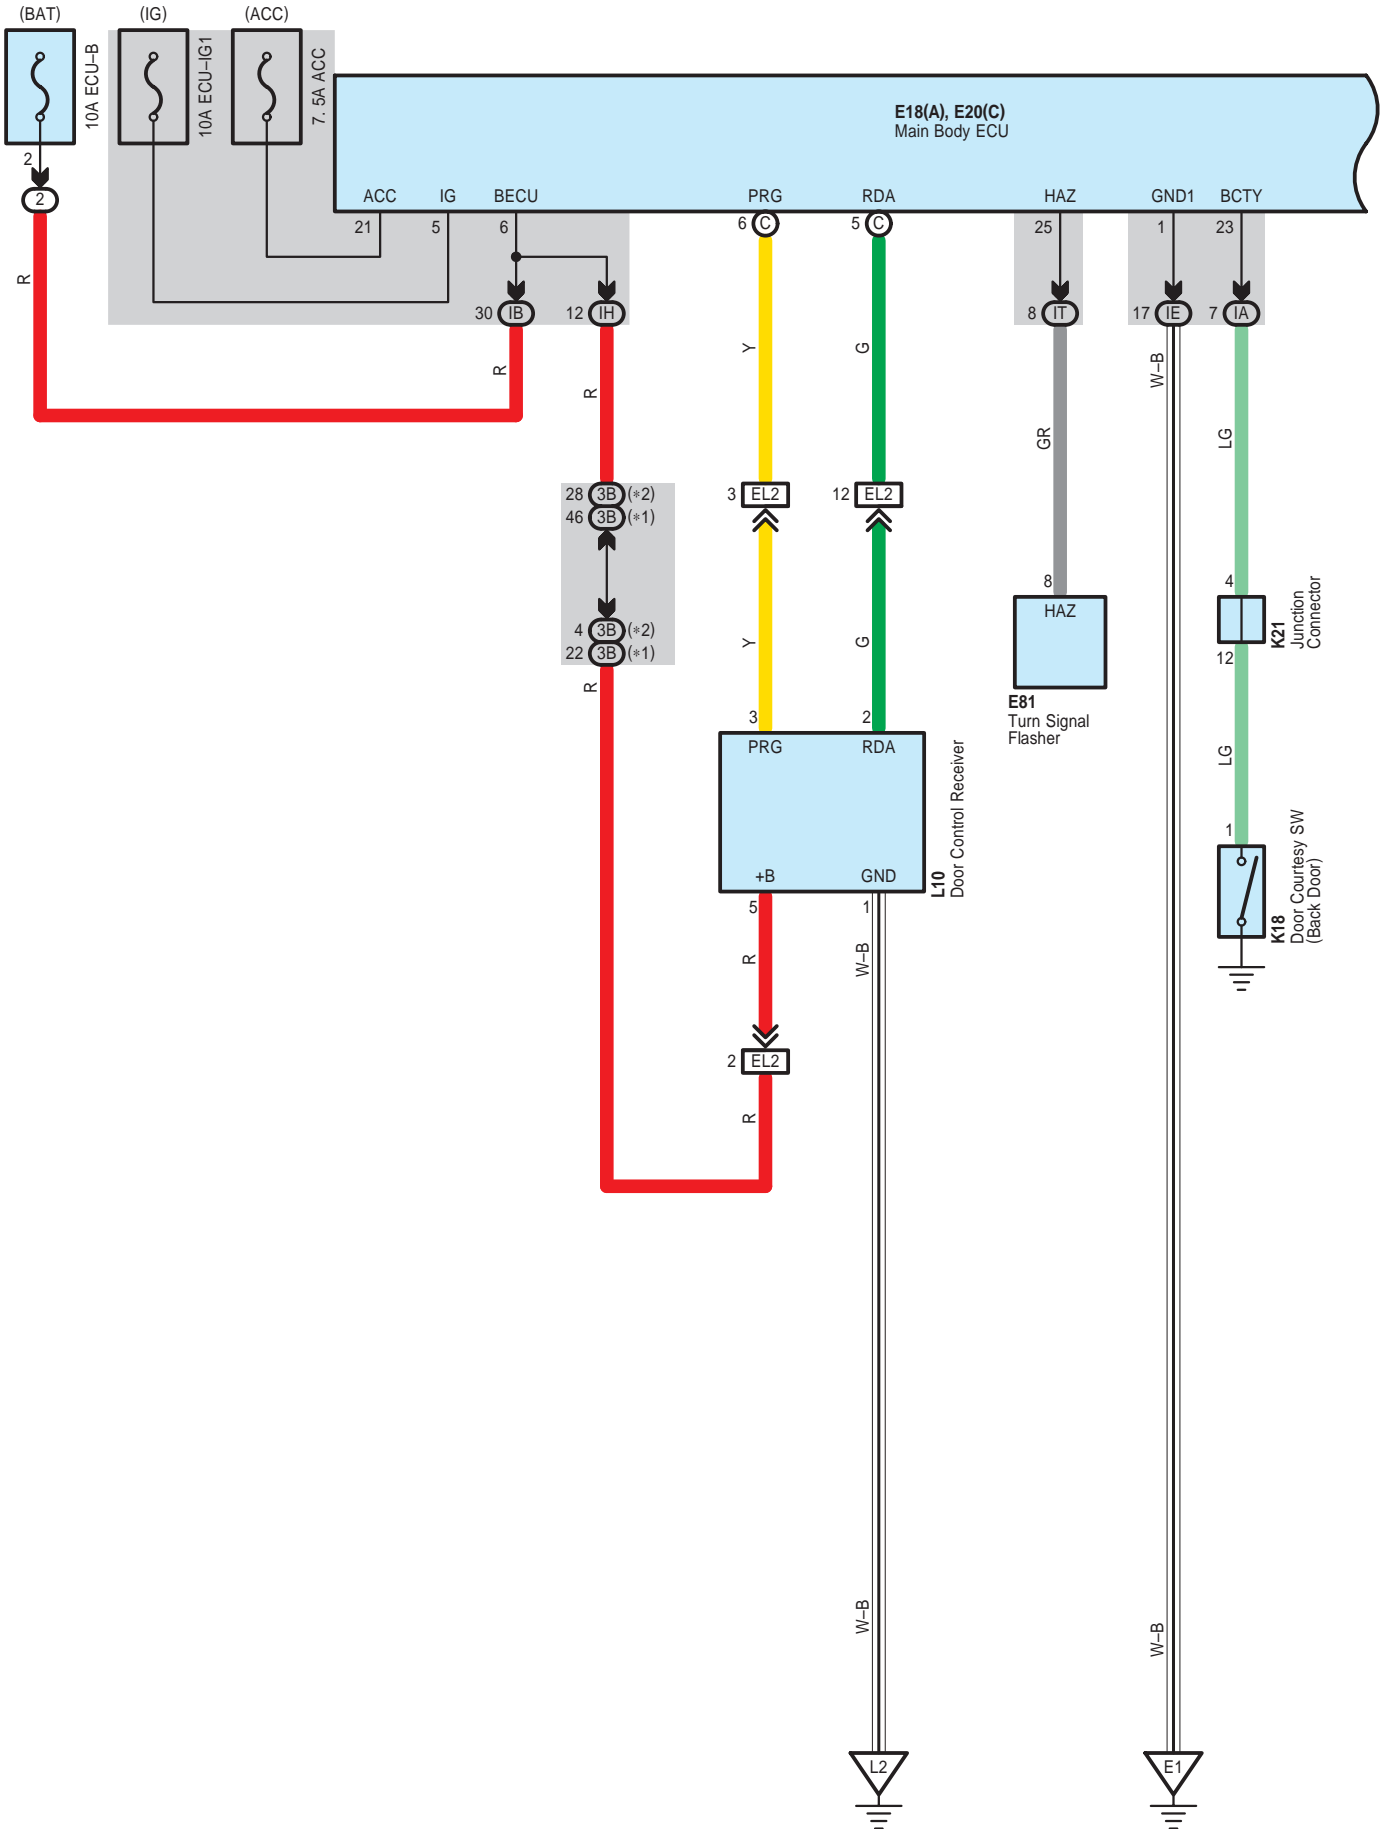

 * 1 : Australia
 * 2 : Except Australia

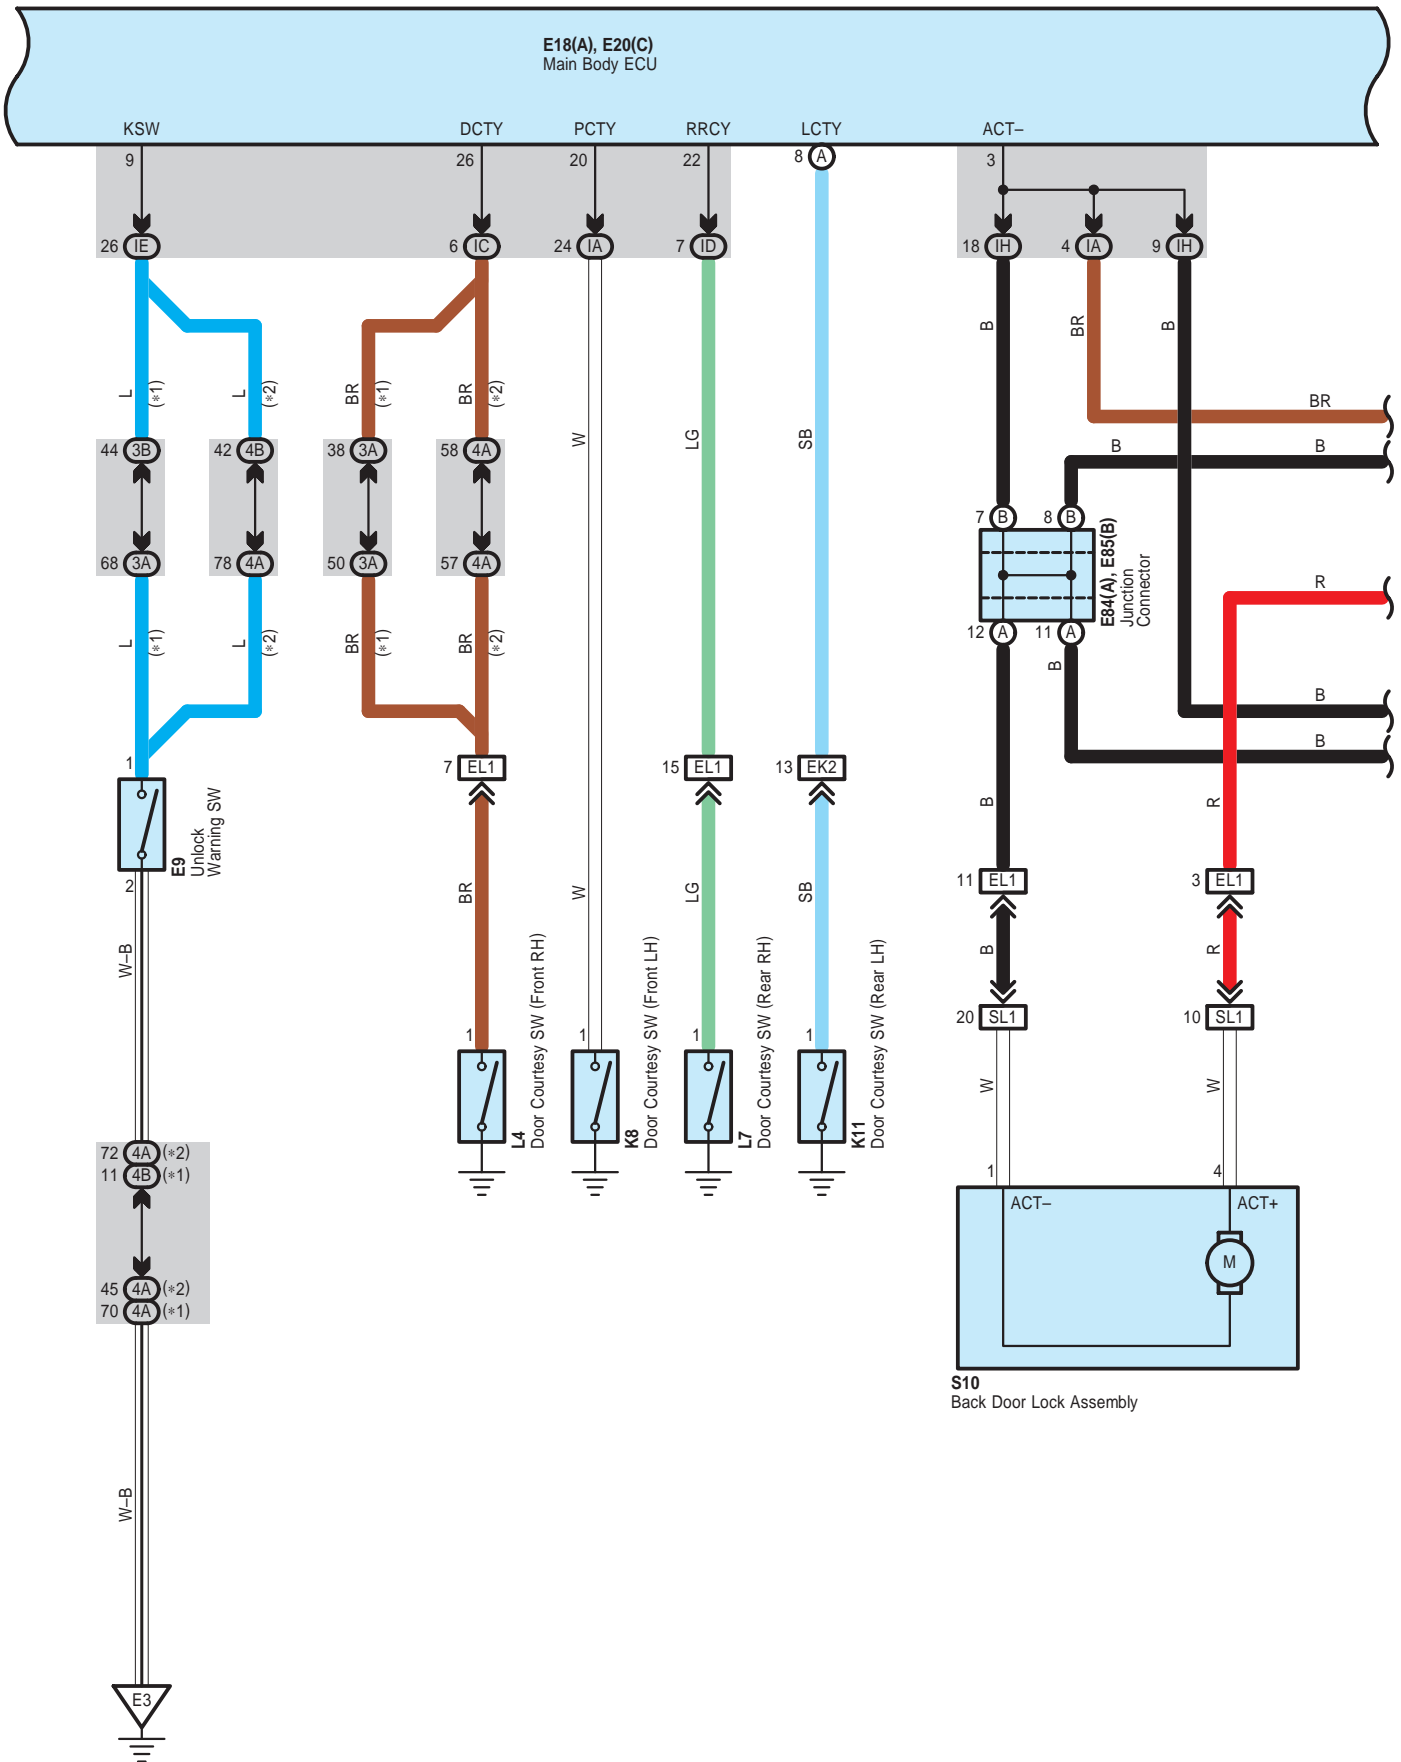

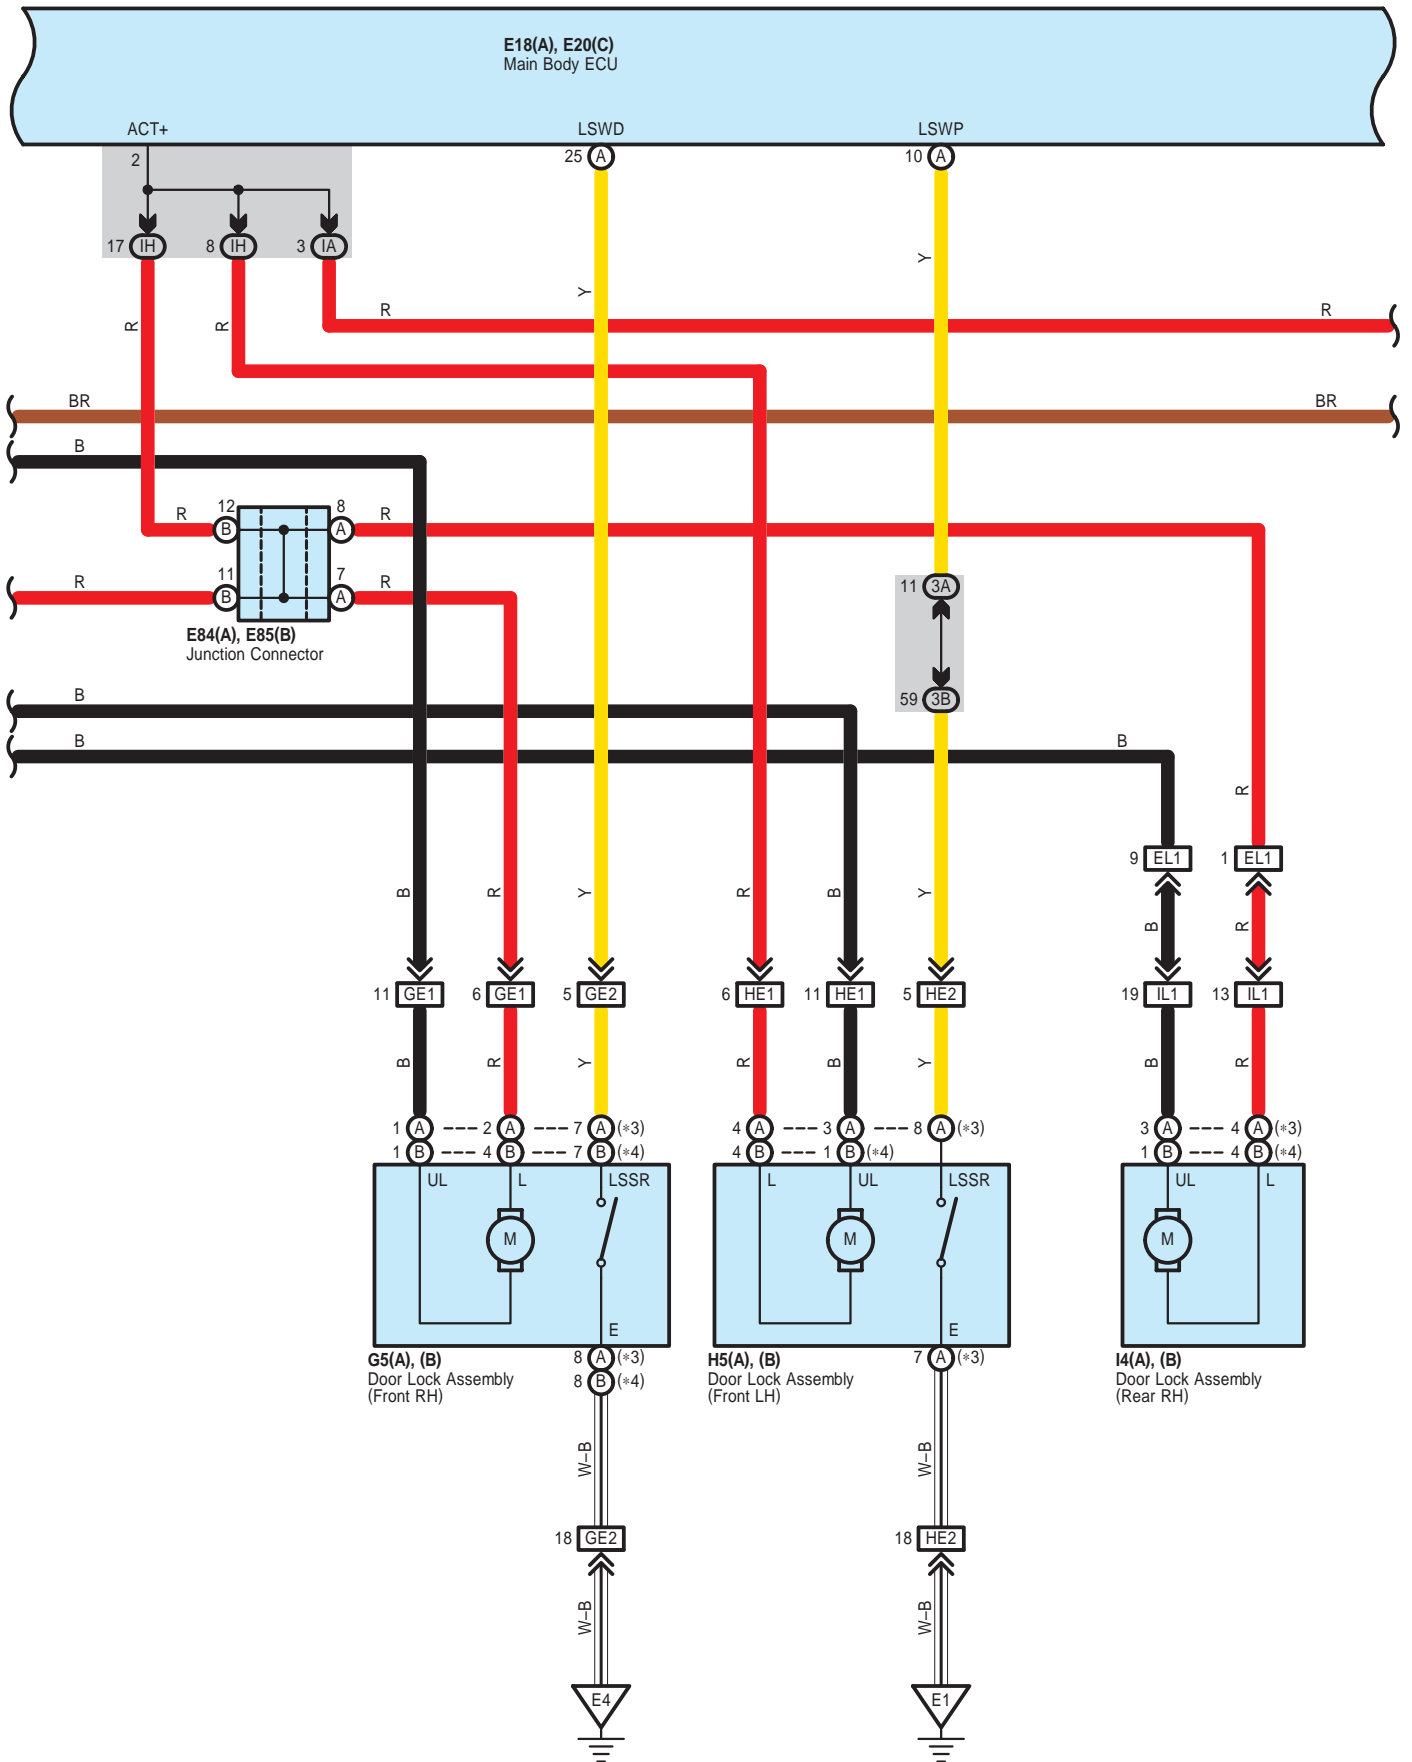


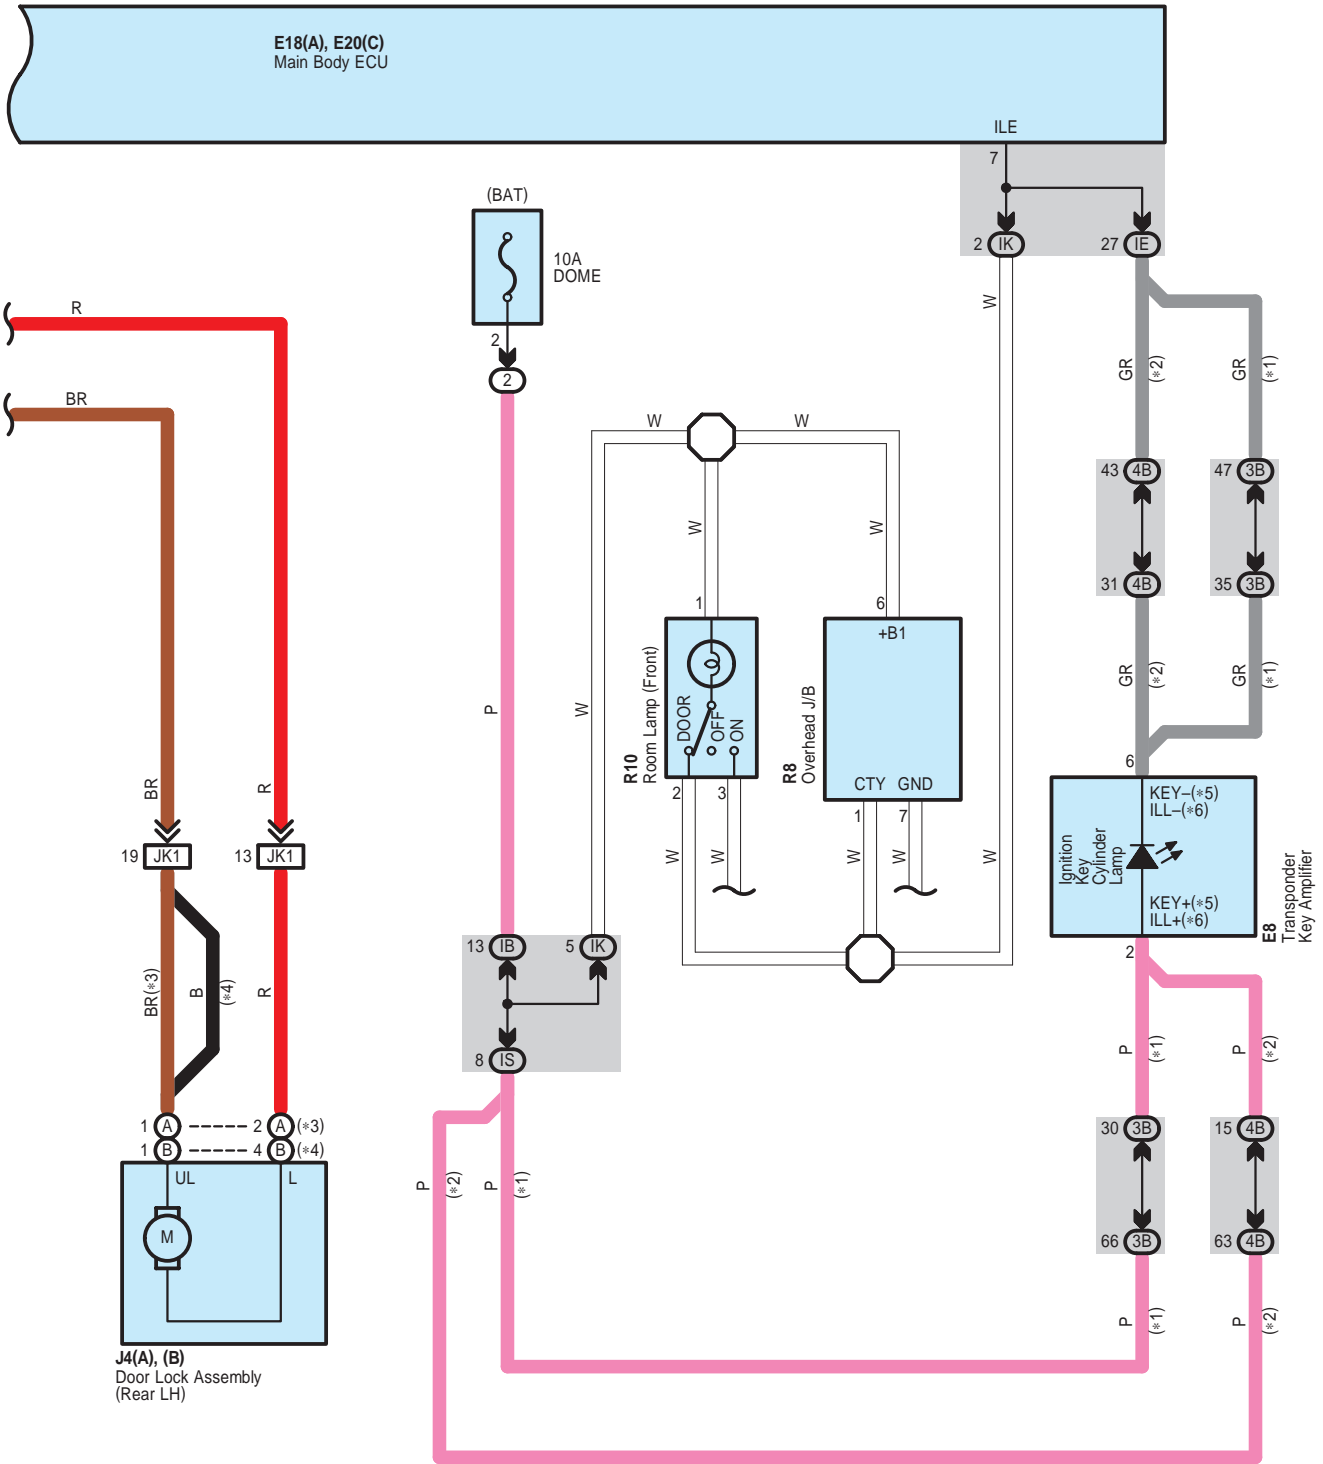

- * 1 : Australia
- * 2 : Except Australia
- * 3 : w/ Double Locking
- * 4 : w/o Double Locking
- * 5 : Before Aug. 2008 Production Except Europe, Before Dec. 2008 Production Europe
- * 6 : From Aug. 2008 Production Except Europe, From Dec. 2008 Production Europe

Wireless Door Lock Control <w/o Entry & Start System , RHD>

 
E 8
Black

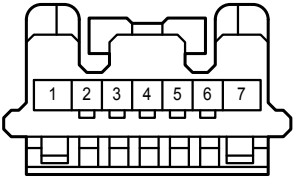


E 9
White



 
E 18
White

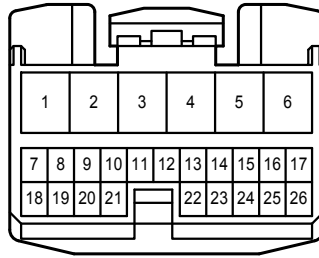


E 20
White

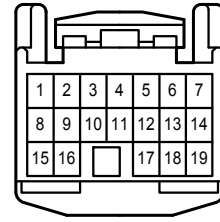 


E 81
Black

 


E 84
White

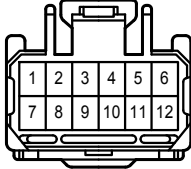 


E 85
White

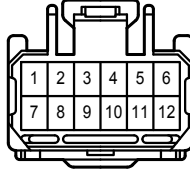 


G 5
White

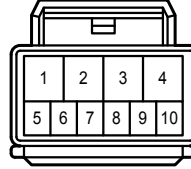 

H 5
White

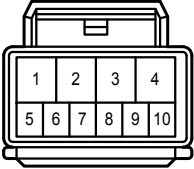 

I 4
White

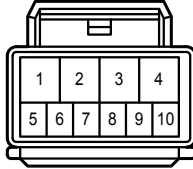 

J 4
White



K 8
White



 
K 11
White



K 18
White



K 21
White

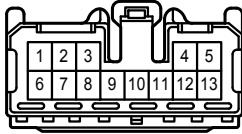


L 4
White




L 7
White



 
L 10
White

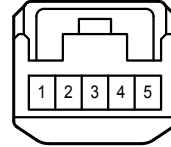


R 8
Black

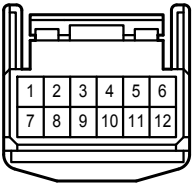 


R 10
Gray

 


S 10
White

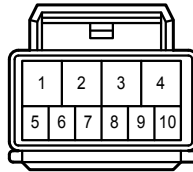 


3A
White

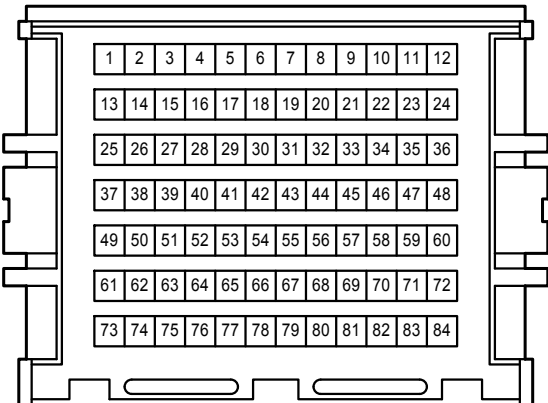 


3B
White

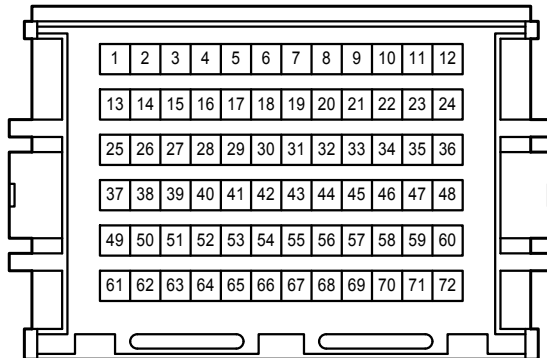 


4A
White

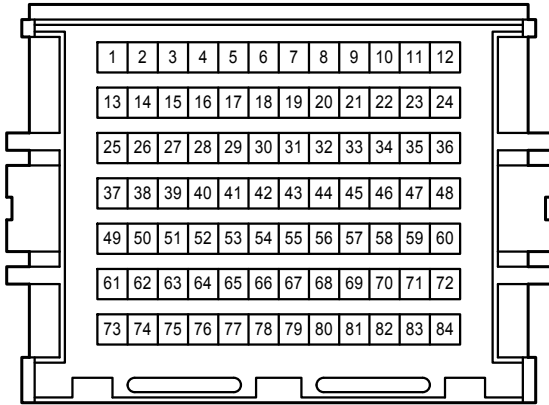 


4B
White

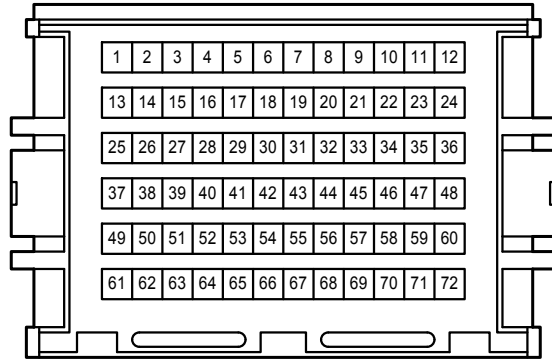 


1A
White

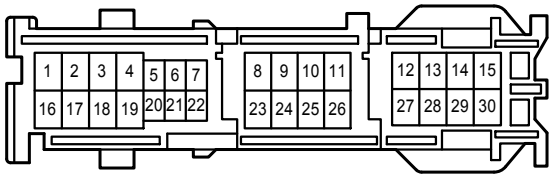 


1B
White

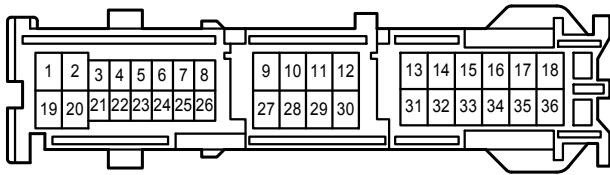 


1C
White

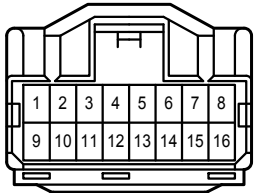 


1D
White

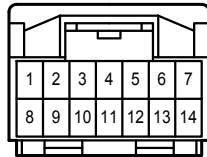 

1E
White

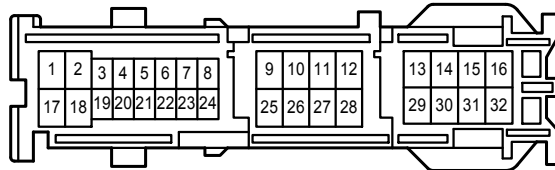 


1H
White

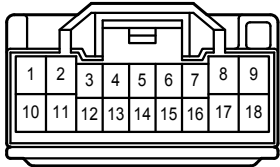 

1K
White



 
1S
White

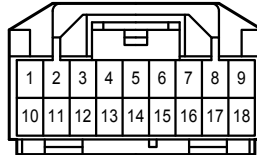

1T
White




 EK2
White

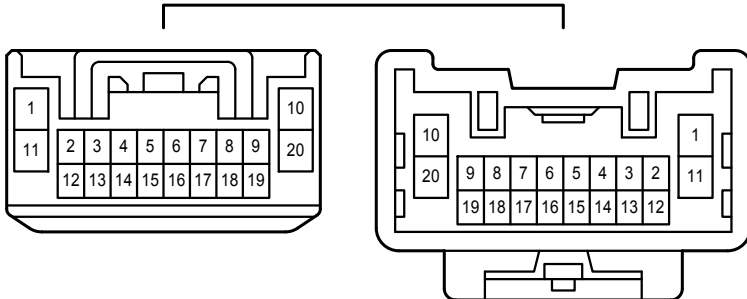


Wireless Door Lock Control <w/o Entry & Start System , RHD>

 
EL1
White

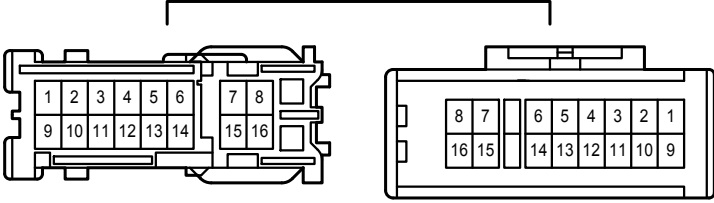


EL2
White

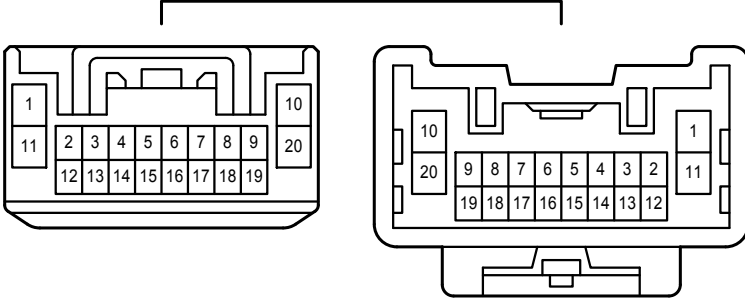 


GE1
White

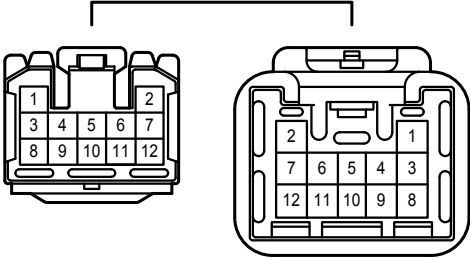 


GE2
White

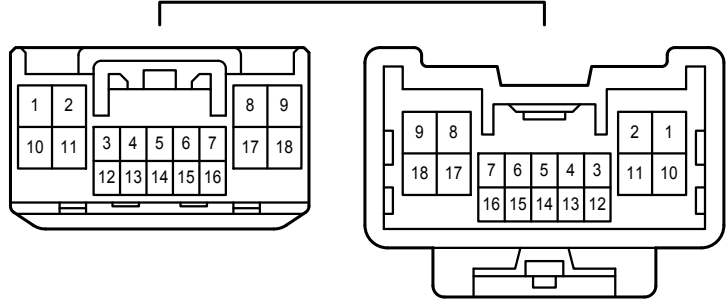 

HE1
White

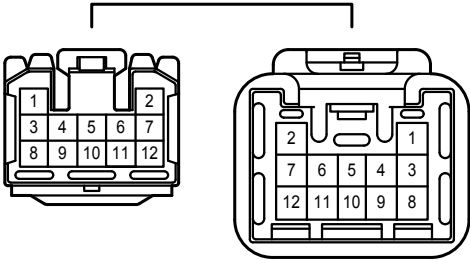 


HE2
White

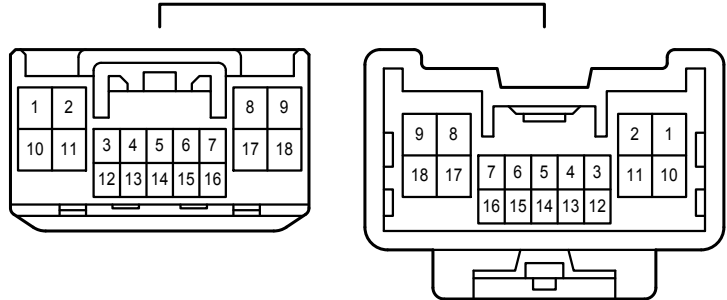 


Wireless Door Lock Control <w/o Entry & Start System , RHD>

 IL1
White

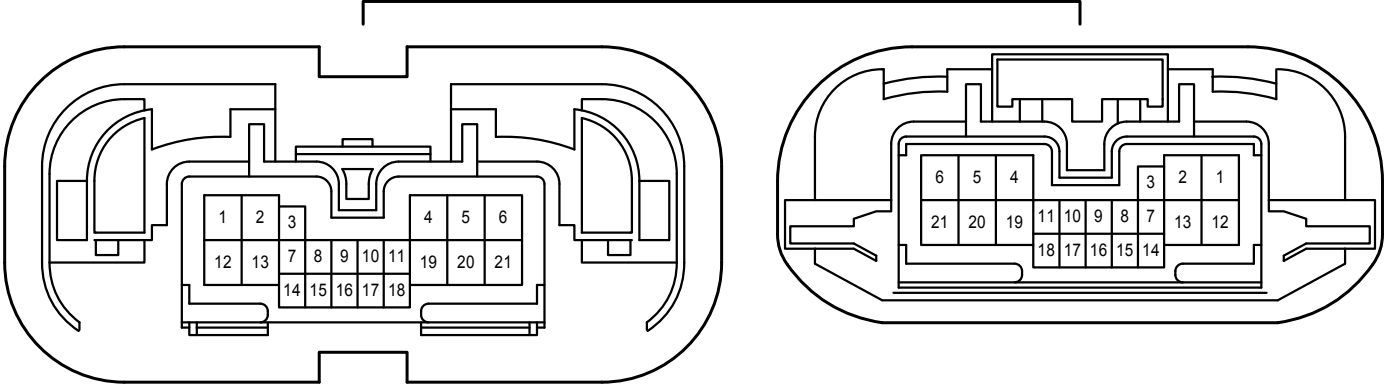

JK1
White

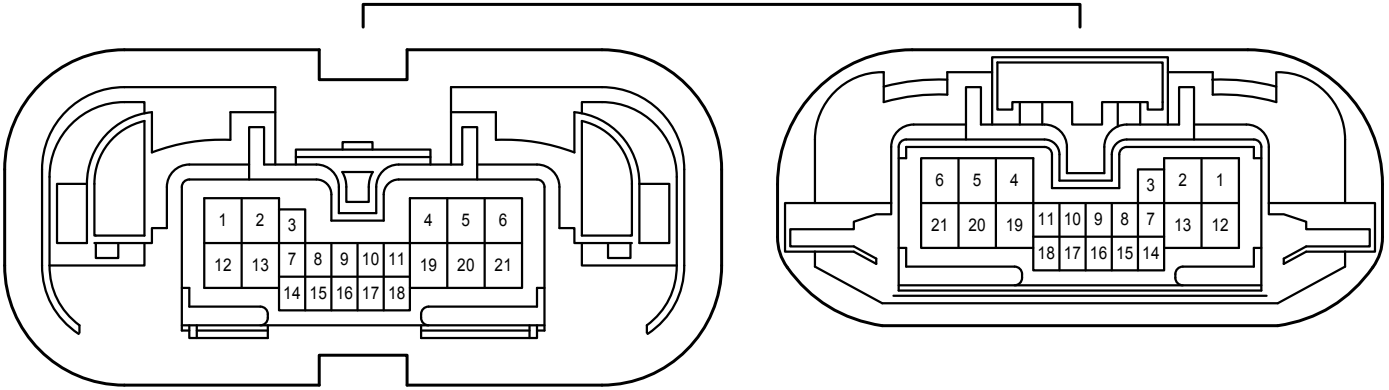 

SL1
White

