


SEAT HEATER

DESCRIPTION

- The seat heater for the driver and front passenger seats are provided as optional equipment on the cold area specification LHD models.
- By operating the dial-type seat heater control switch, which is located on the center console, the temperature can be controlled steplessly within the range of 30°C to 42°C (86°F to 108°F).
- Whether the seat heater is ON or OFF can be determined by illuminating condition of the indicator light of the seat heater control switch.

► System Diagram ◀

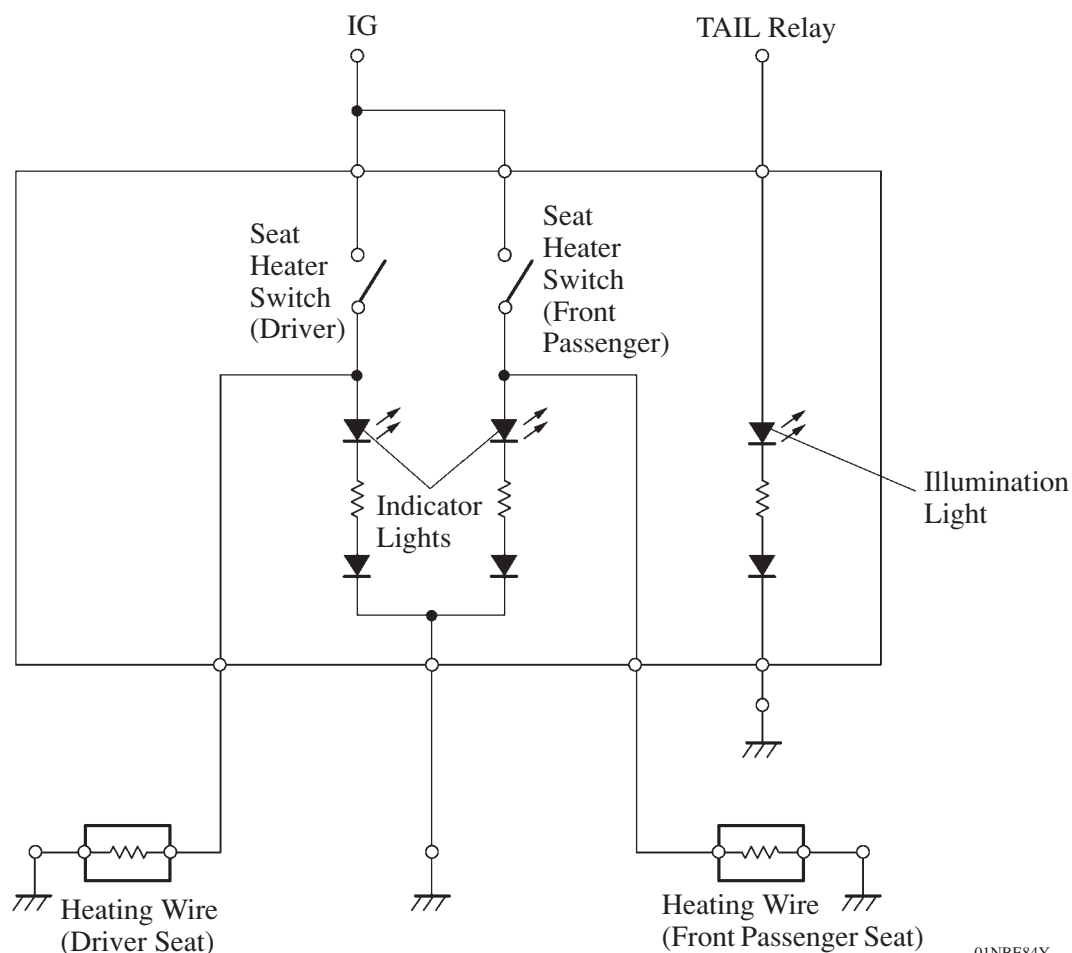

BE

01NBE84Y