

## ■ SEAT BELT

### 1. General

- The following types of seat belts are provided.

Seat		Seat Belt Type	Remarks
Driver and Front Passenger		3-Point ELR* <sup>1</sup>	Electrical Sensing Type Pretensioner & Force Limiter
Rear	LH and RH	3-Point ELR* <sup>1</sup> & ALR* <sup>2</sup>	—
	Center	3-Point ELR* <sup>1</sup>	—

\*1: Emergency Locking Retractor

\*2: Automatic Locking Retractor

- The seat belt for the rear center seat and its storage box have been provided on the ceiling to ensure the ease of use of the rear seats.




01NBO34Y

## 2. Pretensioner and Force Limiter

In accordance with the ignition signal from the airbag sensor assembly, the seat belt pretensioner activates simultaneously with the deployment of SRS airbag for the driver, front passenger and knee.

In the beginning of the collision if the tension of the seat belt applied to the occupant reaches a predetermined level, the force limiter activates to control the force.

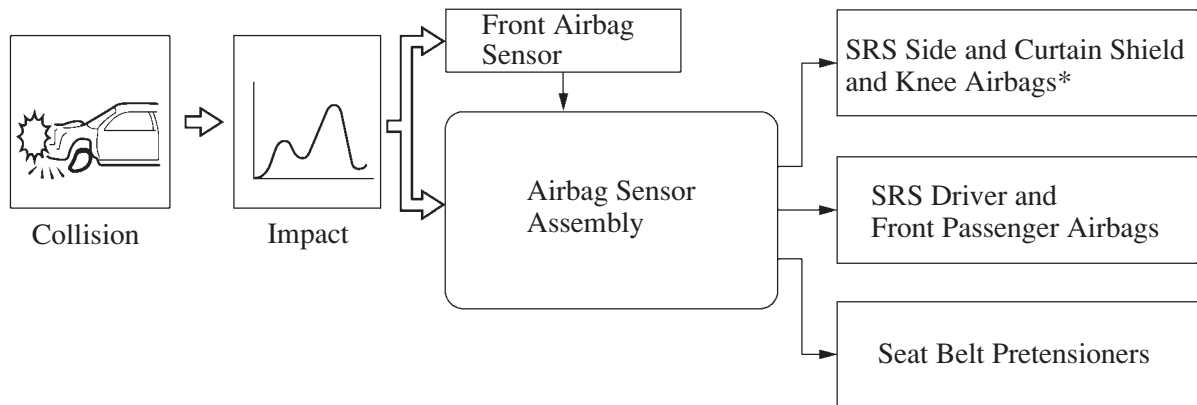

\*: Only for Europe Models

242B003

