


## ■ CONSTRUCTION AND OPERATION

### 1. Intrusion Sensor

#### General

- The intrusion sensor, which is linked to the auto alarm system, sets automatically when the system transfers to the armed state (and the setting of the auto alarm is completed). When the intrusion sensor detects a moving object in the vehicle interior, the system transfers to the alarm state. Then, the system sounds the horn intermittently and blinks the hazard warning light for approximately 27.5 seconds and performs a forced locking operation.
- The operation of the intrusion sensor can be canceled temporarily by pressing the intrusion sensor OFF switch, which is provided on the overhead console. (It will set automatically the next time the setting of the auto alarm is completed.) The security indicator light blinks with short intervals during the intrusion sensor OFF mode.

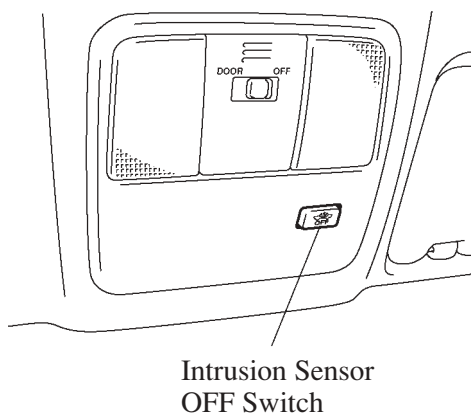

01NBE108Y

### 2. Self-power Siren

During a normal operation, this siren sounds an alarm in accordance with the operation signal from the security ECU. Because this siren has an internal battery, it can independently sound an alarm even if the vehicle's battery terminals are disconnected or if the wiring harnesses that are related to the system are cut.