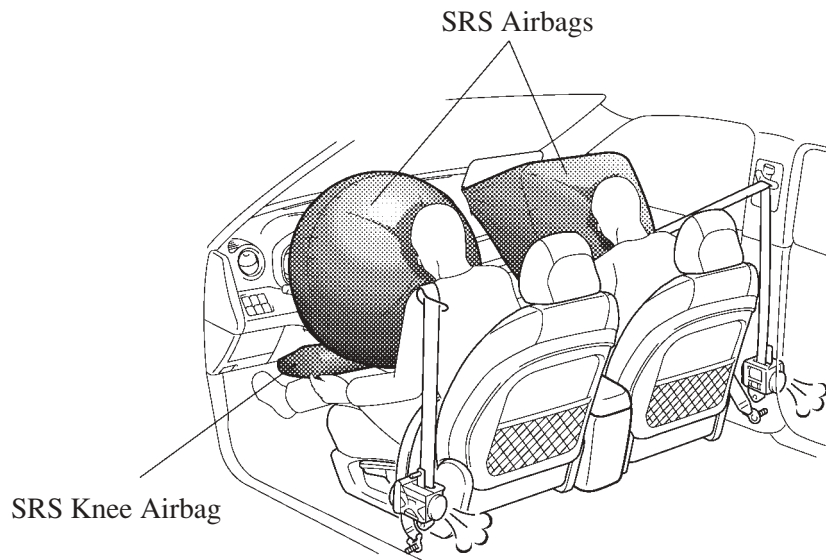



SAFETY

SRS Airbag System

- The dual-stage SRS (Supplemental Restraint System) airbags are standard equipment for the driver and front passenger seats on all models.
In the event of a severe frontal collision, the airbags function with the seat belts to help reduce the impact on the driver's and front passenger's heads and chests.
- The SRS knee airbag is used for the driver seat. The SRS knee airbag is positioned in the lower part of the instrument panel on driver's side to help ensure good protection of the driver in the event of a frontal collision.
- The SRS side airbags (driver and front passenger seats) which help reduce side impacts are used.
- The SRS curtain shield airbags (front and rear seats) which help reduce side impacts are used.
- The provision of SRS airbags, SRS knee airbags, SRS side airbags and SRS curtain shield airbags varies by destinations. For details, see the Equipment List starting on [page MO-42](#) or the SRS Airbag System on [page BE-130](#).

MO

01NBE07Y

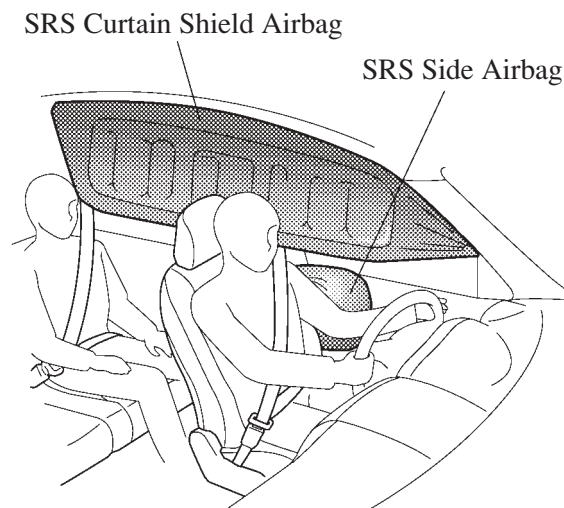

01NBE06Y