

DOOR LOCK CONTROL SYSTEM

■ DESCRIPTION

- The door lock control system is provided as standard equipment on all models.
- This system is controlled by the main body ECU. The main body ECU outputs signals to the respective door lock motors.
- The door lock system in the new model has the following functions:


Function	Outline
Manual Lock and Unlock	This function can lock or unlock all doors by the door lock control switch operation.
Key-linked Lock and Unlock* ¹	This function, which is linked with the key cylinder, can lock or unlock all the doors when a lock or unlock operation is effected.
Key Confine Prevention	When the key is inserted in the ignition key cylinder with the driver's door open and if you perform the door lock operation, all the doors will be unlocked.
Double Locking System* ²	<ul style="list-style-type: none"> • The double locking system also prevents the doors from being opened through the operation of the inside door knobs. Thus, the doors cannot be opened either from the inside or the outside of the vehicle. • To lock the doors with this system, press the transmitter's lock button, press it again within 5 seconds. Then, the double locking system is activated. However, as an emergency unlocking maneuver, only the driver's door can be unlocked with a key. <p>CAUTION: Never activate the double locking system when there are people in the vehicle because the doors cannot be opened from the inside of the vehicle. If locking the doors by accident, press "unlock" button of the transmitter.</p>
Entry Unlock Function * ³ (see page BE-113)	With this function, the user can unlock the driver or front passenger or back door by keeping a key in his/her possession and touching the outside door handle.
Entry Lock Function * ³ (see page BE-114)	With this function, the user can lock all doors by keeping a key in his/her possession and pressing the lock button that is provided on the outside door handle.
Door Lock with Transmitter Function (see page BE-86)	Pressing the door lock button of the transmitter locks all doors.
Door Unlock with Transmitter Function (see page BE-86)	Pressing the door unlock button of the transmitter unlocks all doors.

*¹: On the models with the double locking system, when the double locking system is operating, all doors can be locked through the key-linked function, but they cannot be unlocked. Only the driver's door can be unlocked by the key.

*²: This system is optional equipment on the RHD models for Europe.

*³: Models with Smart Entry & Start System.


► System Diagram ◀

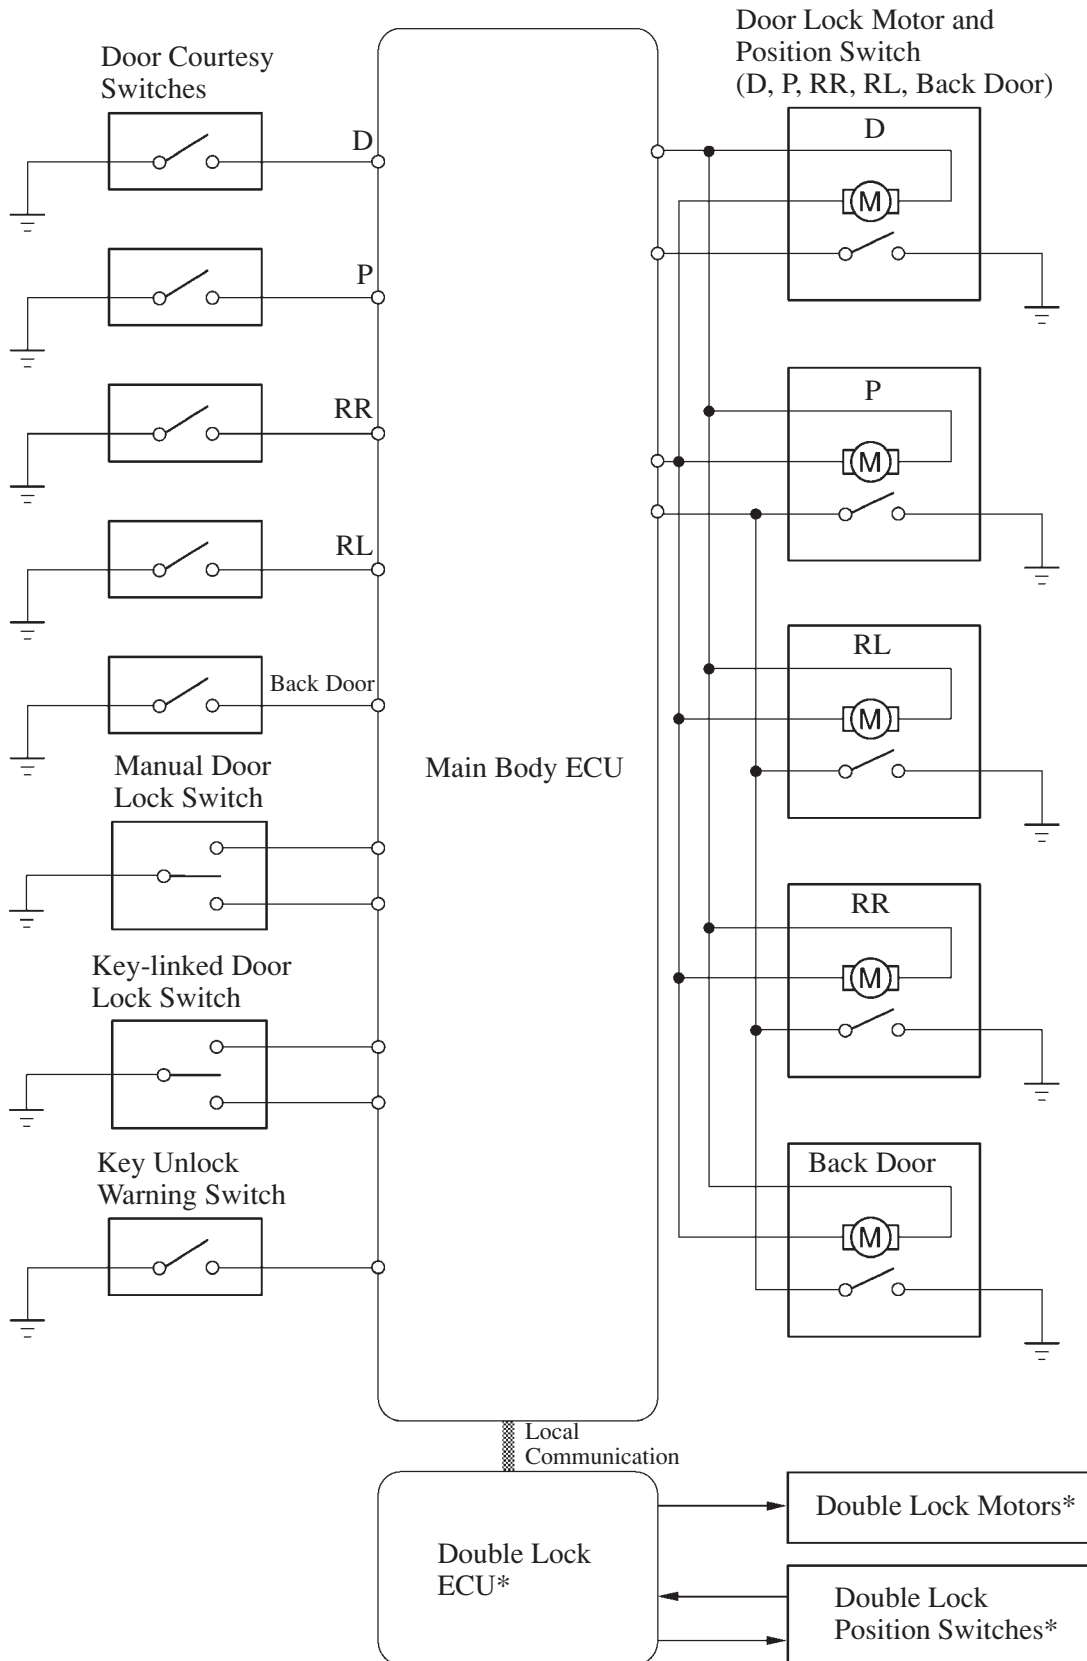

*: Models with Double Locking System

Models without Smart Entry & Smart System

01NBE98Y

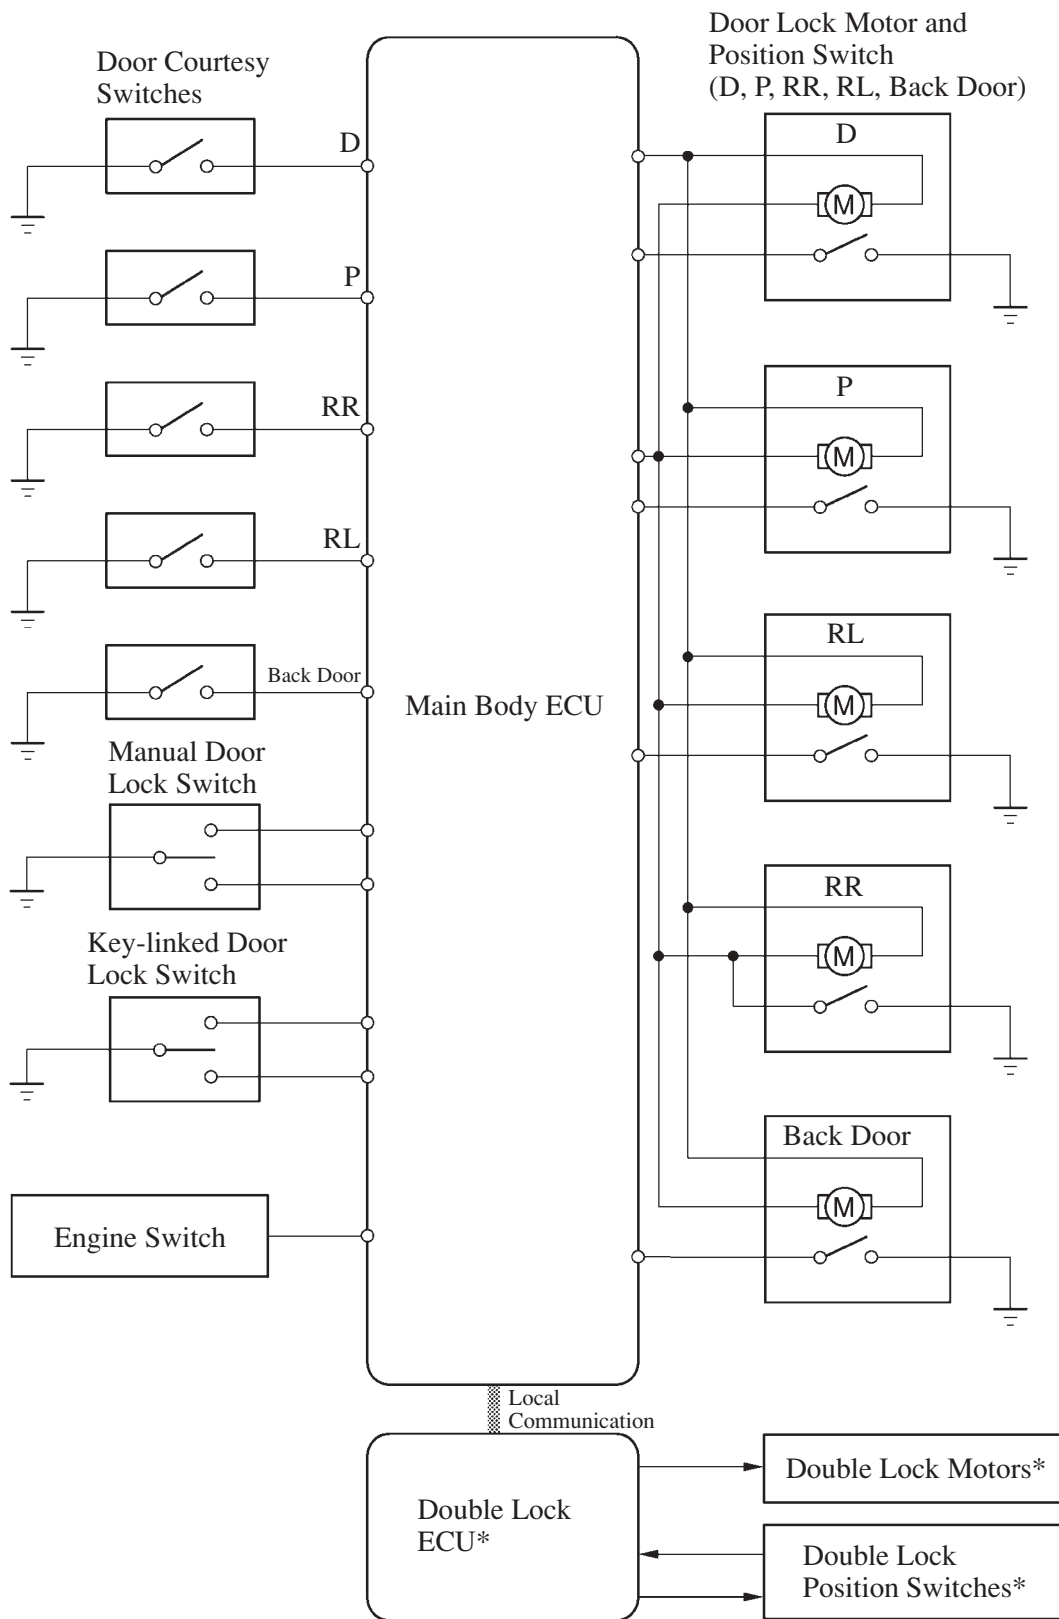

*: Models with Double Locking System

01NBE131Y

Models with Smart Entry & Smart System