


POWER WINDOW SYSTEM

■ DESCRIPTION

- The power window system is standard equipment on the new model.
- The power window system has the following functions:

Function	Outline
Manual-up-and-down Function	The manual-up-and-down function causes the window to open or close while the power window switch is being pulled halfway up or pushed halfway down. The window stops as soon as the switch is released.
Driver's Door One-touch Auto Up-and-down Function	The driver's door one-touch auto up-and-down function is used in the driver's window. The driver's one-touch auto up-and-down function automatically opens or closes the driver's door window fully.
Key Off Operation	This function makes it possible to operate the power window for approximately 43 seconds after the power source mode is selected to OFF, if the driver's door and front passenger's door are not opened.
Jam Protection Function	The jam protection function automatically stops the power window and moves it downward if a foreign object gets jammed in the driver's door window during one-touch auto-up operation or manual-up operation.
Remote Control Function	The up-and-down operations of the front passenger's door window and the rear door windows can be controlled by operating the power window master switch.

► System Diagram ◀

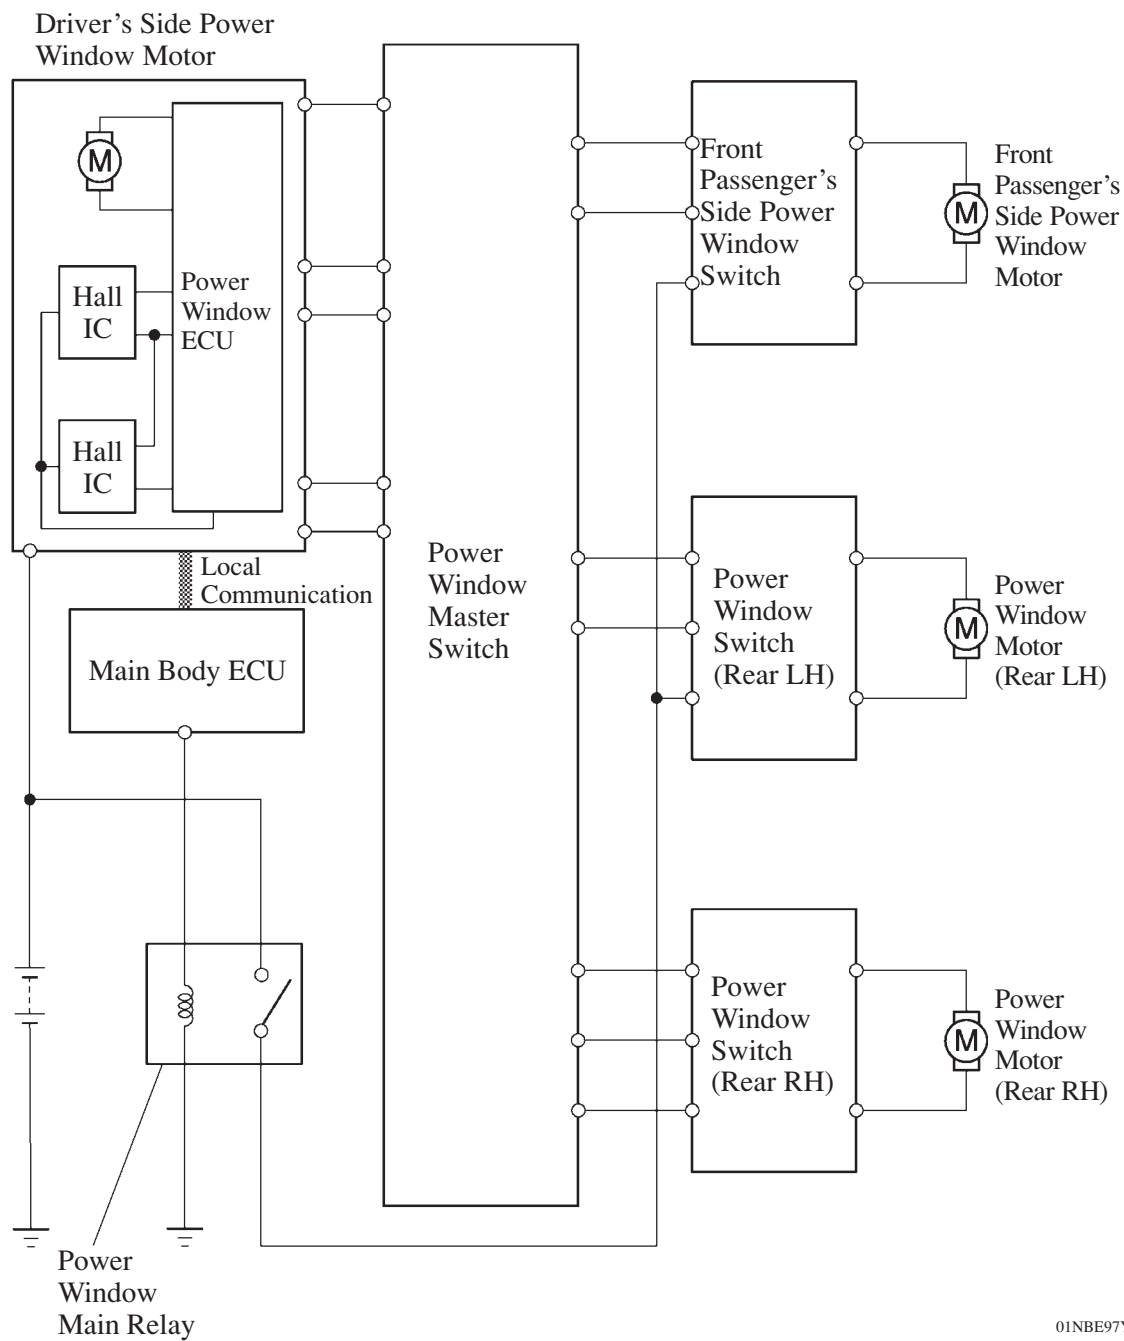

01NBE97Y