


## ■ DIAGNOSIS

### 1. General

If the airbag sensor assembly detects a malfunction in the SRS airbag system, the airbag sensor assembly stores the malfunction data in memory, in addition to illuminating the SRS warning light.

- The airbag sensor assembly outputs malfunction data, 5-digit DTCs (Diagnostic Trouble Codes) or 2-digit DTCs, to the intelligent tester II or the SRS warning light.

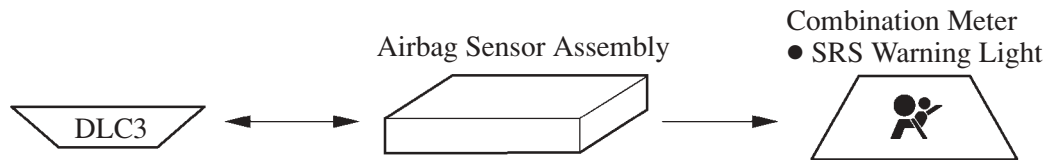

259ESW31

### 2. DTC of SRS Airbag System

There are 2 types of DTCs of the SRS airbag system: 5-digit and 2-digit.

- The 5-digit DTC can be read by connecting an Intelligent Tester II to the DLC3 terminal.
- The 2-digit DTC can be read through the blinking of the SRS warning light with the SST (09843-18040) connected to the TC and CG terminals of the DLC3.
- If the SRS airbag deploys, the airbag sensor assembly will turn ON the SRS warning light. However, different from the ordinary diagnosis function, a DTC will not be memorized. The SRS warning light can be turned OFF only by changing the airbag sensor assembly to a new one.