


■ SYSTEM OPERATION

1. Basic Operation

This system activates as described in the diagram below when one of items places in the respective state.

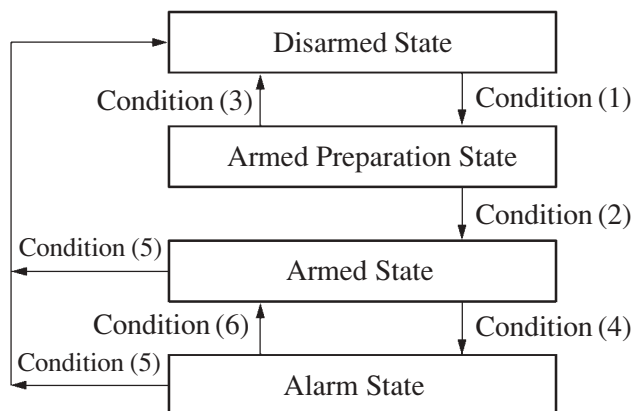

187BE40

Condition	Item
Condition (1)	<ul style="list-style-type: none"> ● The ignition key is not inserted in the ignition key cylinder*¹ ● Ignition*¹(engine*²) switch is OFF. ● When the doors, engine hood, and back door are all closed, the transmitter or entry lock function*² is used to lock all doors.
Condition (2)	When the doors, engine hood, and back door are all closed and locked, and 30 seconds have elapsed.
Condition (3)	<ul style="list-style-type: none"> ● When one of the doors, engine hood, or back door is changed from “close” to “open”. ● When one of the doors, engine hood, or back door is changed from “lock” to “unlock”. ● When the ignition key is inserted in the ignition key cylinder*¹. ● When the engine switch is pushed*². ● When a terminal is disconnected from the battery and reconnected.
Condition (4)	<ul style="list-style-type: none"> ● Any door, engine hood, or back door is opened. ● Any door is changed from “lock” to “unlock” through an operation other than the transmitter or the entry unlock function*². ● A terminal is disconnected from the battery and reconnected. ● The intrusion sensor has detected an intruder.
Condition (5)	<ul style="list-style-type: none"> ● The transmitter*¹ or entry unlock function*² is used to unlock the doors. ● After the power source mode has been changed to IG-ON, 2 seconds have elapsed.
Condition (6)	After approximately 27.5 seconds of the alarm time have elapsed.

*¹: Models without Smart Entry & Start System

*²: Models with Smart Entry & Start System

2. Forced Door Lock Operation

When the system starts the alarm state, and one of the doors is subsequently unlocked, the forced door lock operation forcefully outputs a door lock signal to prevent intrusion into the vehicle. This operation becomes activated when all the starting conditions listed below have been met, and stops when one of the stopping conditions occurs.

Condition	Item
Starting Condition	The theft deterrent system is in the alarm state.
	There is no key inserted in the ignition key cylinder.
	If one of the doors is unlocked.
Stopping Condition	All doors are locked.
	The warning ends.
	The ignition key is inserted in the ignition key cylinder.