
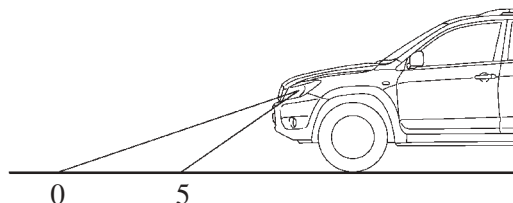


■ MANUAL HEADLIGHT BEAM LEVEL CONTROL SYSTEM

- The manual headlight beam level control system is standard equipment on the models for Europe and available as optional equipment on the models for the G.C.C. countries.
- This system keeps the beam of the headlight adjusted to the appropriate level in accordance with the number (weight) of passengers and volume of luggage. The headlight beam level can be adjusted from 0 to 5 by operating the headlight beam level control switch.

Headlight Beam Level
Control Switch

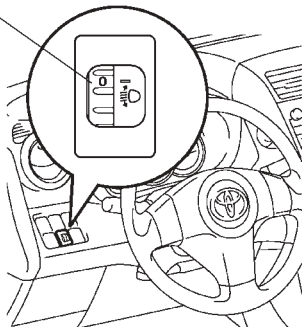

01NBE113Y