

EQUIPMENT

Smart Entry & Start System

Smart entry & start system mainly consists of the wireless door lock remote control function, engine immobilizer function, start function and entry function.


This system is available as optional equipment on the high grade for the Europe.

MO

Start Function

In the start function, the power source mode can be switched between OFF, ACC, and IG-ON modes by pushing the engine switch when the driver carries the key.

In addition, when the driver carries the key, the driver can start the engine by pushing the engine switch while depressing the brake pedal (the automatic transaxle models) or the clutch pedal (the manual transaxle models).

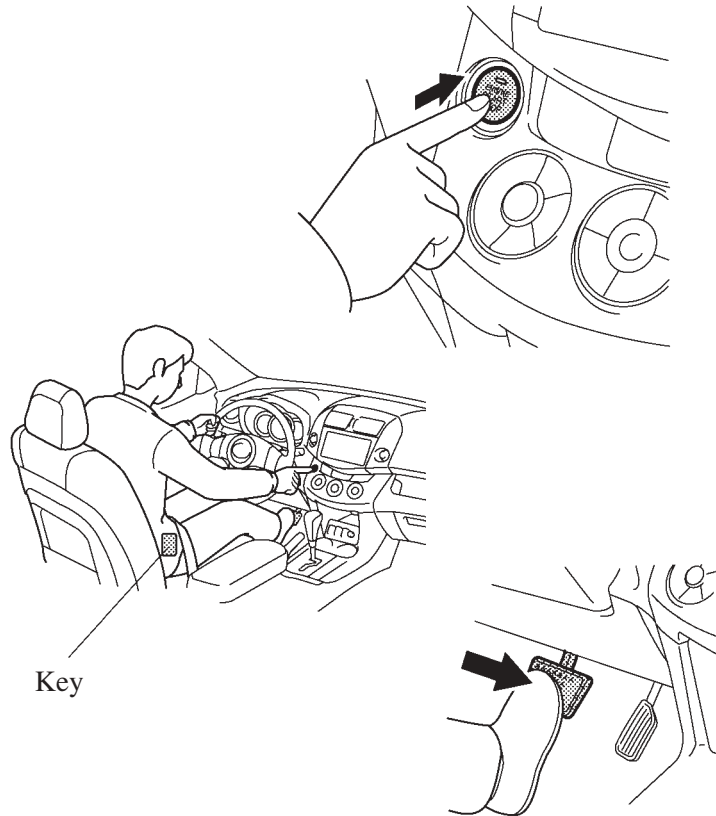

A/T Models: Depressing the Brake Pedal
M/T Models: Depressing the Clutch Pedal

Entry Function

In the entry function, the following functions can be operated when the driver carries the key:

- The engine switch illumination and room lights come on if the driver gets close to the vehicle. (Entry Illumination)
- The doors and back door unlock if the door outside handle or back door outside handle is gripped. (Entry Unlock)
- The doors and back door lock if the lock switch on the outside door handle or back door outside handle is pushed. (Entry Lock)

