



**TOYOTA**  
*Customization  
Installation Instructions  
January 25, 2006*

Title:  
**BODYSIDE MOULDINGS**

Models:  
**2006 RAV4**

CIT0280


**Supplies Needed:**

Isopropyl Alcohol (Rubbing Alcohol)  
Masking Tape – 19mm (3/4") Width

Clean Lint Free Wiping Cloth  
Measuring Device

**\*\* Note \*\* To ensure maximum adhesive bond, the Vehicle surface and the molding Temperature should be 25C (80F)**

- 1.Lay out Driver Side and Passenger Side molding strips. Place the longest molding strip towards the front and shortest strip towards the rear.
- 2.Make (3) three measurements above the vehicle's lower body feature as shown in the diagram below, and mark position 19cm (7.5")
- 3.Apply 19mm (3/4") masking tape guide directly over the (3) measurements from the front fender to the rear wheel well as shown in the diagram below
- 4.Measure 7mm (1/4") on each side of door gap and **place a mark on the masking tape**. This is your starting point for applying the molding strips.
- 5.Clean above masking tape guide with a wax and grease remover and then wipe the area again with an isopropyl alcohol/water mixture (50/50).
- 6.Remove 10 cm (4") of red adhesive liner from **SQUARE** end of front molding strip. **Begin at the 7mm (1/4") marking** and gently apply molding to vehicle **above masking tape guide**. Continue removing red adhesive liner while applying molding with a rolling motion (Do not touch adhesive with fingers). Repeat with rear molding strip.
- 7.After ensuring both molding strips have been correctly placed, firmly **rub down the moldings** with a cloth or molding roller to obtain maximum adhesive bond. Press hard with a blunt object all ends.
- 8.Repeat steps 1-8 for other side.

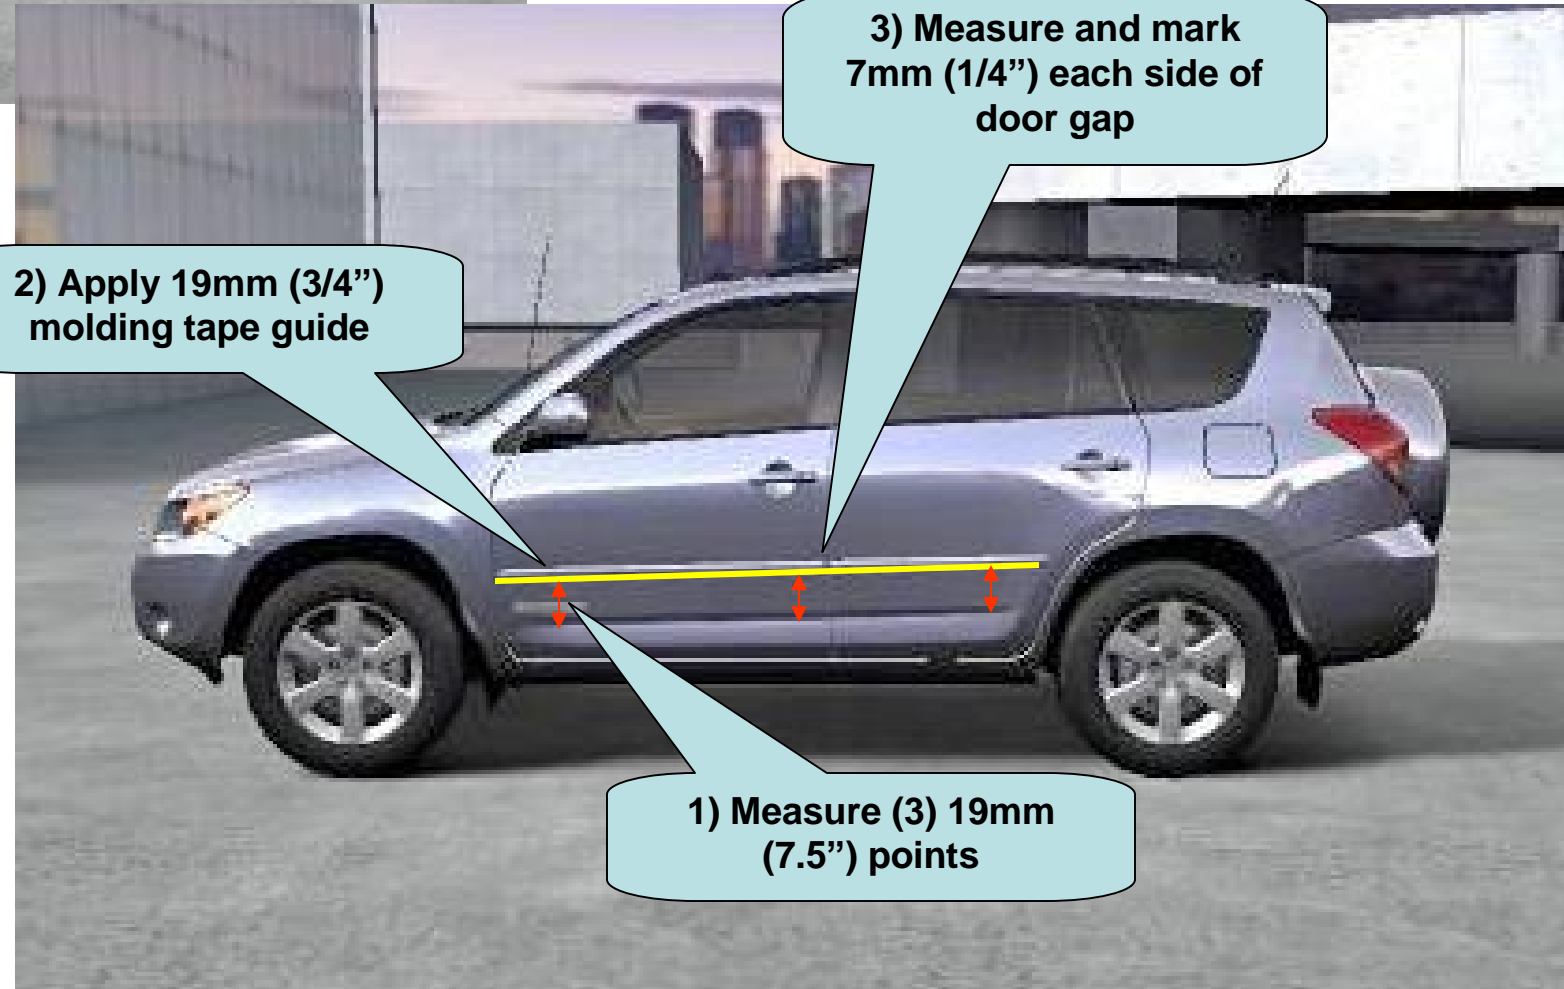

**2) Apply 19mm (3/4")  
molding tape guide**

**3) Measure and mark  
7mm (1/4") each side of  
door gap**

**1) Measure (3) 19mm  
(7.5") points**